

PocketDISH AV700E 💿 Quick Reference Guide 💿 PocketDISH AV700E 💿 Quick Reference Guide O PocketDISH AV700E O Quick Reference Guide O PocketDISH AV700E O



Use these buttons to navigate

Help

Done

the screens displayed by the

receiver

(2) Select recordings then select Send video

sh My Recordin



 \times

 \bigcirc

Note: PocketDISH comes with demo videos.

Highlight the DISH Network folder and press ON to view the video files.

Select the desired video file. 0



Set Auto (Best playback size with respect to source), Maximized image (scaled playback with respect to source, some clipping might occur), Full picture format (playback in original size, no clipping or scaling).

Normal speed (default) or slow motion (1/2, 1/4 or 1/8). Built-in speaker on/off: to switch the speaker on or off

(headset only). Set a bookmark manually. You can always start future playback from this point forward.

Save the current scene as a thumbnail for presentation in the video browser.

PlayMode, Sound and LCD Brightness, and Video OSD

CONNECT A COMPUTER OR A USB MASS STORAGE DEVICE

Connect the

USB cable

AV700E

The "USB cable attached" pop-up displays PocketDISH keys are temporarily disabled

(5) The PocketDISH pop-up displays

(2) Turn on the DVR and PocketDISH

0

-

USB cable attached

(1) Connect to power

USB-B

(🎧 56 🔜 05 28)

* visit www.pocketdish.com for list of compatible receivers



TRANSFER AUDIO/VIDEO FILES

02:30 02:17 00:30

01:00 01:55 02:06







d you like to manage its conten

Manage

(3) Press SELECT when done

Add Cancel Help



VIEW A PHOTO OR SLIDESHOW



Ö

 (\cdot)

(🗞) DPD 2'00" 10 🔳 🔳 🎧 75 📼 20:05

🚺 ⊳ 🎧 75 📟 20

Built-in speaker o

Set bookmar

Discover_Magazin_1