

## To Manually Unpair 40.0 Remote Control

1. Press and hold the SAT mode button until all mode buttons light up
2. Press and hold RECALL and 0 at the same time for 3 seconds
3. Press SEARCH
4. Press VOL +
5. Press STOP

If successful, you will hear three descending tones. Wait 5 seconds for tone.

## To Manually Unpair 50.0, 52.0, and 54.0 Remote Control

1. Press the System info button on the front panel of the Hopper.
2. Press and hold the SAT mode button until all mode lights on the top of the remote light up then let go of the button.
3. Press and hold HOME and GUIDE at the same time for about 10 seconds till you hear it unpair, three descending tones.