 




CH-SRD 600R/H System

5.1 Channel Decoder + Surround Headphones

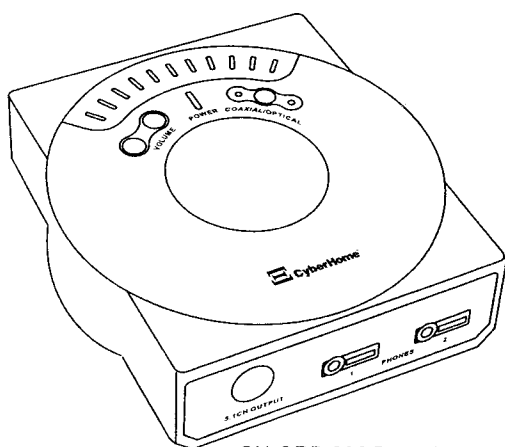

CH-SRD 600 Decoder



CH-HPS 10 Surround Sound HeadPhones

***CH-SRD 600R/H System works with Portable and Home DVD Players!
Works with XBOX and PlayStation 2 Game Consoles for Super Audio¹
Dual Surround Sound Headphone Outputs for Two Listeners or Players***

***Optical & CoAxial Digital Audio Inputs
Volume Control, Power LED, and Status LED for Digital Audio Inputs***

¹ Xbox and Playstation 2 requires additional digital input cable. XBOX is a registered trademark of Microsoft Corporation. PlayStation is a registered trademark of Sony Corporation. All other trademarks are property of their respective entities. Copyright 2004, CyberHome Entertainment. All Rights Reserved.

CH-SRD 600R/H User Manual - Controls

1 Coaxial In - for use with systems supporting a Digital Coaxial Output. A coaxial cable is included with your unit.

2 Optical In - for use with systems supporting a Digital Optical Output. An optical cable is included with your unit.

3 DC In - used to connect the AC Adapter / Charger unit.

4 Power Selector Switch - use to select power source: OFF, DC 5V or Battery*

 
5 Volume Control - increases (+) or decreases (-) volume to your headset.

6 Power - indicates power mode: On, Off or Charging.*


7 Optical / Coaxial - use this push-button switch to toggle between Optical or Coaxial input mode. An LED indicator will show which input is selected.

8 5.1CH Output - used to connect to other devices such as amplifiers and receivers that have this type of input capability.


9 Phones - attach your CyberHome HPS-10 Surround Sound headphones to any of these ports. Up to two headsets are supported.

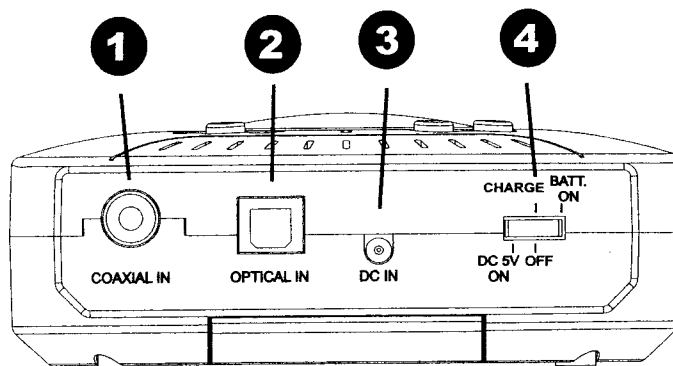

REAR VIEW

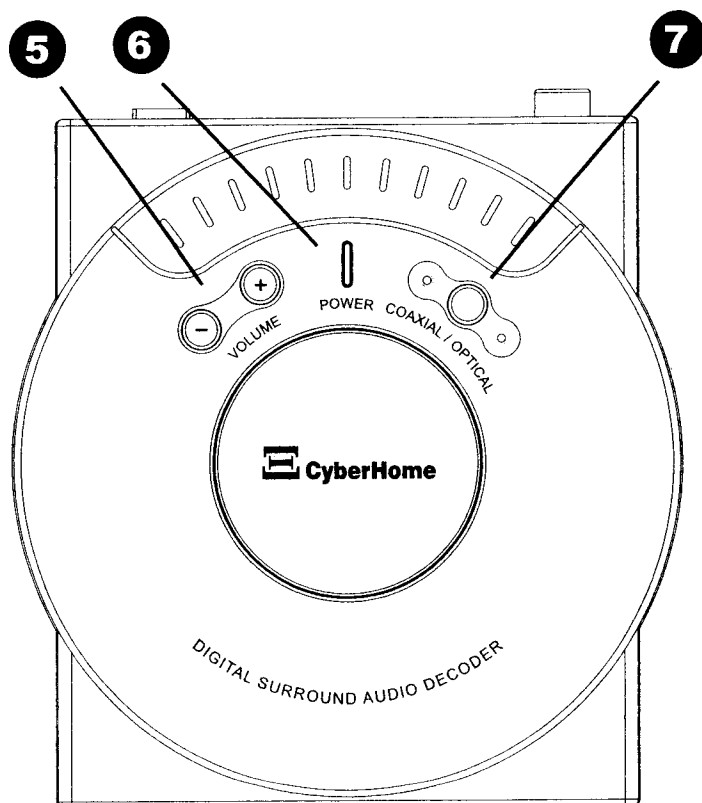 


TOP VIEW

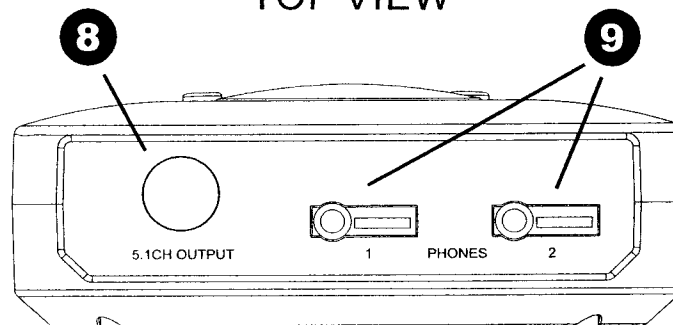 

FRONT VIEW

*Your unit is equipped with a Lithium-Ion battery. Refer to Powering Up on page 4.

 CH-SRD 600R/H User Manual - Quick Start

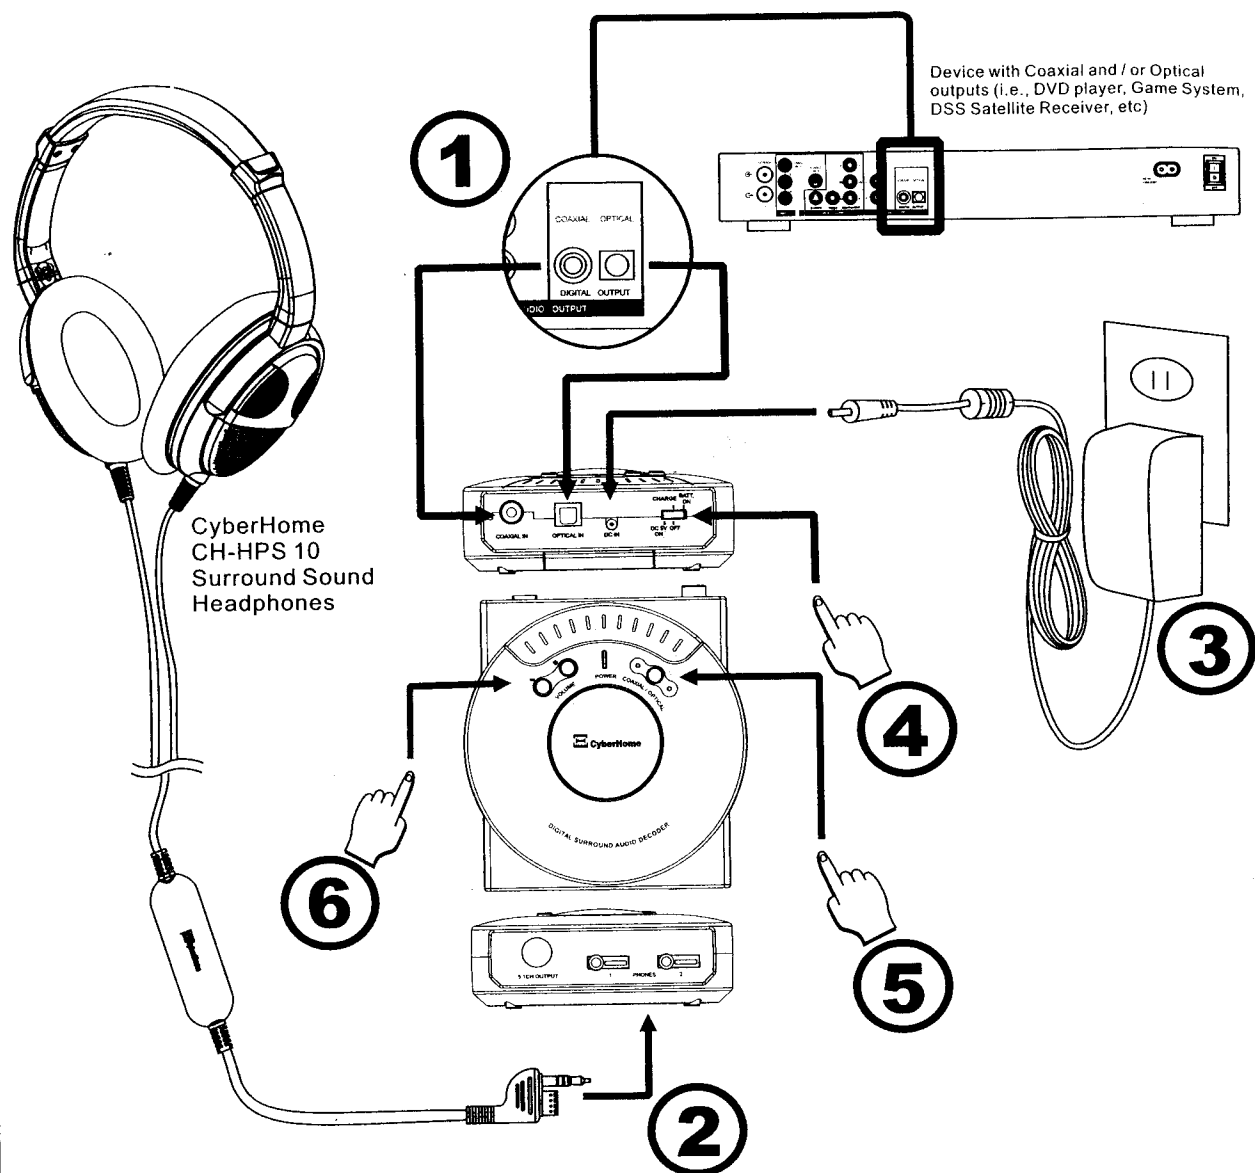

Quick Start

- 1** Connect your input device to the decoder box coaxial and / or optical inputs
- 2** Connect the CyberHome CH-HPS 10 Surround Sound headphones to decoder box output port
- 3** Charge your unit's LI-Ion battery by attaching the AC/DC Adapter / Charger to the decoder box (See Note* below).
- 4** Select power source on decoder unit by selecting DC 5V ON or BATT ON.
- 5** Select Coaxial or Optical according to your input connection in step 1.
- 6** Adjust audio to your desired setting.

*Note: You may skip this step and go to step 4, but select DC 5V ON as power source. Remember to charge the battery overnight prior to selecting BATT ON the first time. See instructions on next page.

CH-SRD 600R/H User Manual - Powering Up

Your CH-SRD 600 decoder unit may be powered two ways: 1) by your AC/DC adapter or 2) by battery (LI-Ion, included). Refer to the following table for instructions on how to power up your unit:

CHARGER STATE	POWER SWITCH POSITION		
	DC 5V ON	CHARGE	BATT. ON
AC STATE	DC 5V ON	OFF	
Plugged into Decoder	Unit is Using AC Power (Power LED: RED)	Unit is Charging Battery	Unit is Using Battery Power (Power LED: GREEN)
Unplugged	OFF	OFF	Unit is Using Battery Power (Power LED: GREEN)

USING AC POWER

Plug your AC/DC Adapter/Charger into wall outlet. Connect AC/DC Adapter/Charger jack to DC in. Set Power Switch to DC 5V ON , the decoder is now using AC/DC power. Power LED: RED.

CHARGING THE BATTERY



Plug your AC/DC Adapter/Charger into wall outlet. Connect AC/DC Adapter/Charger jack to DC in. Set Power Switch to CHARGE , the decoder is now charging the battery. Power LED: RED. Power LED will turn GREEN once the battery is fully charged.

USING BATTERY POWER

Set Power Switch to BATT , the decoder is now running on battery power. Power LED: GREEN. Unit may be switched to battery mode regardless of whether AC/DC Adapter/Charger is attached.

POWERING OFF

Set Power Switch to OFF , unplug AC/DC Adapter/Charger from decoder and from wall outlet. NOTE: Unit will continue charging the battery unless AC/DC Adapter/Charger is unplugged from decoder or until battery is removed from decoder unit.

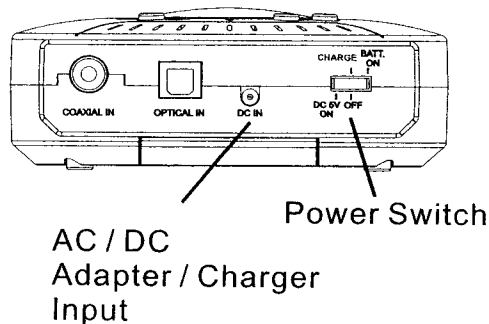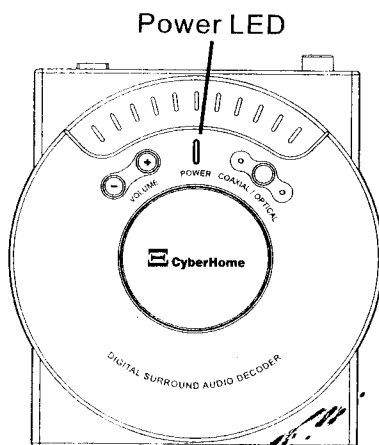


IMPORTANT

To maximize your battery's life, please charge the battery overnight prior to its initial use.


Battery Installation

Installation & removal of the internal battery pack is easily accomplished. Follow these steps to access the battery compartment.


- 1 Turn the decoder unit upside down as shown below. Press the tab to disengage the battery door lock.

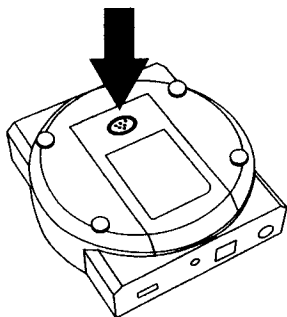


- 2 Push the battery door downward while pressing the battery door lock.

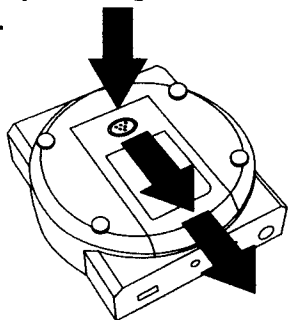

- 3 Remove the battery door. Insert battery pack as shown on arrows (1 and 2). Replace battery door.

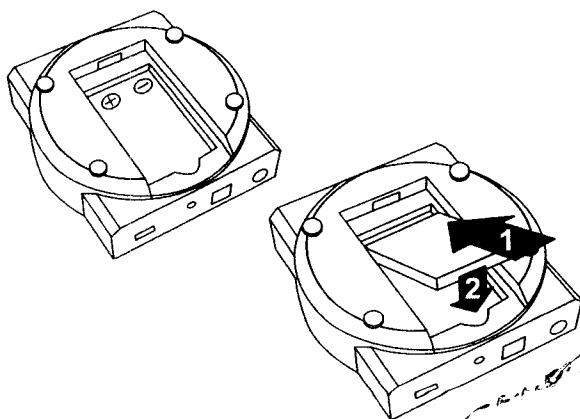

Important Safety Instructions

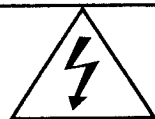


CAUTION

RISK OF ELECTRIC SHOCK
DO NOT OPEN




CAUTION: TO REDUCE THE RISK OF ELECTRIC SHOCK, DO NOT REMOVE THE COVER (OR BACK). NO USER-SERVICEABLE PARTS INSIDE. REFER TO QUALIFIED SERVICE PERSONNEL FOR SERVICING.

 WARNING: TO REDUCE THE RISK OF FIRE, OR ELECTRIC SHOCK, DO NOT EXPOSE THIS BATTERY TO RAIN OR MOISTURE. DO NOT SHORT THE CONNECTION PINS. DO NOT PUNCTURE THE BATTERY CASE.

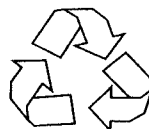

 Li-ion Battery
Must Be Disposed
Of Properly

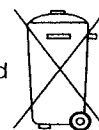

Read these battery instructions carefully before using the battery.

Charging

- The battery should be charged within the specified temperature of 0~45° C.

Discharging

- The battery should be discharged within the temperature range of -20~60° C.

Storage

- The battery should be stored within the temperature range of -20~50° C.
- Keep the battery terminals clean while storing.

Others

- Do not disassemble the cells and battery.
- Do not use a damaged battery.
- Do not expose the battery to fire, or throw the battery into a fire. This may cause the battery to explode.
- Use the specified charger only.
- Do not touch the battery terminals with metal objects.
- Keep out of reach of children.
- If any electrolyte contacts with your hands or clothes, wash it off thoroughly with water.
- The battery may present a risk of fire or chemical burns if misused.
- The battery model CH-BAT 190/095-L only use for CyberHome 5.1 Channel Decoder, model CH-SRD 600.



Limited Warranty

Warranty

CyberHome warrants this DVD Player and accessories against defects in material or workmanship as follows:

- **LABOR:** If this product is determined to be defective within Three (3) Months of the date of purchase, CyberHome will repair or replace it at no charge. CyberHome reserves the option to repair or replace the product. After the warranty period expires, the customer will be responsible for all labor charges.
- **PARTS:** CyberHome will supply new or rebuilt replacement parts in exchange for defective parts for a period of One (1) Year after the date of purchase. The customer will be responsible for the cost of parts after the warranty period expires.

Additionally, products purchased at the CyberHome Online Store carry a 30-day satisfaction guarantee and may be returned (in original packaging with all accessories included) within 30 days of purchase for a full refund, less shipping charges. Other return/refund terms may be offered by other retailers. Check with your retailer for more information.

Warranty Service

Proof of purchase in the form of a bill of sale or receipted invoice that is evidence that the unit is within the warranty period must be presented to obtain warranty service. This warranty is invalid in the event that the factory-applied serial number has been altered or removed from the product.

Before returning a product for warranty service, you must first receive an RMA (Return Material Authorization) number from a Customer Service Representative at CyberHome, either online at www.cyberhome.com or by phone at 510-824 3993. After the RMA number has been obtained, ship the product to the CyberHome Service Center in its original packaging (or packaging that offers equal protection) with the RMA number clearly visible. A replacement will be shipped after the defective merchandise is received.

The customer is responsible for shipping costs to the Service Center, while CyberHome will cover return shipping to the customer. Service Center Address:

**CyberHome Entertainment Service Center
48455 Fremont Boulevard
Fremont, CA. USA 94538
510-824 3993**

Limitations

This warranty does not cover customer instruction, installation or setup adjustments. This warranty does not cover cosmetic damage or damage due to acts of God, accident, misuse, abuse, negligence, commercial use or modification of any part of the product. This warranty does not cover damage due to improper operation or maintenance, connection to improper voltage supply or attempted repair by anyone other than a facility authorized by CyberHome to service this product. This warranty does not cover products sold AS IS or WITH ALL FAULTS. This warranty is valid only in the United States.

Repair or replacement as provided under this warranty is the exclusive remedy of the consumer. CyberHome shall not be liable for any incidental or consequential damages for breach of any expressed or implied warranty on this product. Except to the extent prohibited by applicable law, any implied warranty of merchantability or fitness for a particular purpose on this product is limited in duration to the extent of this warranty.

Some states do not allow the exclusion or limitation of incidental or consequential damages, or allow limitations on how long an implied warranty lasts, so the above limitations or exclusions may not apply to you. This warranty gives you specific legal rights, and you may have other rights that vary from state to state.

Warranties and specifications are subject to change without prior notice. Please contact the below number or review our web site at www.cyberhome.com for the latest information regarding your warranty.