

Contents

1. Introduction	4
1.1 Overview	
1.2 Main Features	
2. Safety/Precautions	5
2.1 Safety	
2.2 Precautions	
3. Check Point before Use	7
3.1 Accessories	
4. Controls/Functions	8
4.1 Front Panel	
4.2 Rear Panel	
4.3 Remote controller	
4.4 Front Display	
5. How to Connect	13
6. Operation	14
6.1 Getting Started	
6.2 System Setting	
6.3 Channel Manager	
6.4 Installation	
6.5 Utils	
6.6 Game	
6.7 Conditional Access System	
6.8 PVR	
7. Trouble Shooting	56
8. Specifications	57
9. Multi-Brand IR Remote Controller Specification	59

DiSeqC is a trademark of EUTELSAT

Important Safety Instructions


- ① Read these instructions.
- ② Keep these instructions.
- ③ Heed all warnings.
- ④ Follow all instructions.
- ⑤ Do not use this apparatus near water.
- ⑥ Clean only with dry cloth.
- ⑦ Do not block any ventilation openings. Install in accordance with the manufacturer's instructions.
- ⑧ Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus(including amplifiers) that produce heat.
- ⑨ Do not defeat the safety purpose of the polarized or grounding-type plug. A polarized plug has two blades with one wider than the other. A grounding type plug has two blades and a third grounding prong. The wide blade or third prong are provided for your safety. If the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet.
- ⑩ Protect the power cord from being walked on or pinched particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.
- ⑪ Only use attachments/accessories specified by the manufacturer.
- ⑫ Use only with the cart, stand, tripod, bracket, or table specified by the manufacturer, or sold with the apparatus. When a cart is used, use caution when moving the cart/apparatus combination to avoid injury from tip-over.
- ⑬ Unplug this apparatus during lightning storms or when unused for long periods of time.
- ⑭ Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.

Caution - These servicing instructions are for use by qualified service personnel only. To reduce the risk of electric shock do not perform any servicing other than that contained in the operating instructions unless you are qualifie to do so.

WARNING : To reduce the risk of fire or electric shock, do not expose this apparatus to rain or moisture.



Precautions

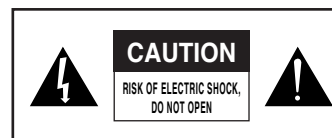

TO REDUCE THE RISK OF ELECTRIC SHOCK, DO NOT REMOVE THE COVER(OR BACK). NO USER-SERVICEABLE PARTS ARE INSIDE. REFER SERVICING TO QUALIFIED SERVICE PERSONNEL.



This symbol indicates "dangerous voltage" inside the product that presents a risk of electric shock or personal injury.



This symbol indicates important instructions accompanying the product.

Do not install this equipment in a confined space such as a bookcase or similar unit.

WARNING : To prevent damage which may result in fire or electric shock hazard, do not expose this appliance to rain or moisture.

FCC

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions : (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Caution : Any changes or modifications in construction of this device which are not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE : This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures :


- ▶ Reorient or relocate the receiving antenna.
- ▶ Increase the separation between the equipment and receiver.
- ▶ Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- ▶ Consult the dealer or an experienced radio/TV technician for help."

Introduction

1.1 Overview

This satellite receiver is designed for using digital free-to-air channel reception. Enjoy the rich choice of more than 10,000 different channels, broadcasting a large range of culture, sports, cinema, news, events, etc. This receiver is a technical masterpiece, assembled with the highest qualified electronic parts.


1.2 Main Features

- ▶ Compliant MPEG-II/ MPEG-IV/ H.264.
- ▶ 2 tuner combo (DVB-Satellite & ATSC-Terrestrial)
- ▶ Compliant DVB-S/ S2 satellite standard & ATSC-Terrestrial standard
- ▶ Output resolution 480p & 480i(NTSC), 720p, 1080i
- ▶ 1 HDMI output
- ▶ Multisatellite search.
- ▶ On-screen display with true color full resolution.
- ▶ DiSEqC control version 1.0, 1.1, 1.2 and USALS compatible.
- ▶ Enhanced 16 favorite channel groups.
- ▶ Powerful channel control by favorites, lock, skip, move and delete function.
- ▶ Channel sort by alphabet, transponder and CAS.
- ▶ Multilingual GUI (OSG & Menu): English, Spanish, Portuguese, French, German, Italian, Turkish, Arabic, Persian, Russian, Chinese.
- ▶ Installation wizard
- ▶ Extended EPG and program reservation on EPG.
- ▶ Last channel memory function.
- ▶ Total 10,000 channels programmable.
- ▶ Preprogrammed channels (Optional)
- ▶ Dolby digital audio output (S/PDIF)
- ▶ S-Video
- ▶ Component output (YPbPr)
- ▶ Various games
- ▶ Software & channel database upgrade via RS-232C: PC to STB/ STB to PC.
- ▶ Parental lock / Installation lock / receiver lock.
- ▶ Zoom in function on pause/ live channel
- ▶ Multipicture display.
- ▶ High speed software upgrade via USB 2.0
- ▶ MP3 play and JPEG viewer
- ▶  **DOLBY DIGITAL** Manufactured under license from Dolby Laboratories. "Dolby" and the double-D Symbol are trademarks of Dolby Laboratories.


Safety/Precautions

2.1 Safety


Be sure to read this user's manual before starting the operation of the unit.

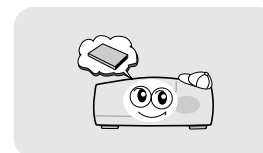


Do not touch the power cord with wet hands as it may cause electric shock.

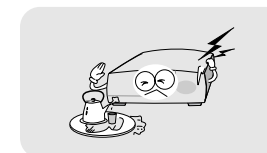


Never open the cover. It is very dangerous to touch the inside of the unit due to possible electric shock.

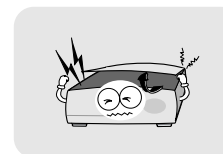


Place the unit in a well ventilated and no-heat environment.

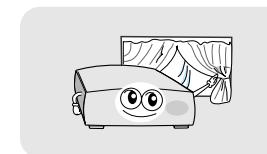

When you do not use this unit for a long time, make sure that power cord is pulled out from the outlet. Also do not use a damaged power cord as it may cause fire or electric shock.

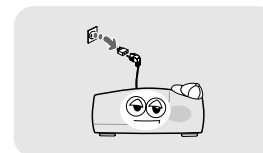


A professional installation is required. If reception is interrupted, contact your local service centre.

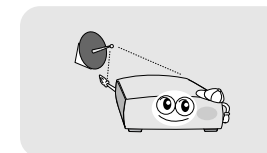


2.2 Precautions

When installing the unit

Install the unit horizontally. An uneven installation may cause the unit to be damaged.

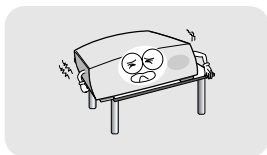


Do not put heavy items such as a TV set on the unit. That may damage the unit.

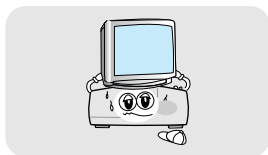

Do not leave the unit where the water drops or splashes.




Do not put water holding items such as vases on the unit.

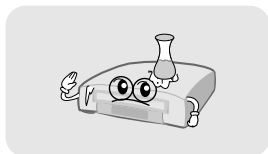


Do not install the unit:

- Where it is subject to vibrations
- Where it is exposed to direct sunlight
- Where there is humidity
- Where the temperature is too high or too low.
- Where there is no ventilation

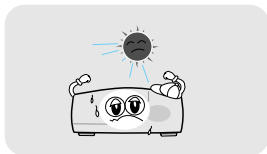

Moving the unit to a hot area from a cold one will cause condensation. Do not operate the unit for one or two hours or until it has dried completely.

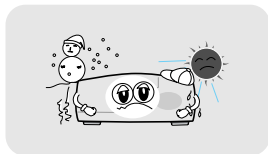


- The mains plug is used as the disconnect device. The disconnect device shall remain readily operable.

Points to Check before Use

3.1 Accessories

The accessories below are included with this receiver:


User's manual : 1

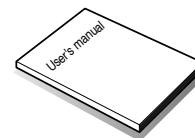

Remote control : 1



 Batteries (AAA type) : 2

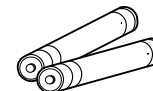

- If any of the above-listed accessories is missing, contact your sales representative.

3.2 The Satellite dish

Your dish should be properly installed and azimuth and elevation must be precisely set up.

- This unit supports DiSEqC 1.2 and can work with a compatible antenna positioner. Ask your dealer for information.

Controls/Functions

4.1 Front Panel



1 Standby/Power on Indications Lamp : Flashes red light in "Standby" mode and shows no light in "Power ON" mode.

2 Power : Switches the receiver between "Standby" and "Power ON" modes.


3 Menu : To enter or exit the main menu.

4 Select : To show the Channel List in non-menu mode and select on item or confirm in menu mode.

5 - 6 VOL (◀/▶) : To change the volume level in non-menu mode and modify a setting in menu mode.

7 - 8 CH (▼/▲) : To switch channels or change the cursor position on the application screen.

4.2 Rear Panel

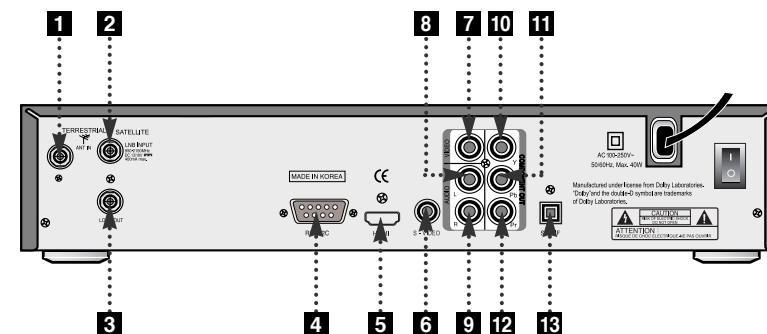


No.	Name	Connector	Function
1	ANT IN	IEC 169-2 FEMALE	Input from terrestrial antenna
2	LNB INPUT	IEC 169-24 FEMALE	IF input from LNB to digital tuner
3	LNB OUTPUT	IEC 169-24 FEMALE	IF loop-through output from digital tuner
4	RS-232C	DB-9	Low speed serial port
5	HDMI	HDMI	Digital Video/Audio Output
6	S-VIDEO	MINI-DIN	S-VHS Output
7	VIDEO	RCA cinch	Composite video output
8	AUDIO L	RCA cinch	Left audio output
9	AUDIO R	RCA cinch	Right audio output
10	Y	RCA cinch	Component video output(Y)
11	Pb	RCA cinch	Component video output(Pb)
12	Pr	RCA cinch	Component video output(Pr)
13	S/PDIF	Fiber Optic	Digital audio output (Optical)

4.3 Remote controller




- 1 POWER** : To turn the receiver On/Off.
- 2 TV/RADIO** : To switch between TV and Radio.
- 3 MUTE** : To turn the sound On/Off.
- 4 SUBTITLE** : To show the subtitle contents if subtitle is transmitted.
- 5 AUDIO** : To show the Multi-language audio track, the stereo-mono mode and subtitle information. Used for special functions in menu mode.
- 6 MOSAIC** : To display multiple pictures.
- 7 SLEEP** : To set the STB off after minutes.
- 8 FREEZE** : To pause the video. Press again to resume the video.
- 9 ZOOM** : To zoom In/Out.
- 10 GUIDE** : To show the TV/Radio program guide.
- 11 INFO** : To show information about the current program. Press twice to show detail.
- 12 RECALL** : To move to the previous channel. Used for special functions in menu mode.
- 13 GROUP** : To change the channel groups(Satellites or favorite groups).
- 14 MENU** : To enter or exit the main menu.
- 15 EXIT** : To exit from the present menu and move to the previous menu.
- 16 - 17 Vol Up & Down** : To change the volume level in non-menu mode.

4.3 Remote controller

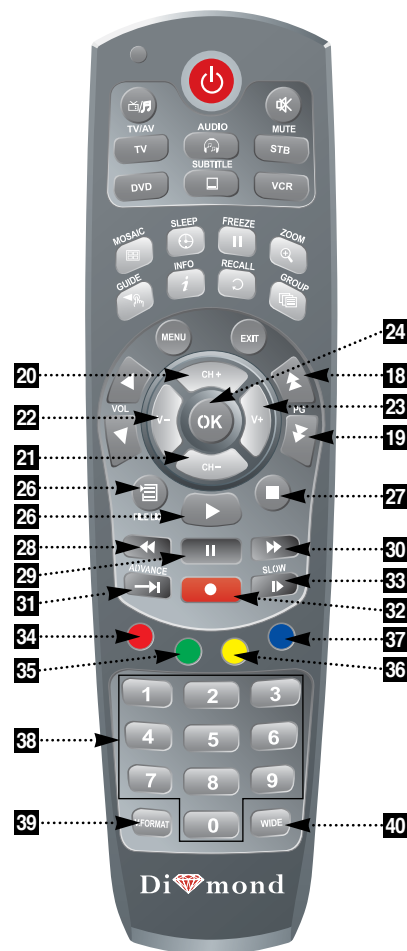

- 18 - 19 Double arrow Up/Down** : To move to the next or previous page when many pages are available.
- 20 - 21 Up & Down** : To switch channels in non-menu mode and move the cursor up/down in menu mode.
- 22 - 23 Left & Right** : To change the volume level in non-menu mode and modify a setting in menu mode.
- 24 OK** : To show the Channel List in non-menu mode and select an item or confirm in menu mode.
- 25 FILELIST** : To display the filelist.
- 26 PLAY** : Play Content.
- 27 STOP** : Stop Playback.
- 28 RWD** : Playback in rewind mode.
- 29 PAUSE** : Pause playback.
- 30 FWD** : Playback in forward mode.
- 31 ADVANCE** : Go to live channel.
- 32 REC** : Start recording.
- 33 SLOW** : Playback in slow mode.
- 34 - 37 Color Key** : Select the option such as View List, Select Disk, Rename.
- 38 Numeric Keys (0-9)** : To enter numerical settings (such as channel numbers) directly.
- 39 V.FORMAT** : To switch the resolution of video output.
- 40 Wide** : To select a TV aspect ratio with Pan Scan or Letter-Box(4:3) (Full screen or Pillar box(16:9)).

4.4 Front Display

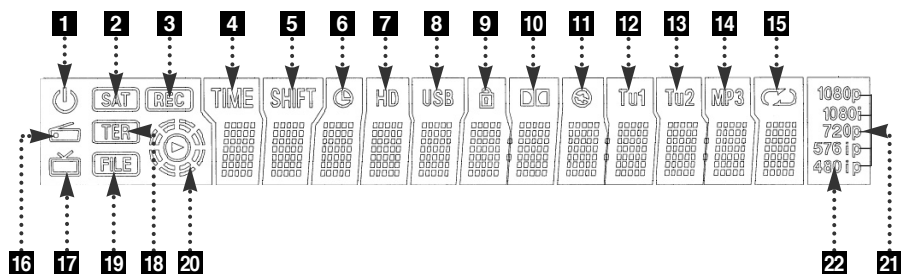


1		Indicates Power (On/Off) mode
2		Lights when the signal comes in via satellite dish
3		Lights when the current channel is recording
4		Lights when Time-Shift Mode is set to enable
5		Lights when Time-Shift Mode is set to enable
6		Lights when a timer setting in standby mode
7		Lights when the signal is HD
8		Lights when USB devices is connected
9		Indicates the current channel is set to Lock mode
10		Lights when the current channel is Dolby audio format
11		Lights when the current sound is set to Off
12		Feature not supported
13		Feature not supported
14		Lights when Mp3 player is enabled
15		Lights when loop mode is setting in Mp3 player
16		Lights when the current channel is Radio mode
17		Lights when the current channel is TV mode
18		Lights when the signal comes in via TV Antenna
19		Indicates when the current playback mode in file list
20		Lights when Media & Recorded file is playing and revolving on the outer circle
21		Indicates the resolution of video output
22		Indicates the Progressive or interlaced scanning mode

How to Connect

5.1 When Connecting IRD to TV with RF, AV connectors

- 1 Connect the TV antenna to TV ANT IN
- 2 Connect the RF-IN of TV to RF-OUT
- 3 Connect the Video and Audio of TV to the Video and Audio. Connect Red and White connector to Audio R and Audio L, and Yellow into Video port respectively
- 4 Connect the Component Video of your TV to Component Video for best quality: connect the Y, Pb and Pr of your TV to Y, Pb and Pr respectively
- 5 Connect your satellite dish

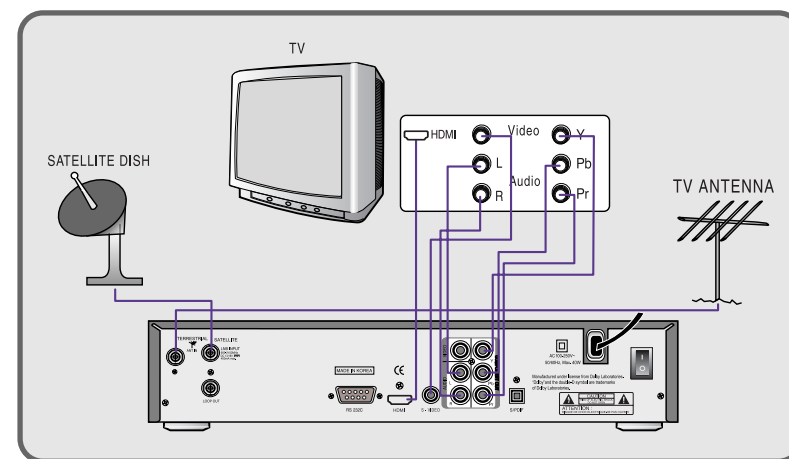


Operation

6.1 Getting Started

After your receiver is powered on, proceed with installation as follows :

(1) Installation Wizard

1) Menu Language Setting

- 1 Turn on your TV and receiver.
- 2 The pop-up menu for language selection will appear <Figure 6-1-1>.
Select one language and press the  to proceed.




<Figure 6-1-1>

6.1 Getting Started

2) A/V Output Setting

This sub menu allows you to set audio/video output setting. <Figure 6-1-2>

- **Audio Language** : Set the default audio language when selecting a channel.
- **Screen Format** : Select the screen format. (16:9 / 4:3)
- **Display Format** : Select the TV aspect ratio(Letter Box/Pan Scan, Full Screen/Pillar Box)
- **Video Format** : Select the Scanning type(Interlaced, Progressive)
- **SPDIF** : Select the Audio output type (Dolby/PCM)

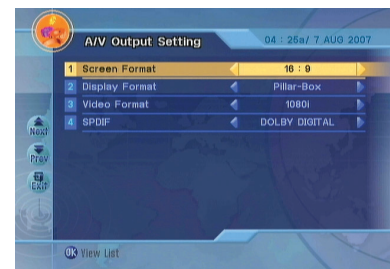



<Figure 6-1-2>

6.1 Getting Started

3) Time Setting

This sub menu allows you to set your local time, wake up time, wake up channel and sleep time. <Figure 6-1-3>






- **GMT Usage** : If you set ON, local time is determined by adjusting the differences from GMT (Greenwich Meantime) according to your location.
- **Current Date** : If GMT Usage ON, this date is determined by GMT. If GMT Usage OFF, you can modify this by pressing the  button. If you set OFF, receiver doesn't refer to GMT. Local time is determined by adjusting current date and current time.
- **Current Time** : If GMT Usage ON, this time is determined by GMT. If GMT Usage OFF, you can modify this by pressing the NUMERIC button.
- **Local Offset** : If GMT Usage ON, Local time is GMT time + Local Offset.
- **Summer Time** : you can set the summer time mode (Off/Last Sun in Oct~Mar/First Sun in Oct~Mar/Mar~Oct)
- **Wake Up Mode** : You can set the cycle of the wake up mode (Off/Once/Daily)
- **Wake Up Time** : You can set wake up time by pressing the NUMERIC button on the remote.
- **Wake Up Channel** : You can set wake up channel by pressing the  button on the remote.
- **Sleep Mode** : You can set the cycle of the sleep mode (Off/Once/Daily)
- **Sleep Time** : You can set sleep time by pressing the NUMERIC button on the remote



<Figure 6-1-3>


6.1 Getting Started

4) Dish Setup



- ① Press the MENU button to display the main menu.
 - ② Use  /  and  /  to move in the menu.
 - ③ Press  on 'Dish Setting'. The following window will appear. <Figure 6-1-4>
- * **Note** : Enter a 4-Digit password if need arise. The default password is '0000'.



<Figure 6-1-4>

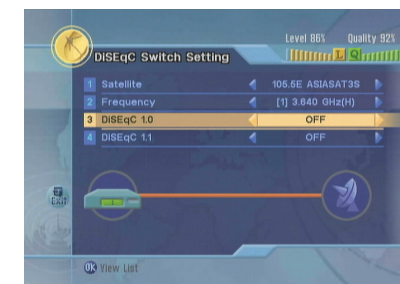

<Figure 6-1-5>

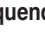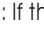- ④ Select the item that you want to edit, and set its parameters as desired. <Dish Setting>
 - **Satellite** : Select any satellite by pressing  /  buttons.
 - **Frequency** : If the default TP frequency is not appropriate, you can select another TP frequency at which to check for signal
 - **LNB Power** : Select among ON/OFF/13V/18V.
 - **LNB Type** : Select among Universal/OCS/OCS-DP/Legacy Twin LNB1/ Legacy Twin LNB2/ Legacy Quad LNB1/ Legacy Quad LNB2/Single.
 - **LNB Freq** : Set the frequency of the LNB oscillator.
 - **22KHz** : When not AUTO, set the signal path from LNB or switch by selecting a control signal among 0/22KHz.
 - **DiSEqC 1.0 / 1.1** : Select DiSEqC protocol among OFF/1.0/1.1 as appropriate for your configuration. <Figure 6-1-5>
 - **DiSEqC Motor** : Select DiSEqC protocol among OFF/1.2/USALS as appropriate for your Motor. <Figure 6-1-6>
- ⑤ **Auto Scan** : Press Green button the remote to begin Auto Scan.

6.1 Getting Started

(When the DiSEqC Motor parameter is set as 1.2)



<Figure 6-1-6>

- **Motor Step** : Select Motor Step
- **Move** : Move the dish position to west/east by pressing / buttons.
- **Go To** : Go to the position of the saved satellite.
- **Motor Control** : Control motor by press button of the remote.
- ** **Recalculate** : Recalculate the position of all other saved satellites relative to the known position.
- ** **Reset System** : Reset the position of all saved satellites.
- ** **Goto Reference** : Move the dish to the 0 position.
- ** **Set West Limit** : Edit & Save west limit by pressing / or buttons.
- ** **Set East Limit** : Edit & Save east limit by pressing / or buttons.
- ** **Enable Limit** : Enable the saved east and west limit.
- ** **Disable Limit** : Disable east and west limit.
- ** **Save** : Save the current setting of DiSEqC 1.2 system.

6.1 Getting Started





(When the DiSEqC Motor parameter is set as USALS)

- **Move** : Move the dish position to west/east by pressing / buttons.
- **Motor Control** : Control motor by press button of the remote.
- ** **Goto Reference** : Goto reference by pressing button.
- ** **Set West Limit** : Edit & Save west limit by pressing / or buttons.
- ** **Set East Limit** : Edit & Save east limit by pressing / or buttons.
- ** **Enable Limit** : Enable the saved east and west limit.
- ** **Disable Limit** : Disable Limit by pressing button.
- ** **Save** : Save the current Setting of USALS system.
- **Sat Degree** : Displays the current degree of the selected satellite. Edit degree by pressing / buttons and numeric buttons.
- **Position Setting** : Select position setting by pressing button.
- ** **Goto Reference** : Move the dish to the 0 position.
- ** **Antenna Longitude** : Edit antenna longitude by pressing / buttons and numeric buttons.
- ** **Antenna Latitude** : Edit antenna latitude by pressing / buttons and numeric buttons.
- **Go To** : Save the current setting of USALS System.

6.1 Getting Started


5) Satellite Channel Search

► Auto Scan <Figure 6-1-7>

- ❶ To select more than one satellite, press the  button when the selection bar is positioned on the satellite.
- ❷ Press  on the names of the satellites that you want to scan under 'Satellite List'. Press the EXIT button to close the 'Satellite List'.
- ❸ Press  /  and set the 'Search Type' and 'Network Search' parameters.
 - **Search Type** : Decide for which channels to search (All channels/ Free channels only/ TV channels only).
 - **Network Search** : Set ON to find more transponders (frequencies) through a Network Information Table (NIT) scan. That is, when the broadcaster is sending a NIT through a given transponder, the receiver will also scan for transponders listed in the NIT and not otherwise recognized. (this can happen when a transponder is new)
- ❹ Press **RED button** under 'SCAN' to scan the selected satellites. <Figure 6-1-8>



<Figure 6-1-7>

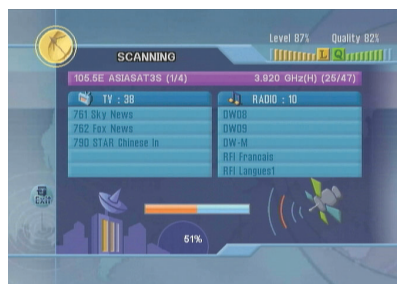



<Figure 6-1-8>


6.1 Getting Started

► Manual Scan <Figure 6-1-9>


- ❶ Select a transponder.
- ❷ To change a transponder's information (Frequency, Symbol Rate), use the **NUMERIC** buttons.
- ❸ To add a new transponder, press the **GREEN** button.
- ❹ To delete a transponder, press the **YELLOW** button with the cursor next to the Frequency parameter.
- ❺ To search a transponder, set its different parameters and **RED** button.

► Package Identifier (PID) Scan <Figure 6-1-10>

- ❶ Select a transponder.
- ❷ To change a transponder's information (Frequency, Symbol Rate), use the **NUMERIC** buttons.
- ❸ To add a new transponder, press the **GREEN** button.
- ❹ To delete a transponder, press the **YELLOW** button with the cursor next to the Frequency parameter.
- ❺ To search a transponder, set its different parameters and press  / . You can search a specific channel of the transponder by setting its PID data (Video, Audio and PCR).

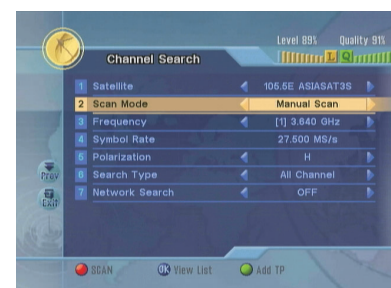

<Figure 6-1-9>

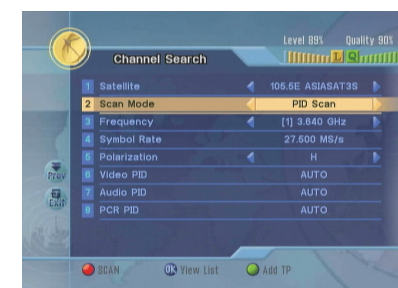

<Figure 6-1-10>

*** Note :** If you cannot access programs after correctly completing a scan procedure, please contact your seller or your installer.


6.1 Getting Started

6) Terrestrial Channel Search


Through this function, the receiver searches for all the available channels and saves them in memory.

► Auto Scan <Figure 6-1-11>

- 1 To select a Terrestrial, press the button when the selection bar is positioned on the satellite.
- 2 Press on the names of the satellites that you want to scan under 'Satellite List'. Press the EXIT button to close the 'Satellite List'.
- 3 Press **RED** to begin the scan. <Figure 6-1-12>

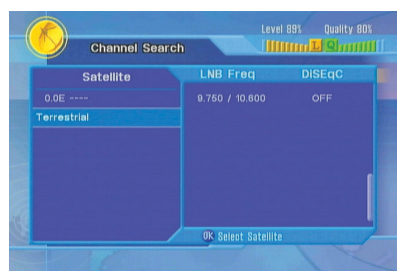


<Figure 6-1-11>

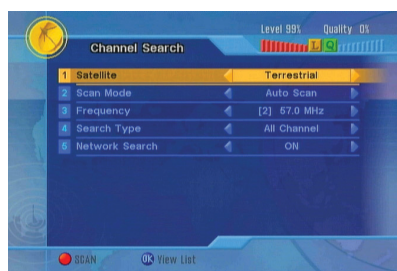


<Figure 6-1-12>

► Manual Scan <Figure 6-1-13>

- 1 To change a scan mode, use / , . Select a Manual Scan item.
- 2 Select the frequency you want to search for select the frequency by pressing / , , or specify a frequency by entering the frequency with the number keys. <Figure 6.1.14>
- 3 Press **RED** to begin the scan. <Figure 6-1-14>

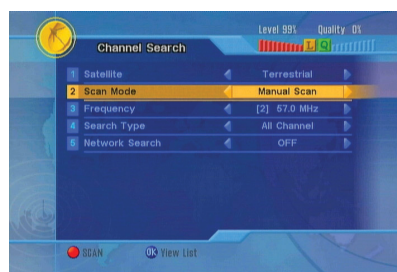

<Figure 6-1-13>

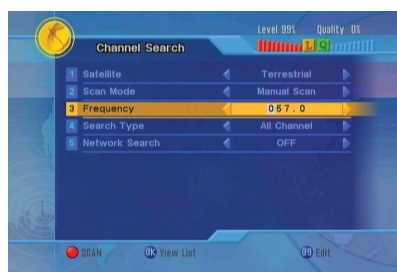

<Figure 6-1-14>


6.1 Getting Started

(2) To View Program

1) Channel Selection

You can use / to navigate between channels until you find the channel you want.

- If you know the channel number, you can enter it with the **NUMERIC** buttons and wait 2 seconds until the channel is changed.
- If you know the channel name or transponder or CAS, you can press to display the channel list <Figure 6-1-15>

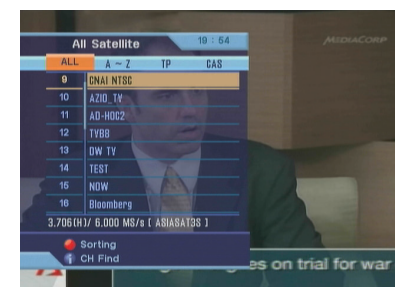









<Figure 6-1-15>


- 1 Detailed information about the selected channel will be displayed. (Satellite Name, Frequency(Polar) and Channel Name)
- 2 You can use the following buttons to navigate between channels:
 - / : Moves one channel up/ down.
 - / : Moves one page up / page down.
 - **RED** : Press RED button on the remote to use channel sorting.
 - ** **ALL** : Shows all channels in the current group.
 - ** **A~Z** : Shows all channels sorted alphabetically.
 - ** **TP** : Shows all channels sorted by Transponder.
 - ** **CAS** : Shows all channels sorted by CAS system.
- 3 Press when the selection bar is positioned on the desired channel.

(3) Electronic Program Guide

1) EPG

This submenu allows you to access the electronic program guide when available.



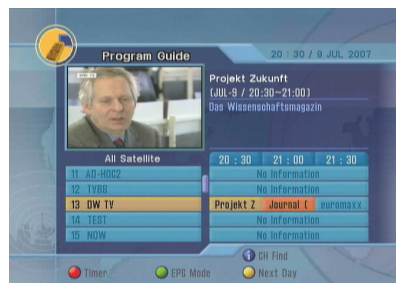



- ❶ Press the **EPG** button to display the guide menu. <Figure 6-1-14>
- ❷ Press  /  to see the previous/next guide.
- ❸ Press  / ,  /  to select another channel. <Figure 6-1-14>
- ❹ Press  to watch the selected channel and access its EPG data. If you press  in the right side of the screen (Event display list).
 - If the current time EPG is selected, you will return to the previous menu and get signal from the selected channel.
 - If a future time (next) EPG is selected, the selected program will be reserved and the event color will change.
- ❺ You can select TV or Radio channels by pressing the **TV/RADIO** button
- ❻ You can choose a channel list group by pressing the **GROUP** button.
- ❼ You can access the timer menu by pressing the **RED** button. <Figure 6-1-16>




<Figure 6-1-16>


2) Timer

This sub menu allows you to set the on/off time of your receiver.


- ❶ This submenu allows you to set on/off times of your receiver. To display the timer menu, press the RED button while in the guide menu. <Figure 6-1-17>
- ❷ Press  /  to select a timer's parameter.
- ❸ Press  /  to change the parameter.
 - **Timer No** : Select the timer that you want to modify. (1- 8)
 - **State** : Select the timer frequency. (off/once/daily/weekly)
 - **Date** : Press  to display a Calendar pop-up; Select a date
 - **Start Time** : Input the time for your receiver power-on; use the NUMERIC buttons
 - **End Time** : Input the time for your receiver power-off; use the NUMERIC buttons
 - **Channel** : Press  to display a Channel list pop-up; Select a channel

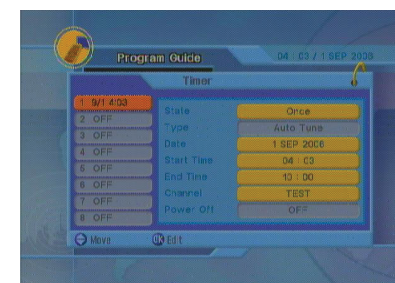


<Figure 6-1-17>

- If you want to record a program in the right side of the screen, you can select a program by using . The selected program will be reserved and the event color text will change to red. <Figure 6-1-18>.
- You can also see change the timer menu. <Figure 6-1-19>

*** It is worked when a USB device is connected.**

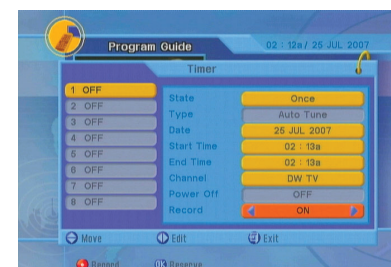

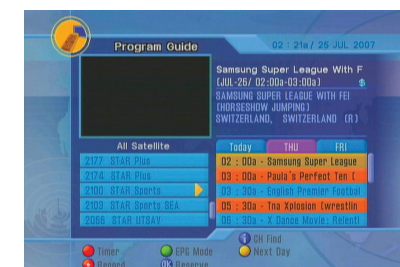

<Figure 6-1-18>



<Figure 6-1-19>

(4) Other Functions of Remote Control

► Volume Control

- ① While watching a program, press  /  control the volume.
- ② You can press the **MUTE** button to remove the sound of the program: the mute icon will be displayed. Press the **MUTE** button again to turn the sound back on.

► Channel Information

- ① You can press the **INFO** button to display the information banner for a few seconds.
- ② If you then press the **INFO** button again, a detailed banner will be displayed.

► TV/RADIO switching

You can press this key to change from a TV channel to a Radio channel or vice versa.

► RECALL

Press this key to return to the previous channel.

► Audio

Press to adjust the subtitle and/or audio status of the current channel:

- **Audio Mode** : Select between, Stereo/Mono-Left/Mono-Right
- **Audio Track** : Select between tracks available in this program
- **Audio Level** : Select between, Low/Medium/High

► FREEZE

You can press this key to freeze the video. Press it again to resume the video.

► GROUP

When watching TV or listening to Radio, you can press this button to view the list of satellites and/or favorite channel groups.

Only registered satellites and favorite groups are displayed.

► Multi Picture Display <Figure 6-1-20>



You can press the **MOSAIC** button to display multiple pictures; you can choose the number of pictures such as 1X2, 2X2, 2X3 or 3X3.



<Figure 6-1-20>

► ZOOM

You can press to zoom in the video. <Figure 6-1-21>

- ① Press the PAUSE button and press . You can zoom in sections of Freezed Video <Figure 6-1-22>
- ② While watching a program, press . You can zoom in sections of playing video.
- ③ To cancel the freeze status, please release the zoom status.



<Figure 6-1-21>




<Figure 6-1-22>


6.1 Getting Started

► Closed Caption <Figure 6-1-23>

You can press  to select the subtitle language of current channel.

► SLEEP <Figure 6-1-24>

You can set the your receiver to turn off after a few minutes. Press  to set the sleep timer.

- To cancel the sleep timer, please press  until you set time as "0 min".
(Disable, 10, 20, 30, 60, 100, 120 Minutes)



<Figure 6-1-23>



<Figure 6-1-24>

► V.FORMAT <Figure 6-1-25>

You can press  to change the video resolution Select between, 1080i → 720p → 480p

► WIDE <Figure 6-1-25>

You can press  to change the TV aspect ratio.

- **4:3** : Pan-Scan or Letter-Box
- **16:9** : Full-Screen or Pillar-Box



<Figure 6-1-25>



<Figure 6-1-26>

6.2 System Setting







1) Time Settings


This submenu allows you to set your local time, wake up time, wake up channel and sleep time.

- See **(6.1 Getting Started 3) Time Settings)** for detailed description.

2) Timer Manager

This sub menu allows you to set the on/off time of your receiver.

- ① This submenu allows you to set on/off times of your receiver. To display the timer menu, press the **RED** button while in the guide menu. <Figure 6-2-1>
- ② Press  /  to select a timer's parameter.
- ③ Press  /  to change the parameter.
 - **Timer No** : Select the timer that you want to modify. (1- 8)
 - **State** : Select the timer frequency. (off/once/daily/weekly)
 - **Date** : Press  to display a Calendar pop-up; Select a date
 - **Start Time** : Input the time for your receiver power-on; use the **NUMERIC** buttons
 - **End Time** : Input the time for your receiver power-off; use the **NUMERIC** buttons
 - **Channel** : Press  to display a Channel list pop-up; Select a channel

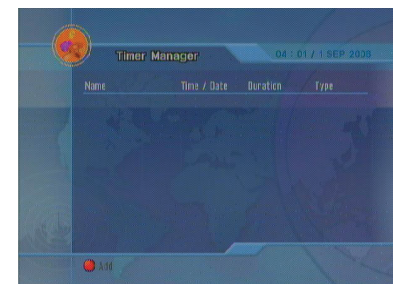

<Figure 6-2-1>

3) OSD Setting

This submenu allows you to set the menu language, OSD transparency and Information and Volume timeouts. <Figure 6-2-2>

- **Transparency** : Set the OSD transparency of the menu. (1% ~ 100%)
- **Information Timeout** : Select the display duration of the information banner. (1, 2, 3, 5 or 10 seconds)
- **Volume Timeout** : Select the display duration of the volume box. (1, 2, 3, 5 or 10 seconds)



<Figure 6-2-2>


4) Parental Control

This submenu allows you to set password options and to lock or unlock access to menus

* **Note** : PIN code and password are the same). <Figure 6-2-3>

- **Receiver Lock** : Set ON to require entering a PIN code at powering on.
- **Install Lock** : Set ON to require entering a PIN code to access the installation menu.
- **Channel Lock** : Set ON to require entering a PIN code to access the channels menu.
- **Lock Channel Confirm** : Set ON to require entering a PIN code to access a locked channel.
- **Age Limit** : Set to prevent children or unauthorized people from watching programs. Select among (Free/ 8 above/12 above/15 above/18 above). When program information (age limit) is available from broadcaster and this age limit exceeds the selection, a PIN code is required to access the channel/program.
- **New Password** : Enter the new password that you want to set.
- **Verify Password** : Enter the new password again for confirmation.

* **Note** : The default password is '0000'.

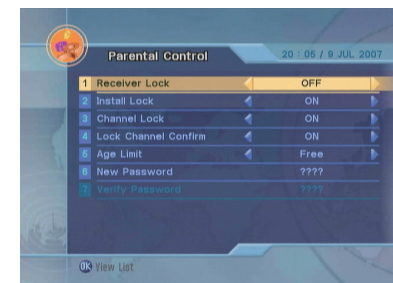


<Figure 6-2-3>

6.2 System Setting

5) Language Setting

This submenu allows you to specify the audio/video output <Figure 6-2-4>

- **Menu Language** : Set the default Menu language.
- **Audio Language** : Set the default audio language when selecting a channel.
- **Subtitle Language** : Set the default subtitle language.

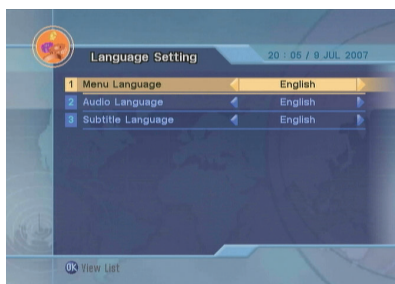

<Figure 6-2-4>

6) A/V Output Setting




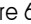

This sub menu allows you to set audio/video output setting.

See (6.1 Getting Started 2) A/V Output Setting) for detailed description.

6.3 Channel Manager


1) Set Favorites

This submenu allows you to set up favorite groups of channels. You can select **TV** or **Radio** channels in an alternative way by pressing the **TV/RADIO** button. The receiver supports 16 favorite groups.

- 1 Press  on 'Set Favorites'. The list of groups will be displayed. <Figure 6-3-1>
- 2 Press  /  and  to choose a group. The following menu will be displayed. <Figure 6-3-2>
If you want to change the name of a favorite group, press the **RED** button.
- 3 Press  to add (or remove if previously added) the selected channel to/from the favorite channel group.
- 4 Press the **EXIT** button to return to the previous menu.



<Figure 6-3-1>

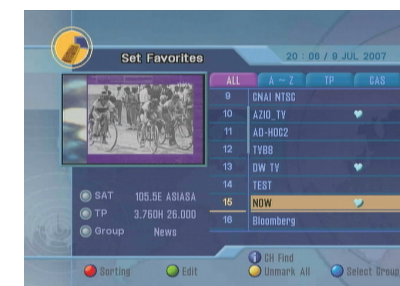



<Figure 6-3-2>


6.3 Channel Manager

2) Lock Channels

This submenu allows you to lock channels to control access to them. Once a channel is locked, you will be asked to enter a password whenever you try to watch it. You can select TV or Radio channels in an alternative way by pressing the TV/RADIO button. You can choose a channel list group by pressing the GROUP button.

If you set 'Lock Channel Confirm' (refer to <6.2>security setting) to OFF, you will not be asked to enter a password even if the channel is locked.

- 1 Press  on 'Lock Channels'. The following menu will be displayed. <Figure 6-3-3>
- 2 Press  on the channel that you want to lock/unlock; the lock icon will be displayed/removed.
- 3 Press the **EXIT** button to return to the previous menu.

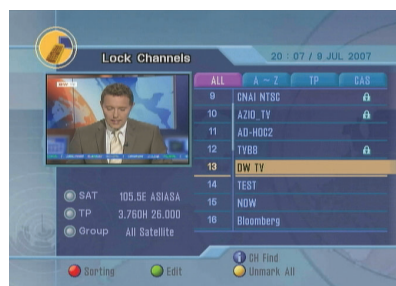

<Figure 6-3-3>








6.3 Channel Manager


3) Move Channels

This submenu allows you to move channels.

You can select TV or Radio channels in an alternative way by pressing the **TV/RADIO** button.

You can choose a channel list group by pressing the **GROUP** button.

- 1 Press  on 'Move Channels'. The following menu will be displayed. <Figure 6-3-4>
- 2 Press  on the channel that you want to move; a 'move' icon will be displayed.
- 3 Use the  /  ,  /  **NUMERIC** buttons to move the selected channel.
- 4 Press  again to place the channel.
- 5 Press the **EXIT** button to return to the previous menu.

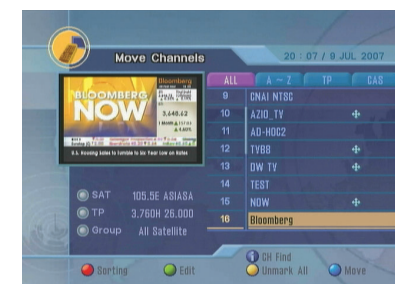



<Figure 6-3-4>


6.3 Channel Manager

4) Delete Channels

This submenu allows you to delete channels. You can select TV or Radio channels in an alternative way by pressing the TV/RADIO button. You can choose a channel list group by pressing the **GROUP** button.

*** Note : Be careful! If you delete a channel, you will not be able to access it again until you rescan.**

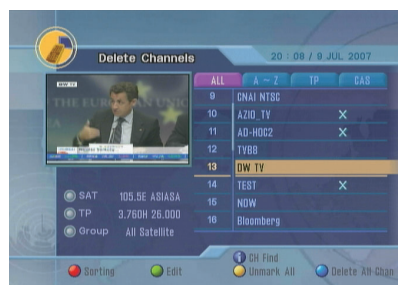

- 1 Press  on 'Delete Channels'. The following menu will be displayed. <Figure 6-3-5>
- 2 Press  on the channel that you want to set/unset for deletion; the delete icon will be displayed/removed.
- 3 Press the **INFO** button to delete all channels in the current list; you will be asked to enter your password.
- 4 Press the **EXIT** button to return to the previous menu and confirm deletion.





<Figure 6-3-5>


6.3 Channel Manager

5) Skip Channels

This submenu allows you to skip channels. Once a channel is set to be skipped, it will be whenever you navigate channels using  /  in non-menu mode. You can select TV or Radio channels in an alternative way by pressing the **TV/RADIO** button. You can choose a channel list group by pressing the **GROUP** button.

*** Note : You can still access a 'skipped' channel if you enter its number using the NUMERIC buttons in non-menu mode.**

- 1 Press  on 'Skip Channels'. The following menu will be displayed. <Figure 6-3-6>
- 2 Press  on the channel that you want to skip/un-skip; the skip icon will be displayed / removed.
- 3 Press the **EXIT** button to return to the previous menu.

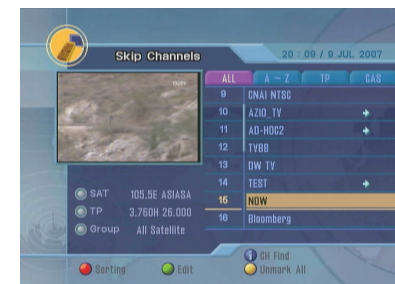

<Figure 6-3-6>

6.4 Installation

1) Dish Setting

Select the item that you want to edit, and set its parameters as desired. <Dish Setting>
See <Figure 6-1-4> for detailed description.

2) Channel Search

Through this function, the receiver searches for all the available channels and saves them in Memory. Chose Auto Scan to search using transponders (frequencies) in memory, or chose Blind Scan to look for new satellite/transponders.
See <Figure 6-1-8> for detailed description.

3) Data Transfer

This submenu allows you to transfer the software from a receiver to another receiver. You can select and transfer Firmware/ Channel Data/ Games. <Figure 6-4-1>

- **Firmware** : Transfer the firmware of a receiver to another receiver.
- **Channel Data** : Transfer the channel data of a receiver to another receiver.




<Figure 6-4-1>

6.4 Installation

4) Database Reset

This submenu allows you to restore the factory set values (useful when encountering problems after changing settings). <Figure 6-4-2>

- **Delete Radio Channels** : Erase all radio channels in the database.
- **Delete Scramble Channels** : Erase all scramble channels in the database.
- **Delete All Channels** : Erase all channels.
- **Factory Set** : Erase all channels and restore the factory default settings.

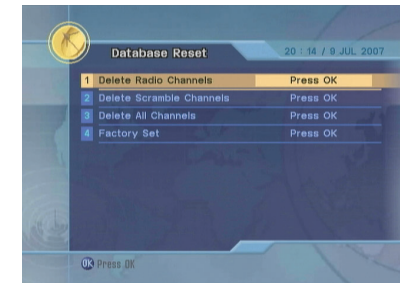


<Figure 6-4-2>

5) System Information

You can check the current information about your receiver such as receiver model name, S/W (software) version, H/W (hardware) version, manufacturing date, etc. <Figure 6-4-3>


*** Note : This information is useful to download new software and/or repair the receiver.**

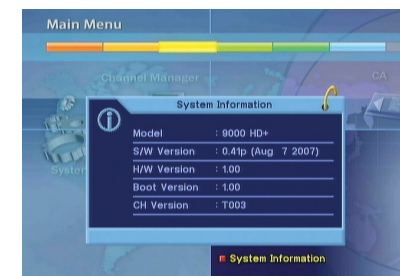

<Figure 6-4-3>

1) Calendar

This submenu allows you to use a calendar on the screen <Figure 6-5-1>

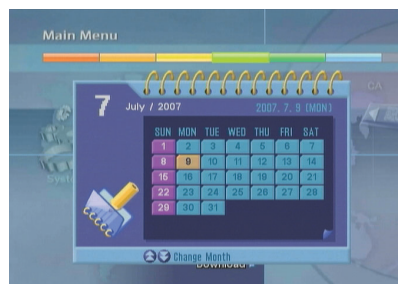


<Figure 6-5-1>

2) Calculator

This submenu allows you to use a calculator on the screen. <Figure 6-5-2>

- You can switch between Hex (Hexadecimal) and Dec (Decimal) basis for arithmetic with the **RED** button of the remote control unit.
- Use the Numerical and the / / buttons on the remote control unit.

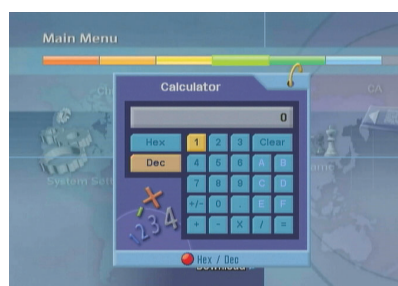


<Figure 6-5-2>


3) MP3 Menu

This submenu allows you to play various MP3 files, view JPG files or download a new software by connecting your USB flash drive.

- 1 Select the MP3 file you want to play back by using / , in the file list. <Figure 6-5-3>
- 2 Press the EXIT button to hide the file list. You can then select an option using / , . <Figure 6-5-4>
- 3 You can then change the volume by pressing / .
- 4 Press on **LIST** to display the MP3 file list.
- 5 Press on **INFO** to display information about the selected MP3 file.
 - **FILELIST** : Shows/Hides the MP3 file list
 - **INFO** : Shows information about the MP3 file you selected.
 - **YELLOW** : Choose the Hard disk volume or usb device with USB hub.

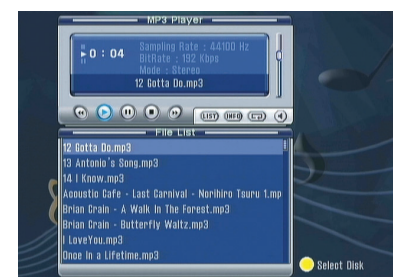

<Figure 6-5-3>

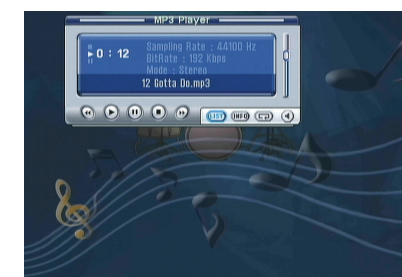

<Figure 6-5-4>

4) JPG menu


- ① Press / to select a picture. <Figure 6-5-5>
- ② Press to show the picture you want to display.
 - **RED** : Sets the time interval between slides.
 - **GREEN** : Selects slide show.
 - **YELLOW** : Choose the Hard disk volume or usb device with USB hub.
 - **FILELIST** : Shows/Hides the JPEG file list.



<Figure 6-5-5>

5) Data Transfer menu

- ① Select the software you want to download by using / in the list <Figure 6-5-6>
 - ② Press to start software downloading
 - **YELLOW** : Choose the Hard disk volume or usb device with USB hub.
 - **FILELIST** : Shows/Hides the JPEG file list
- * **Warning** : Please do not switch off your receiver before software downloading is completed.

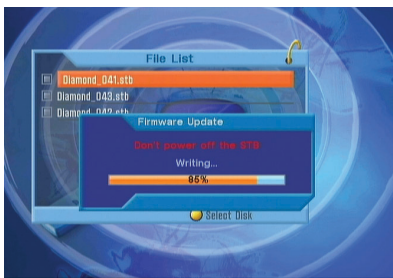


<Figure 6-5-6>

6) Management

- **Disk Information** : Choose the Hard disk volume or usb device with USB hub. You can view a information of usb devices (used size, total size, free size) <Figure 6-5-7>
- **Chck Disk** : Choose the Hard disk volume or usb device with USB hub. You can check the usb devices. <Figure 6-5-8>



<Figure 6-5-7>

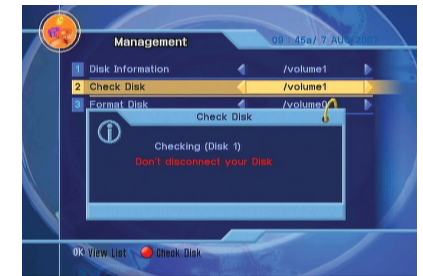









<Figure 6-5-8>

- **Format Disk** : You can format the usb devices. <Fig 6-5-9>



<Figure 6-5-9>

1) Tetris

- ① Press  on 'Tetris'. The following menu will be displayed. <Figure 6-6-1>
- ② You can choose a skill level using  / .
- ③ Press  to start the game <Figure 6-6-2>, or press the EXIT button to return to the previous menu.
- ④ Press  to rotate a block.
- ⑤ Press  /  to move a block.
- ⑥ Press  to drop a block.
- ⑦ You can see the next block in the top-right small window.
- ⑧ Press the **EXIT** button to quit the game









<Figure 6-6-1>



<Figure 6-6-2>

2) Sokoban

How to play Sokoban: you have to push the balls to their correct positions. The balls can only be pushed, never pulled, so you have to be careful not to push them into a corner where you can't get them out from. You can only push one ball at a time.

- ① Press  on 'Sokoban'. The following menu will be displayed. <Figure 6-6-3>
- ② You can choose a skill level using  / .
- ③ Press  to start the game <Figure 6-6-4>, or press the **EXIT** button to return to the previous menu.
- ④ Press  /  to move.
- ⑤ Press the **RED** button to undo the previous move. You can undo only one step.
- ⑥ Press the **GREEN** button to restart the game.
- ⑦ Press the **YELLOW/BLUE** buttons to jump to the previous/ next level. You can jump only between completed levels.
- ⑧ Press the **EXIT** button to quit the game.










<Figure 6-6-3>



<Figure 6-6-4>

3) Snake

- ① Press  on 'Snake'. The following menu will be displayed. <Figure 6-6-5>
- ② You can choose a skill level using  / .
- ③ Press  to start the game <Figure 6-6-6>, or press the **EXIT** button to return to the previous menu.
- ④ Press  /  to move.
- ⑤ Pass through the **GREEN** icon to increase your score; the length of the snake increases.
- ⑥ Pass through the **RED** icon to decrease the snake's length.
- ⑦ Avoid the **BLACK** icons. If you hit a **BLACK** icon (block), the game ends.
- ⑧ Press the **EXIT** button to quit the game.

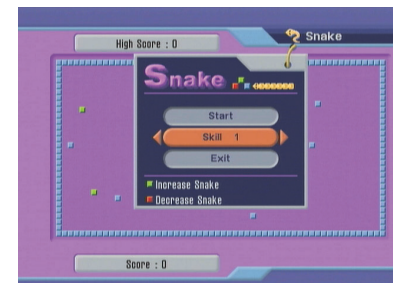

<Figure 6-6-5>




<Figure 6-6-6>

1) Card Initializing

To Enjoy CONAX CAS7 scrambled channels, you will need a Smart Card from the service provider (program distributor). If you are subscribing to services from more than one service provider, you will need a Smart Card from each one. Since a Smart Card is connected to a single service provider, a limited range of channels will be available via it.

*** Note : Without the Smart Card, you can watch only Free-To-Air programs.**

- ❶ Insert the Smart Card into the receiver's slot designed for it.
- ❷ The message 'Smart Card Initializing' will appear on the screen. <Figure 6-7-1>
- ❸ After the message 'Smart Card Initializing' has disappeared, you will be able to watch the channels offered by the service provider.

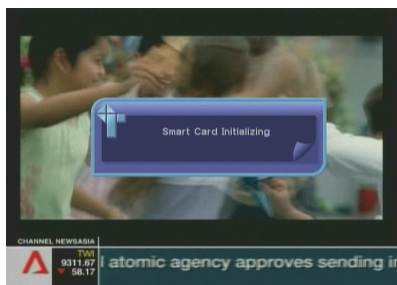


<Figure 6-7-1>

2) The Status of the Smart Card

- ❶ You can access detailed information about the Smart Card using the / keys in the Main Menu to select 'CA' and pressing . <Figure 6-7-2>
- ❷ Proceed with further instructions displayed on the screen to check more detailed information depending on the Smart Card in use.


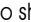


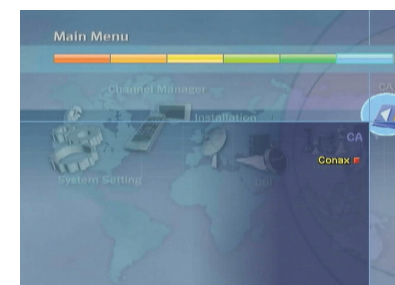

*** Note: Further detailed information is not mentioned in this manual since the information depends on the Smart Card in use.**




<Figure 6-7-2>

1) File List

► File Playback

- ① Press  to show the file list. Select the file you want to play back by using  /  , .
 - ② Press . In the left side of screen, detailed information about the selected file will be displayed. (Recorded Date/Time, Used size, Total Size) <Figure 6-8-1>
- To see a full screen, press  once more. And then the following time-bar will appear. <Figure 6-8-2>

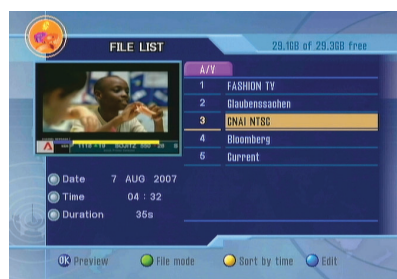


<Figure 6-8-1>






<Figure 6-8-2>

► Edit Menu

You will be asked to enter a password whenever you try to enter it. Press . The pop-up menu for selection will appear <Figure 6-8-3>.


Select the item that you want to edit, and set its parameters as desired

- ① Normal Mode : Press  on the file that you can see the preview of a selected file.
- ② Lock Mode : Press  on the file that you want to lock/unlock.
- ③ Delete Mode : Press  on the file that you want to delete.

- **GREEN** : Select between, File Mode ↔ Dir Mode



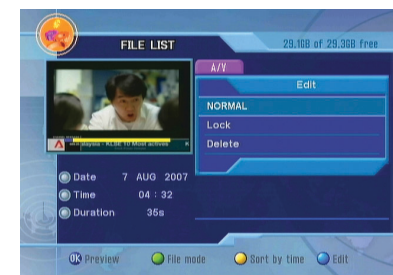


- **BLUE** : Shows all sorted files. Select between, Sort by name ↔ Sort by time.


*** If you set 'Channel Lock' (refer to <Figure 6.2.4>security setting) to OFF, you will not be asked to enter a password even if the channel is locked.**



<Figure 6-8-3>

2) Play List

- ① While watching a program, press  to show the play list. <Figure 6-8-4>
 - ② While recording a program, press  to show the play list. <Figure 6-8-4>
 - ③ Select the file you want to play back by using  / , . And then the following time-banner will appear. <Figure 6-8-5>
- **GREEN** : Select between, File Mode → Dir Mode
 - **YELLOW** : Shows all sorted files. Select between, Sort by name → Sort by time

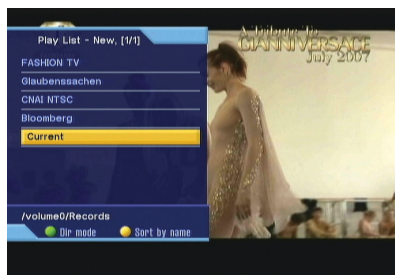

<Figure 6-8-4>




<Figure 6-8-5>



3) Trick Mode

You can operate the trick mode while you are playing the recording files. These functions are available in playback mode or time-shift mode powerfully.



► PLAY

This button will display a time- banner. If you want to show the play list while playing the file by using .


► PAUSE


This button will pause the playing file until you play again with  or .
<Figure 6-8-6>

► ADVANCE

- If the time-shift mode is enabled, You can press  to jump the live program.
- If the playback mode is enabled, You can press  to stop the current playing file and then jumping the live program.

► FF(Fast Forward)

- When playing the file, you can press  to adjusting the playing speed.<Figure 6-8-7>
- The speed will change to x2, x4 and x8.

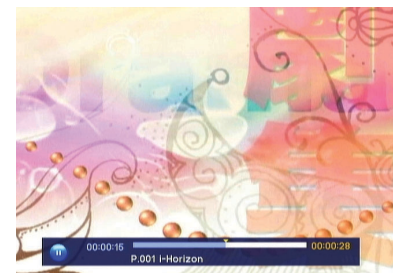

<Figure 6-8-6>




<Figure 6-8-7>

► RWD(Rewind)

When playing the file, you can press  to adjusting the playing speed. <Figure 6-8-8>
The speed will change to x2, x4 and x8.

► Slow(1/2x, 1/4x)

When playing the file, you can press  to adjusting the playing speed. <Figure 6-8-9>





<Figure 6-8-8>





<Figure 6-8-9>

► Jump

- You can locate the control position to the desired position by using the  / .
- If you press this key continuously, You can locate the control position to the desired position very quickly.

► Skip

- You can skips and forward in 15 seconds using the .
- You can skips and backward in 15 seconds using the .

► Bookmark

To mark a specific place in a file for later retrieval. <Figure 6-8-10>

- **RED** : Press this button and red small triangle cursor will be placed at that position. If you want to delete the bookmarked position, press a this button once more when red small triangle cursor appear.
- **GREEN** : Press this button and the current position will jump to the previous bookmarked position and playback starts from this point.
- **YELLOW** : Press this button and the current position will jump to the next bookmarked position and playback starts from this point.

*** Note : The maximum number of the bookmark is 20 in a file.**




<Figure 6-8-10>

4) Instant Recording

- ① You can record a current channel by using . If you then press , a time-banner will be displayed. <Figure 6-8-11>
- ② Press once more. The following picture shows that you can select item when you record a current channel. <Figure 6-8-12>
 - **Channel** : It shows a current channel.
 - **Name** : It shows a current recording name.
 - **Duration** : You can change the duration of recording time by using the / . And current recorded time appear.
 - **Stop** : If you stop the recording, Press .



<Figure 6-8-11>

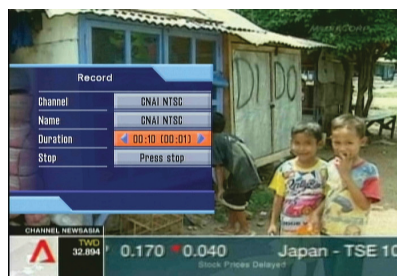

<Figure 6-8-12>


- * **Note** : 1. Do not remove the USB device while recording a program.
 2. You can't change to another channel while recording a program.

5) Timer Recording

This function is available when usb device is connected. You can choose a channel to record the Program Guide menu by using . (Refer to 6.4 Electric Program Guide, 2)Timer)

6) Time Shift

- ① If you want to pause and resume live TV channel, press **PAUSE** button. The default time of Time-Shift is 30 min in your STB. <Figure 6-10-13>
- ② If you want to resume live TV channel, press **PLAY** button. <Figure 6-10-14>
- ③ The trick-mode operations are provided. If you want to jump to live channel, please press .

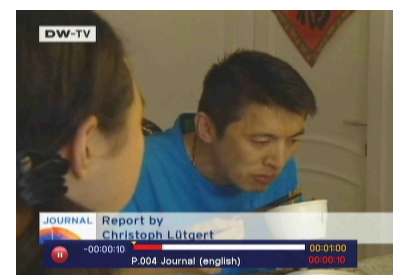

<Figure 6-8-13>



<Figure 6-8-14>

Trouble Shooting

There may be various reasons for the abnormal operation of the unit. Therefore, if the unit does not work properly, check it according to the procedures shown in the table below:

Problem	Possible causes	Remedy
LED on front panel does not light.	AC power cord is not connected.	Make sure that power cord is connected properly into the power socket. Make sure power switch is on.
No Picture or sound	The video/audio output of the receiver with TV is connected.	Make sure that video/audio cable is connected to the TV.
	The aerial is not connected to the receiver.	Make sure that the aerial is connected properly to the receiver.
	Menu setting is not done properly.	Make sure that menu setting is done properly on each menu. If you are not sure about proper menu setting, please contact your local dealer.
Black-and-white screen	Your TV mode is different from broadcasting mode.	Use TV of same mode. Use the NITSC/PAL converter connected to the receiver and TV.
The remote controller is not working.	Battery exhausted. Remote controller is incorrectly aimed.	Change the batteries of remote control. Aim the remote control at the Receiver correctly.

Specifications

System capabilities satellite LNB/Tuner input	Fully DVB compliant	
	Connector	IEC 169-24, female
	Frequency range	950MHz ~ 2150MHz
	Signal level	-65dBm ~ -25dBm
	LNB supply	DC 13/18V, max 400mA
	LNB switch control	22KHz
Demodulator	DiSEqC	Ver 1.0/1.1/1.2/USALS Compatible
	Front end	DVB-S/S2 QPSK, 8PSK
	Symbol rate	DVB-S : 2~45Msps
		DVB-S2 : 10~30Msps(QPSK) 10~31Msps(8PSK)
	SCPC and MCPC Capable	
TERRESTRIAL System capabilities Tuner & Channel Decoder	Spectral inversion	Auto conversion
	Input connector	IEC 169-24, Female
	Frequency range	57MHz ~ 803MHz
	Input impedance	75 Ohms Nominal
	Signal level	6MHz(-80dBm~-5dBm)
System resource	IF Bandwidth	6MHz
	Waveform	8VSB
	Processor	32bit processor (266MHz)
	DDR SDRAM	32Mbyte X 4
Video decoder	FLASH	8Mbyte
	EEPROM	256Kbit
	MPEG 2	MPEG-2, MPEG-4, H.264
	Data Rate	up to 15M bits/s
	Resolution	1920 X 1080i, 1280 X 720p, 720 X 480i/p
Teletext	Video format	NTSC
	Aspec Ratio	4:3,16:9
	DVB compliant	

Multi-Brand IR Remote Controller Specification

MPEG Audio	MPEG 1 layer 1 &2	
	Type	Mono, Stereo, Joint Stereo
	Sampling rates	32, 44.1 and 48 KHz
Serial data interface	Connector	9pin D-sub male, Max 115K bps
Remote control	Code	NEC-IR
	Operating condition	up to 7 Meter
USB Power supply	USB Supply	DC 5V Max 500mA
	Power consumption	max 40W
	Supply voltage	100V ~ 250V
	Supply frequency	50Hz ~ 60Hz
Rear Panel connectors	Video	1 X RCA cinch
	Audio L/R	2 X RCA cinch
	Component(Y/Pb/Pr)	3 X RCA cinch
	Serial data	9pin D-sub
	Digital tuner input	IEC 169 - 24
	Loop-through Digital tuner	IEC 169 - 24
	Terrestrial ant input	IEC 169 - 24
	S/PDIF	Fiber Optic
	S-Video	Mini-DIN

Physical Specification	Size (W X H X D)	335 X 58.5 X 247(mm)
	Weight (Net)	3 Kg



Disposal of Old Electrical & Electronic Equipment(Applicable in the European Union and other European Countries with separate collection systems)

This symbol on the product or on its packaging indicates that this product shall not be treated as household waste. Instead it shall be handed over to the applicable collection point for the recycling of electrical and electronic equipment. By ensuring this product is disposed of correctly, you will help prevent potential negative consequences for the environment and human health, which could otherwise be caused by inappropriate waste handling of this product. The recycling of materials will help to conserve natural resources.

For more detailed information about recycling of this product, please contact your local city office, your household waste disposal service or the shop where you purchased the product.

1) Features

This project will programmed and support **TV, VCR, DVD, SAT** for American.
(chip:CMS81032 OTP 24PIN, ROM SIZE:16K)

※ The **TV, VCR, DVD** keys are used to select the device you Want to control.

2) Digit Programming & Key Activation

❶ Using your DEVICE code No.

Step 1. Turn on your DEVICE.

Step 2. Press OK Key and press DEVICE Key in 2 seconds at the same time.

- LAMP LED will turn on

Step 3. Press three Digit Codes Number

- If the Digit Codes Number is not pressed in the course of 20 seconds, this function is canceled.

Step 4. LAMP LED will blink twice.

- The current setting code is right.

- The current setting code is right if your DEVICE will turn off.

Step 5. Press OK Key for saving.

❷ Search method - If Your DEVICE Does Not Respond.

Step 1. Turn on your DEVICE.

Step 2. Press OK Key and press DEVICE Key in 2 seconds at the same time.

- LAMP LED will turn on

Step 3. Press CH+ or CH- key until DEVICE turns off,one and one.

- LAMP LED will blink

- If the CH+ or CH- key is not pressed in the course of 20 seconds, this function is canceled.

Step 4. If your DEVICE is turn off then press OK Key for saving.

- LED will blink Twice

* Please use this method if none of the Set-Up Code numbers worked for your device during the three digit code method or if the manufacturer or brand for your device if not listed in Set-Up Code Tables.

3) Code Recall

If you forgot what code you used for any of your DEVICE.

Step 1. Press OK key and press DEVICE Key in 2 second at the same time.

Step 2. Press INFO Key

- LAMP LED will blink according to first,second and third digit for the current setup code.
- case of digit 0, the LAMP LED blinks 10 times

4) Factory Default

STEP 1. Press TV + REC Key in 5 seconds at the same time.

STEP 2. Press TV > DVD > STB > VCR Key

* Each LED will blink 3 times in the order of TV/DVD/STV/VCR, and then restores the default setting.

4) KEY TABLE

WR653D-DI		FUNCTION			
No	WUR019	SAT	TV	VCR	DVD
	KEY NAME				
00	STB	STB SEL			
01	TV		TV SEL		
02	VCR			VCR SEL	
03	DVD				DVD SEL
04	POWER	POWER	POWER	POWER	POWER
05	CH+	CH+	CH+	CH+	UP
06	CH-	CH-	CH-	CH-	DOWN
07	V+	V+	V+		RIGHT
08	V-	V-	V-		LEFT
09	MUTE	MUTE	MUTE		
10	TV/RAD	TV/RADIO	TV INPUT	INPUT	INPUT
11	0	0	0		
12	1	1	1		
13	2	2	2		
14	3	3	3		
15	4	4	4		
16	5	5	5		
17	6	6	6		
18	7	7	7		
19	8	8	8		
20	9	9	9		
21	MENU	MENU	MENU		MENU
22	INFO	INFO	INFO		
23	OK	OK	OK		OK
24	EXIT	EXIT	EXIT		
25	GUIDE	GUIDE	GUIDE		
26	PLAY	PLAY		PLAY	PLAY
27	STOP	STOP		STOP	STOP
28	FWD	FWD		FWD	FWD
29	REW	REW		REW	REW
30	PAUSE	PAUSE		PAUSE	PAUSE
31	REC	REC		REC	REC
32	ADVANCE	ADVANCE			
33	SLOW	SLOW			
34	AUDIO	AUDIO			
35	SUBTITLE	SUBTITLE			
36	MOSAIC	MOSAIC			
37	SLEEP	SLEEP			
38	FREEZE	FREEZE			
39	ZOOM	ZOOM			
40	RECALL	RECALL			
41	GROUP	GROUP			
42	VOL+	VOL+			
43	VOL-	VOL-			
44	PG+	PG+			
45	PG-	PG-			
46	FILE LIST	FILE LIST			
47	RED	RED			
48	GREEN	GREEN			
49	YELLOW	YELLOW			
50	BLUE	BLUE			
51	V.FORMAT	V.FORMAT			
52	WIDE	WIDE			

5) Brand list

① TV

MAKER(BRAND) NAME	CODE NUMBER(3 DIGIT) LIST															
ADMIRAL	072	081	160	161	096											
ADVENT	247															
AIKO	103															
AKAI	006	146	248													
ALARON	028															
AMARK	112	143														
AMERICA ACTION	043															
AMPRO	073															
ANAM	043	054	055	056	080	112										
AOC	058	006	004	112												
APRC DIGITAL	015	226														
AUDIOVOX	073	103	043													
BAYSONIC	043															
BELL HOWELL	072															
BRADFORD	043															
BROKSONIC	096															
CANDLE	006	002	003	004												
CAPEHART	059															
CARVER	164															
CELEBRITY	001															
CETRONIC	043															
CINERAL	103	120														
CITIZEN	006	002	003	004	101	103	143									
CLASSIC	043															
CONCERTO	004															
CONTEC	043	051														
CORONADO	143															
CRAIG	043	054	028													
CROSLEY	164															
CROWN	043	143														
CURTIS MATHES	006	004	101	143	011	072	081	120	164							
CXC	043															
DAEWOO	076	103	055	004	127	143	016	043	044	125	120					
DAYTRON	004	143														
DENON	011															
DUMONT	004	073														
DWIN	161															
DYNASTY	043															
DYNATECH	062															
ELECTROBAND	001															
ELECTROHOME	024	076	143													
EMERSON	005	028	043	048	076	096	155	004	051	143	151	153	154			
FISHER	007	057														
FUJITSU	164	028	198	246												
FUNAI	028	043	052	249												
FUTURETECH	043															
GATEWAY	242															
GE	006	073	144	160	161	004	008	009	034	056	074	091	155	081	120	
GIBRALTER	004	073														
GOLDSTAR	004	106	119	110	112	113	127	143								
GRUNPY	028	043														
HALL MARK	004															
HARLEY DAVIDSON	028															
HARMAN KARDON	164															
HARVARD	043															

HITACHI	163	004	007	009	011	072	010	012	023	075	143	158					
INFINITY	164																
INKE	129																
INTEQ	073																
JBL	164																
JCB	001																
JCPENNEY	004	006	008	024	030	065	101	143	156	160							
JENSEN	013																
JVC	038	001	034	083	206												
KENWOOD	006	001															
KLOSS	002	059															
KTV	006	043	143	154													
LG	004	106	119	110	112	113	127	143									
LODGENET	072																
LOEWE	207	164															
LOGIK	072																
LUXMAN	004																
LXI	007	015	052	081	160	164											
MAGNAVOX	006	003	004	022	059	060	061	063	064	127	164	094	160	028	250		
MAJESTIC	072																
MARANTZ	164	006															
MATSUI	164																
MATSUSHITA	080																
MEGATRON	004																
MEMOREX	004	007	072	028	096												
METZ	088																
MGA	024	006	004	042													
MIDLAND	073																
MINERVA	088																
MINUTZ	008																
MITSUBISHI	109	024	042	004	040	146	028	081	225								
MOTOROLA	081																
MTC	006	004	062	101													
MULTITECH	043																
NAD	015	025															
NEC	006	134	040	056	007	019	024	237									
NIKEI	043																
NIKKO	103																
NTC	103																
ONKING	043																
ONWA	043																
OPTIMUS	080																
OPTONICA	019	081															
ORION	096	201	202	203	204	205	028										
PANASONIC	034	056	080	164	208	222											
PHILCO	006	003	004	024	056	059	060	063	064	127	143	164					
PHILIPS	164	005	038	093	127	006	003	004	059	210							
PIONEER	023	025	135	176	004	018	006	209	234								
PORTLAND	004	143	103														
PRISM	034																
PROSCAN	144	160	161														
PROTON	004	058	134	171	173	112											
QUASAR	034	056															
RADIO_SHACK	004	019	127	143	043												
RCA	160	161	144	156	065	006	004	023	024	056	074	152	081				
REALISTIC	007	019															
RUNCO	072	073															

SAMPO	006	004	058	242													
SMSUNG	004	101	127	133	143	160	089	105	211	228	229						
SANSEI	120																
SANSUI	096																
SANYO	007	053	057	082	020												
SCOTCH	004																
SCOTT	004	005	028	043	048	143											
SEARS	004	007	015	028	030	057	082	094	143	160	052	164					
SEMIVOX	043																
SEMP	015																
SHARP	081	014	019	028	004	022	143	175									
SIGNATURE	072																
SONY	001	126	139														
SOUNDESIGN	003	004	028	043													
SPECTRICON	112																
SQUAREVIEW	052																
SSS	004	043															
STARLITE	043																
SUPRE_MACY	002																
SUPREME	001																
SYLVANIA	006	003	059	060	063	064	127	160	164	044	249						
SYMPHONIC	052	249															
TANDY	081																
TATUNG	056	062															
TECHNICS	034	080															
TECHNOL_ACE	028																
TECHWOOD	004																
TEKNIKA	002	003	004	024	028	043	072	101	143	103	164						
TELERENT	072																
TERA	172																
TMK	004																
TNCI	073																
TOSHIBA	015	030	007	040	062	101											
TOTEVISION	143																
UNIVERSAL	008	009															
VIDEO_CONCEPTS	146																
VIDIKRON	174	188	164														
VIDTECH	004																
WARDS	004	064	164	008	009	019	028	060	061	063	072	074	143				
WESTING_HOUSE	076																
YAMAHA	004	006															
YORK	004																
YUPITERU	043																
ZENITH	072	073	095	103	011	096											
ZONDA	112																

MAKER(BRAND) NAME	CODE NUMBER(3 DIGIT) LIST																			
ADMIRAL	025	53																		
AIKO	117																			
AIWA	034	161	101																	
AKAI	043	046	124	146																
AMERICA_ACTION	117																			
AMERICAN_HIGH	031																			
AMPRO	072																			
ANAM	031	103																		
ASHA	040																			
AUDIO_DYNAMICS	012	023	043																	
AUDIOVOX	101																			
BEAUMARK	040																			
BROKSONIC	035	037	129	025																
CALIX	101																			
CANON	028	031																		
CAPEHART	108																			
CCE	024	117																		
CINERAL	117																			
CITIZEN	101	117																		
COLT	024																			
CRAIG	003	040	135	024	101															
CUIRTIS_MATHES	031	041																		
CYBERNEX	040																			
DAEWOO	005	108	111	117	017	065	007	010												
DAYTRON	108																			
DBX	012	023	043																	
DYNATECH	034	053																		
ELECTROHOME	059	101																		
ELECTROPHONIC	101																			
EMERSON	006	029	035	037	129	153	017	025	027	031	034	036	046	101	131	138	117			
FISHER	003	010	008	009																
FUJI	031																			
FUNAI	034																			
GARRARD	034																			
GE	031	072	144	147	063	107	109	040	053											
GO_VIDIO	132	155	040	136																
COLDSTAR	101	004	012	020																
HARLEY_DAVIDSON	034																			
HARMAN_KARDON	012	045																		
HARWOOD	024																			
HITACHI	004	026	034	043	063	137	150													
HQ	034																			
HUGHES	004																			
INSTANTREPLAY	031																			
JCL	031																			
JCPENNEY	004	012	031	040	101															
JENSEN	043																			
JVC	048	043	055	060	130	150	152	012	031											
KEC	101	117																		
KENWOOD	034	150	014	048																
KLH	024																			
KODAK	031	101																		
LG	101	004	012	020																
LLOYD	034																			
LOGIK	024																			
LXI	003	009	017	034	101	004	106													

MAGIN	040																			
MAGNASONIC	117																			
MAGNAVOX	067	031	034	068	041	156	170													
MARANTZ	067	069	012	031																
MARTA	101																			
MATSUI	027	030																		
MATSUSHITA	031																			
MEI	031																			
MEMOREX	040	101	003	014	031	034	053	072	134	139	025									
MGA	045	046	059																	
MGN_TECHNOLOGY	040																			
MINOLTA	004	020																		
MITSUBISHI	059	061	051	004	046	020	045	053												
MOTOROLA	031	053																		
MTC	034	040																		
MULTITECH	024	034																		
NEC	012	023	043	048																
NIKKO	101																			
NOBLEX	040																			
NORDMENDE	043																			
OLYMPUS	031																			
OPTIMUS	053	101																		
OPTONICA	053	054																		
ORION	025																			
PANASONIC	031	070	133	140	163															
PENTAX	004	031	063	020																
PHILCO	031	034	067	025																
PHILIPS	031	034	054	067	101	150														
PILOT	101																			
PIONEER	021	004	048																	
PORTLAND	108																			
PROFITRONIC	040																			
PROTEC	024																			
PULSAR	072																			
QUARTZ	014																			
QUASAR	031	070	133	140	163	014														
RADIO_SHACK	123	034																		
RADIX	101																			
RANDEX	101																			
RCA	107	109	144	041	031	004	020	034	040	140	147	158	053							
REALISTIC	003	008	014	031	034	040	053	054	101	010										
RICO	058																			
RUNCO	072																			
SALORA	014																			
SAMSUNG	040	017	107	109	113	115	124	122												
SANKY	053																			
SANSUI	043	135	048	025	034															
SANYO	003	014	040	134																
SCOTT	017	037	129	131																
SEARS	003	004	008	014	017	081	101	010	031	034										
SHARP	053	031	054	159																
SHINTOM	024																			
SHOGUN	040																			
SINGER	024																			
SONY	001	057	058	003	052	053	031	154	171	009	034									
SOUNDESIGN	034																			
STS	004																			

2 VCR

SYLVANIA	031	034	059	067															
SYMPHONIC	034																		
TANDY	034	010																	
SATUNG	043																		
TEAC	034	043																	
TECHNICS	031	070																	
TEKNIKA	031	034	101																
THOMAS	034																		
TMK	006	040																	
TOSHIBA	017	131	004	008	059	082	150												
TOTEVISION	040	101																	
UNITECH	040																		
VECTOR RESEARCH	012																		
VIDEO CONCEPTS	012	034	046																
VIDEOSONIC	040																		
WARDS	003	004	017	024	031	034	040	053	054	131									
WESTINGHOUSE	024	025																	
XR-1000	024	031	034																
YAMAHA	012	034	043																
ZENITH	072	034	001	058	080	101	153	048	025										

3 DVD

MAKER(BRAND) NAME	CODE NUMBER(3 DIGIT) LIST																		
AIWA	202																		
ALPINE	221																		
APEX DIGITAL	251	246																	
ARCAM	215																		
CYBERHOME	220																		
DAEWOO	220																		
DENON	226	241																	
FUNAI	208																		
GE	230	231																	
GOLDSTAR	235	239																	
GO VIDEO	201																		
HARMAN KARDON	243																		
HITACHI	223																		
HITEKER	246																		
JVC	238																		
KENWOOD	216																		
KLH	210																		
LG	235	239																	
MAGNAVOX	254	237																	
MARANTZ	253	242																	
MCINTOSH	217																		
MEMOREX	207																		
MITSUBISHI	227																		
MYRYAD	224																		
NAD	247	239																	
NAKAMICHI	225																		
ONKYO	240																		
OPTIMUS	229																		
PANASONIC	228	206	226																
PHILIPS	253	237	214	242															
POPNEER	255	222	229																
PROCEED	245																		
PROSCAN	230	231																	
RCA	230	231																	
SAMSUNG	236	248	201																
SANSUI	205																		
SANYO	204																		
SHARP	252																		
SONY	232	218	203																
SYLVANIA	208																		
SYMPHONIC	208																		
TATUNG	224																		
TECHNICS	228																		
THETA DIGITAL	229																		
TOSHIBA	233	244	219	205															
VENTURER	209																		
YAMAHA	249	226																	
ZENITH	239	226	235																