

Programming Remote to Control Another Device

Entering a Code

1



Turn the device on.

2



Find the brand name of the device listed in the code tables that start on page 30.

3



Press and hold the Mode button until all the other Mode buttons light up. Once Mode buttons are lit, release the button.



For AUX Mode only. Press
0 for second TV.
1 for a second DVD/VCR.
2 for a tuner, amplifier, or audio receiver.

4



Enter one of the three-digit device codes from the table using buttons on the number pad, such as device code 560.

If you want to program Limited Mode, see *Placing Remote in Limited Mode* on page 16.