

# Programming Remote to Control Another Device

## Entering a Code, continued

5



Press POUND (#). The mode button flashes three times.

6



Turn device on and try other buttons to make sure the device responds the way you expect. If you want to try another code, begin from Step 1 again.

7



Turn off the device.

8



If you are unable to find a code that works or if all the keys are not supported, go to *Learning From Another Device's Remote* on page 25 to teach the key to the DISH Network remote.

If you are unable to find a code that works, try the instructions for *Scanning the Remote Database* on page 12.