

## 40.0 Remote Control Buttons That Don't Work or Do Something Different

Joey 4 and Wireless Joey 4	Hopper Plus
Record	Record
Cancel	Stop
Page up/down	Search
Sat Channel up/down---works in guide only	Green
Stop	Yellow
Search---get the mic popup, no keypad	Blue
Red---close/record menu	
Green---channel up	
Yellow---channel down	
Blue---Google Photos screen saver	