

# Remote Button Functions

## Power Button

- Cycle power on/off

## DVR Button

- Display Recordings Menu (if pressed one time)
- Display PrimeTime Anytime Recordings Menu (if pressed two times)

## Home Button

- Display the Home Screen (if pressed one time)
- Display Menu (if pressed two times)
- Display Diagnostics (if pressed three times)

## Guide Button

- Display Program Guide (if pressed one time)
- Access Guide Options (if pressed two times)

## Options Button

- Access applicable Options menu (if pressed one time)
- Display Accessibility Settings (if pressed twice on Live TV)

## Microphone Button

- Initiate voice commands (if pressed and held)

## Back/Live TV Button

- Return to the previous menu/screen (if pressed one time)
- Access Live TV (if pressed and held)

## Info/Help Button

- Display program info (if pressed one time)
- Display on-screen help overlays (if pressed and held)

## Left Button

- Left one

## Right Button

- Right one

## Up Button

- Up one
-

## Down Button

- Down one

## Select Button

- Select highlighted option
- Display program banner showing recording and playback options (if pressed on live TV)

## Skip Back Button

- Skip back 10 seconds (if pressed one time)
- Skip back 10 frames (if paused)
- Skip back 2 hours (if on Guide with "Enlarge Font" on)
- Skip back 2.5 hours (if on Guide with "Enlarge Font" off)
- Skip back 24 hours (if on Guide and held)
- Rewind speed to 15x (if pressed one time while rewinding)
- Rewind speed to 60x (if pressed two times while rewinding)
- Rewind speed to 300x (if pressed three times while rewinding)
- Navigate through tabs (if on an applicable menu)

## Play/Pause Button

- Start playback (if on Recordings menu)
- Resume playback (if paused)
- Pause (if watching live TV or a recording)

## Skip Forward Button

- Skip forward 10 seconds (if pressed one time)
- Skip forward 10 frames (if paused)
- Skip forward 2 hours (if on Guide with "Enlarge Font" on)
- Skip forward 2.5 hours (if on Guide with "Enlarge Font" off)
- Skip forward 24 hours (if on Guide and held)
- Fast Forward speed to 15x (if pressed one time while fast forwarding)
- Fast Forward speed to 60x (if pressed two times while fast forwarding)
- Fast Forward speed to 300x (if pressed three times while fast forwarding)
- Navigate through tabs (if on an applicable menu)

## Volume + Button

- Increase sound

## Volume - Button

- Decrease sound

## Recall Button

- Moves a recording to the trash (if pressed when on a recording selection on the Recordings menu)
- Recovers a deleted recording from the trash (if pressed when on a recording selection on the Trash menu)
- Recalls to last channel watched (if "Tunes to Last Channel" is enabled)
- Recalls to last channel watched and displays the Recall Banner (if "Both (Tunes and Shows Banner)" is enabled)

## Mute Button

- Cycles sound on/off

## Channel Up Button

- Changes the channel up one (if watching live TV)
- Pages up (if on Guide or a menu)

## Channel Down Button

- Changes the channel down one (if watching live TV)
- Pages down (if on Guide or a menu)

## Number Pad

- Input alphanumeric values

## Customizable Button

- Programmable button

## SAT Button

- Put in SAT mode
- Perform HDMI-CEC function (if enabled)

## TV Button

- Put in TV mode

## AUX Button

- Put in AUX mode

## Input Button

- Swap Picture in Picture windows (if in SAT mode, P.i.P. is enabled, and "Swaps Main and P.i.P. Windows" is enabled)
- Swap to last channel, maintaining swap buffer (if in SAT mode and "Swaps to Last Channel" is enabled or if in SAT mode, P.i.P. is disabled, and "Swaps Main and P.i.P. Windows" is enabled)
- Display Swap Banner (if in SAT mode and "Shows Swap Banner" is enabled)
- Cycle through TV Inputs (if in TV mode)

## Check Switch Shortcut (only during installation Wizard before activation)

- Press Skip back button followed by Recall, then Skip Back button again

## To go back to Installation Wizard

- From Diagnostics screen press Info button followed by Recall