


## Connecting Your DSR922 4DTV™


- 1) Point your dish at satellite G1 using your old receiver and antenna positioner, if possible. (If you can't move your dish with your old receiver, go to page 33 of your 4DTV Operator's Guide and start programming your DSR922 per the instructions. When you get G1 programmed, get the download on Channel 3.)
- 2) Unplug your old receiver from the AC wall outlet.
- 3) Disconnect wires and coax from old receiver and connect them to your 4DTV receiver using the diagram below.

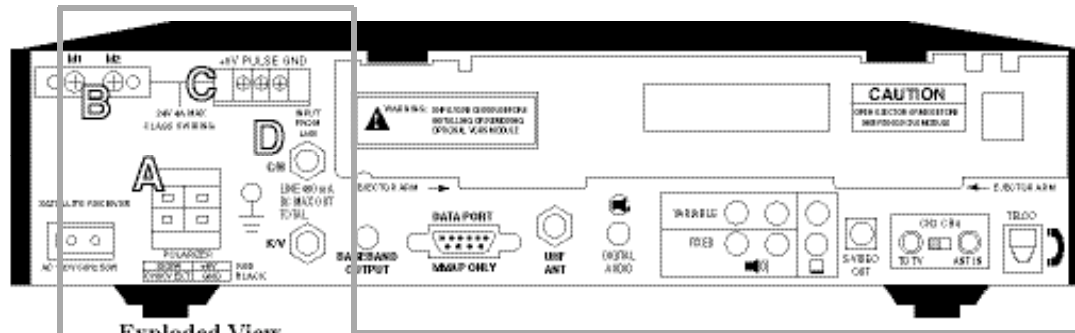

### TECH TIP

If you hook up your DSR 922 and are unable to get the DC light to turn on, perform the following procedure, which resets the receiver to the factory defaults: On your remote, press **"OPTION, 6, 7, 7, 8, 7, ENTER"** and retry Step 2. You might need to reset the receiver several times before the light will stay on.

### Exploded View

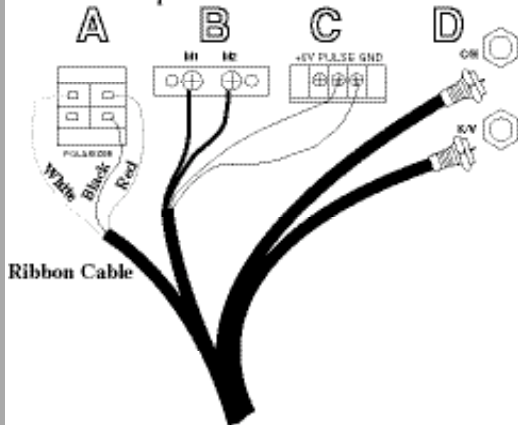

### To Connect Your DSR922 4DTV Receiver

Follow steps 1 - 3 above before connecting your 4DTV receiver.

- A** Polarotor Wires. Connect *white* wire to upper left connector (skew), *red* wire to upper right connector (+5v), and the *black* wire to lower right connector (GND).
- B** Actuator Wires. Remove connector cover. Connect the 2 *heavy* wires to M1 & M2 (either color to either terminal) for the actuator motor. If your dish moves East when you press the West button, reverse these two wires at the receiver.
- C** Connect the 2 *thin* wires to Pulse and GND (either color to either terminal) for the actuator sensor.
- D** LNB coax. Connect these coax wires to the C/H for C-band, and K/V for Ku-band.

### How To Program Your DSR922 4DTV Receiver

- 1) Install your decoder module and plug receiver into AC wall outlet.
- 2) Turn on your 4DTV receiver to program G0 into the receiver. Programming is possible by pressing **"OPTIONS, 6,4,3,3"**. This brings up **"Satellite Listings."** Highlight **G1**. Press **"ENTER"**. This brings up **"Satellite Menu"**. Follow the steps as shown on screen until they indicate you are receiving the best **SIGNAL/QUALITY**. Press **"GO BACK"**, then **"ENTER"**. Adjust the skew to obtain the best picture and dish position.
- 3) Staying on G1, tune to Channel 3. There is no video on this channel. Make sure the DC light on the front panel is ON. If not, bump the dish E & W and adjust the skew. This ensures you are receiving a signal and will receive the proper download. Let the unit download for up to two hours. During the download waiting period, call the Skyvision Programming Hotline at 800-500-9268 and ask them to "activate my DSR922 4DTV receiver." Even if you are not purchasing subscription programming, you must call the Skyvision Programming Hotline so they can set the clock on your receiver, enable the reception of any "Free Preview" channels, and enable the Interactive Program Guide (IPG).
- 4) When the programming download is complete, program your East and West limits, then the remaining satellites. Refer to page 39 of your 4DTV Operator's Guide.