

# HOPPER / JOEY REMOTE CONTROL COLOR BUTTON MENU SHORTCUT LIST

Latest 20 November 2013

FROM SCREEN	BUTTON	MENU / SCREEN	
Live TV	Red	TV Activity	
	Yellow - Green	System Status	
	Yellow	Settings	
	Yellow - 1	Parental Controls	
	Yellow - 2	Guide Settings	
	Yellow - 2 - 1	Favorite Channels	
	Yellow - 2 - 2	Format Guide	
	Yellow - 2 - 3	Cursor	
	Yellow - 3	Closed Captioning	
	Yellow - 4	Audio	
	Yellow - 4 - 1	Alternate Audio	
	Yellow - 4 - 2	Audio Output	
	Yellow - 5	DVR Defaults	
	Yellow - 5 - 1	DVR Timer Defaults	
	Yellow - 5 - 2	PrimeTime Anytime	
	Yellow - 6	Remote Manager	
	Yellow - 7	Format TV	
	Yellow - 7 - 1	HDTV	
	Yellow - 7 - 2	Screen Adjustment	
	Yellow - 8	Network Setup	
	Yellow - 8 - 1	Broadband	
	Yellow - 8 - 2	Phone Line	
	Yellow - 8 - 3	Tests	
	Yellow - 8 - 4	Whole-Home	
	Yellow - 8 - 5	Caller ID	
	Yellow - 9	Diagnostics	
	Yellow - 9 - 1	N/A Joey	Over the Air Locals
	Yellow - 9 - 2	N/A Joey	Point dish
	Yellow - 9 - 3	9 - 2 Joey	System Status
	Yellow - 9 - 4	9 - 3 Joey	Factory Defaults
	Yellow - 9 - 5	9 - 4 Joey	System Wizard
	Yellow - 9 - 6	9 - 5 Joey	Updates
	Yellow - 9 - 7	9 - 6 Joey	TV Enhancements
	Yellow - 9 - 8	9 - 7 Joey	HDMI - CEC
	Yellow - Bluetooth	N/A Joey	Bluetooth
	Yellow - Paired Devices	N/A Joey	Device Manager
	Yellow - Yellow	N/A Joey	Point Dish
	Yellow - Blue		Network Setup
	Yellow - Blue - 1		Broadband
	Yellow - Blue - 2		Phone Line
Yellow - Blue - 3		Tests	
Yellow - Blue - 4		Whole-Home	
Yellow - Blue - 5		Caller ID	
Blue		Apps	
Main Menu	Green	On Demand	
	Yellow	Settings	
	Yellow - Yellow	Point Dish	
Settings Menu	Green	System Status	
	Yellow	Point dish	
	Blue	Network Setup	
Network Setup	Green	System Status	
	Yellow	Point Dish	
Diagnostics	Green	System Status	
	Yellow	Point dish	
	Blue	Network Setup	

If an option in a menu has a color next to it, press the matching color button. Your choice both highlights and selects the option. Settings menu tiles are invisibly labeled 1-9, just count across the screen and press that number. Point Dish is not available for the Joey.

# HOPPER / JOEY REMOTE CONTROL COLOR BUTTON MENU SHORTCUT LIST

Latest 20 November 2013

<b>Live TV</b>	<b>TV Activity</b>		<b>System - Status</b> <b>Settings</b> <b>Point Dish x2</b> <b>Network - Setup</b>	<b>Apps</b>
<b>Main Menu</b>		<b>On Demand</b>	<b>Settings</b> <b>Point Dish x2</b>	
<b>Settings Menu</b>		<b>System Status</b>	<b>Point Dish</b>	<b>Network Setup</b>
<b>Network Setup</b>		<b>System Status</b>	<b>Point Dish</b>	
<b>Diagnostics</b>		<b>System Status</b>	<b>Point Dish</b>	<b>Network Setup</b>

If an option in a menu has a color next to it, press the matching color button. Your choice both highlights and selects the option.

Settings menu tiles are invisibly labeled 1-9, just count across the screen and press that number.

Point Dish is not available for the Joey.

# HOPPER / JOEY REMOTE CONTROL COLOR BUTTON MENU SHORTCUT LIST

Latest 20 November 2013

FROM SCREEN	BUTTON	MENU / SCREEN
Live TV	Red	TV Activity
	Yellow - Green	System Status
	Yellow	Settings
	Yellow - Yellow	Point Dish
	Yellow - Blue	Network Setup
	Blue	Apps
Main Menu	Green	On Demand
	Yellow	Settings
	Yellow - Yellow	Point Dish
Settings Menu	Green	System Status
	Yellow	Point dish
	Blue	Network Setup
Network Setup	Green	System Status
	Yellow	Point Dish
Diagnostics	Green	System Status
	Yellow	Point Dish
	Blue	Network Setup

If an option in a menu has a color next to it, press the matching color button. Your choice both highlights and selects the option.  
 Settings menu tiles are invisibly labeled 1-9, just count across the screen and press that number.  
 Point Dish is not available for the Joey.