

# HOPPER / JOEY REMOTE CONTROL COLOR BUTTON MENU SHORTCUT LIST

Latest 31 May 2014

FROM SCREEN	BUTTON		MENU / SCREEN
Live TV	Red		TV Activity
	Yellow -	Green	System Status
	Yellow		Settings
	Yellow - 1		Parental Controls
	Yellow - 2		Guide Settings
	Yellow - 2 - 1		Favorite Channels
	Yellow - 2 - 2		Format Guide
	Yellow - 2 - 3		Cursor
	Yellow - 3		Closed Captioning
	Yellow - 4		Audio
	Yellow - 4 - 1		Alternate Audio
	Yellow - 4 - 2		Audio Output
	Yellow - 5		DVR Defaults
	Yellow - 5 - 1		DVR Timer Defaults
	Yellow - 5 - 2		PrimeTime Anytime
	Yellow - 6		Remote Manager
	Yellow - 7		Screen Adjustment
	Yellow - 7 - 1		HDTV
	Yellow - 7 - 2		Format TV
	Yellow - 8		Network Setup
	Yellow - 8 - 1		Broadband
	Yellow - 8 - 2		Phone Line
	Yellow - 8 - 3		Tests
	Yellow - 8 - 4		Whole-Home
	Yellow - 8 - 5		Caller ID
	Yellow - 8 - 6		Wireless Joey Access Point
	Yellow - 9		Diagnostics
	Yellow - 9 - 1	N/A Joey	Over the Air Locals
	Yellow - 9 - 2	N/A Joey	Point dish
	Yellow - 9 - 3	9 - 2 Joey	System Status
	Yellow - 9 - 4	9 - 3 Joey	Factory Defaults
	Yellow - 9 - 5	9 - 4 Joey	System Wizard
	Yellow - 9 - 6	9 - 5 Joey	Updates
	Yellow - 9 - 7	9 - 6 Joey	TV Enhancements
	Yellow - 9 - 8	N/A Joey	Control 4 Automation
	Yellow - 9 - 9	9 - 7 Joey	Multi-Swap
	Yellow - 9 - Reset Receiver	9 - 8 Joey	Reset Receiver
	Yellow - Bluetooth	N/A Joey	Bluetooth
	Yellow - Paired Devices	N/A Joey	Device Manager
	Yellow - HDMI - CEC		HDMI - CEC
	Yellow - Yellow	N/A Joey	Point Dish
	Yellow -	Blue	Network Setup
	Yellow -	Blue - 1	Broadband
	Yellow -	Blue - 2	Phone Line
	Yellow -	Blue - 3	Tests
	Yellow -	Blue - 4	Whole-Home
	Yellow -	Blue - 5	Caller ID
	Yellow -	Blue - 6	Wireless Joey Access Point
	Blue		Apps
Main Menu	Green		On Demand
	Yellow		Settings
	Yellow - Yellow	N/A Joey	Point Dish
Settings Menu	Green		System Status
	Yellow	N/A Joey	Point dish
	Blue		Network Setup
Network Setup	Green		System Status
	Yellow	N/A Joey	Point Dish
Diagnostics	Green		System Status
	Yellow	N/A Joey	Point dish
	Blue		Network Setup

If an option in a menu has a color next to it, press the matching color button. Your choice both highlights and selects the option. Settings menu tiles are invisibly labeled 1-9, just count across the screen and press that number.

# HOPPER / JOEY REMOTE CONTROL COLOR BUTTON MENU SHORTCUT LIST

Latest 31 May 2014

<b>Live TV</b>	<b>TV Activity</b>		<b>System - Status</b> <b>Settings</b> <b>Point Dish x2</b> <b>Network - Setup</b>	<b>Apps</b>
<b>Main Menu</b>		<b>On Demand</b>	<b>Settings</b> <b>Point Dish x2</b>	
<b>Settings Menu</b>		<b>System Status</b>	<b>Point Dish</b>	<b>Network Setup</b>
<b>Network Setup</b>		<b>System Status</b>	<b>Point Dish</b>	
<b>Diagnostics</b>		<b>System Status</b>	<b>Point Dish</b>	<b>Network Setup</b>

If an option in a menu has a color next to it, press the matching color button. Your choice both highlights and selects the option.

Settings menu tiles are invisibly labeled 1-9, just count across the screen and press that number.

Point Dish is not available for the Joey.

# HOPPER / JOEY REMOTE CONTROL COLOR BUTTON MENU SHORTCUT LIST

Latest 31 May 2014

FROM SCREEN	BUTTON	MENU / SCREEN
Live TV	Red	TV Activity
	Yellow - Green	System Status
	Yellow	Settings
	Yellow - Yellow	Point Dish
	Yellow - Blue	Network Setup
	Blue	Apps
Main Menu	Green	On Demand
	Yellow	Settings
	Yellow - Yellow	Point Dish
Settings Menu	Green	System Status
	Yellow	Point dish
	Blue	Network Setup
Network Setup	Green	System Status
	Yellow	Point Dish
Diagnostics	Green	System Status
	Yellow	Point Dish
	Blue	Network Setup

If an option in a menu has a color next to it, press the matching color button. Your choice both highlights and selects the option.

Settings menu tiles are invisibly labeled 1-9, just count across the screen and press that number.

Point Dish is not available for the Joey.