


DishPro Quad Installation Examples - Page 1 of 2

After running Check Switch


DishPro Quad Default States




Default states occur before the check switch is run.

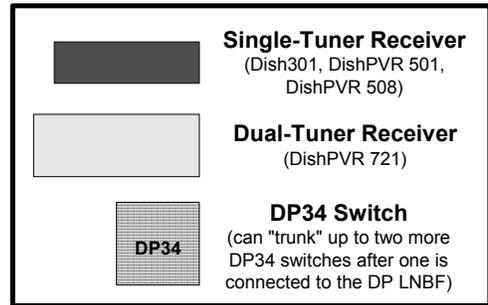


Direct-Connect to 4 Single-Tuner Receivers

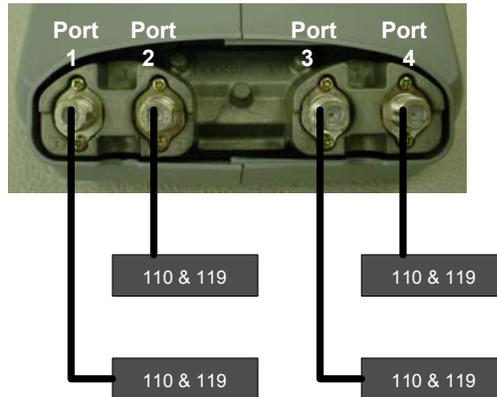

Direct-Connect to 2 Single-Tuner Receivers and 1 Dual-Tuner Receiver

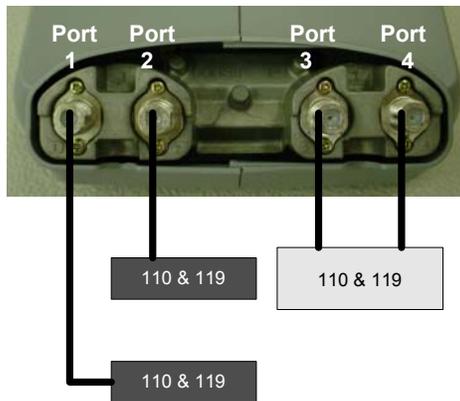


OR

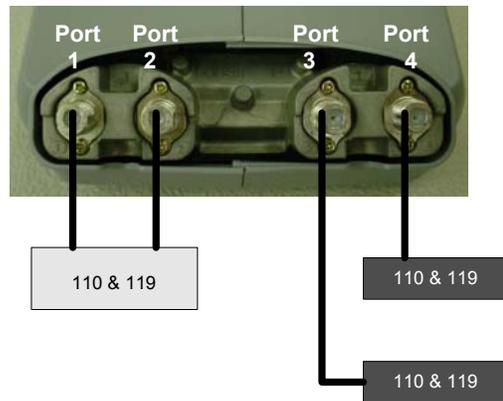


DishPro Quad Installation Examples - Page 2 of 2

 
After running Check Switch

 Single-Tuner Receiver (Dish301, DishPVR 501, DishPVR 508)	 Dual-Tuner Receiver (DishPVR 721)	 DP34 Switch (can "trunk" up to two more DP34 switches after one is connected to the DP LNBF)
---	--	---

Direct-Connect to 2 Single-Tuner Receivers and a DP34 Switch

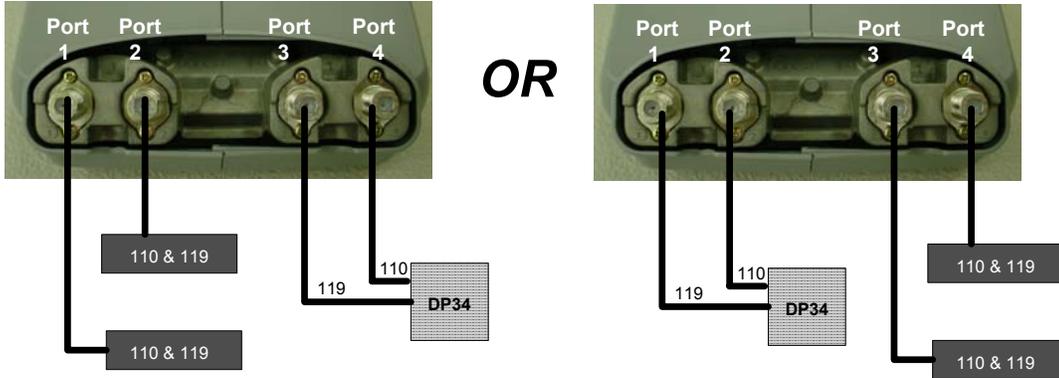

Direct-Connect to 1 Dual-Tuner Receiver and a DP34 Switch

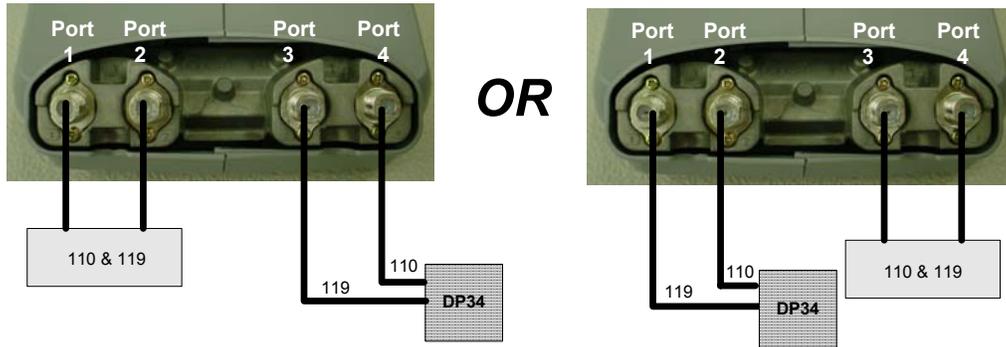

Direct Connect to 2 DP34 Switches (trunk together a maximum of 3 each, if needed)

