 


Google TV™ Honeycomb Update

Google TV with Android 3.1 is now available on the Logitech Revue. Google TV integrates TV, the Web, movies and apps for a complete entertainment experience on your HDTV. Please use this guide to see what's new or enhanced.

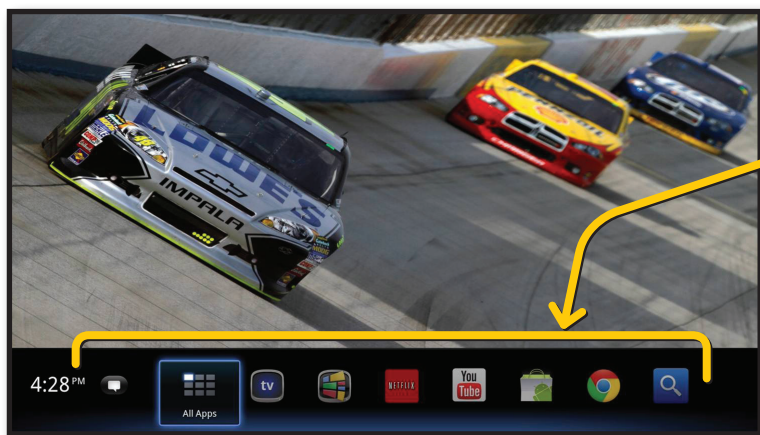

Home Page

The whole screen overlay has been replaced with a home bar along the bottom of the screen. Use the **Home** key on your Logitech remote to quickly access your favorite shortcuts and widgets, without interrupting your programming.

 

The home bar is customizable; you can delete, move and add new items. To make changes to the Home bar, from your Logitech keyboard press the **Home** key and then press the **Menu** key.



Android Market

Open "Android Market" to search and download from a variety of apps that have been developed specifically for the Android platform and Google TV. Some apps are free, there is a charge for others. Some featured apps include: Buddy TV, Thuuz and Logitech Media Player.

To get there, press the **Home** key on your Logitech keyboard, navigate to the right and then select **Android Market**.

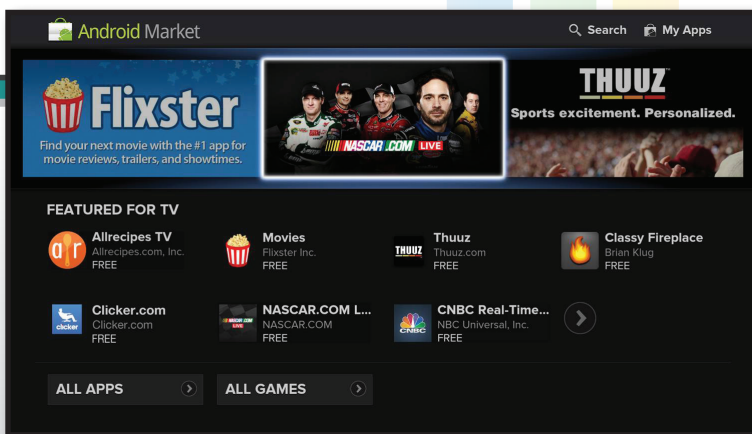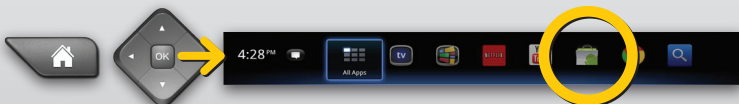



All Apps

The "All Apps" screen displays all of your channel shortcuts, preloaded apps and apps downloaded from Android Market.

Certain apps are preloaded on Google TV, including Netflix, Pandora, Napster and YouTube.

  To get there, press the **Home** key on your Logitech keyboard and then select **All Apps**.

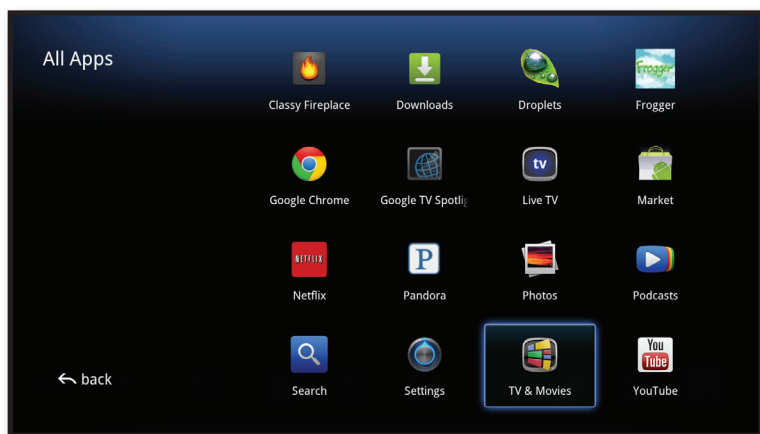

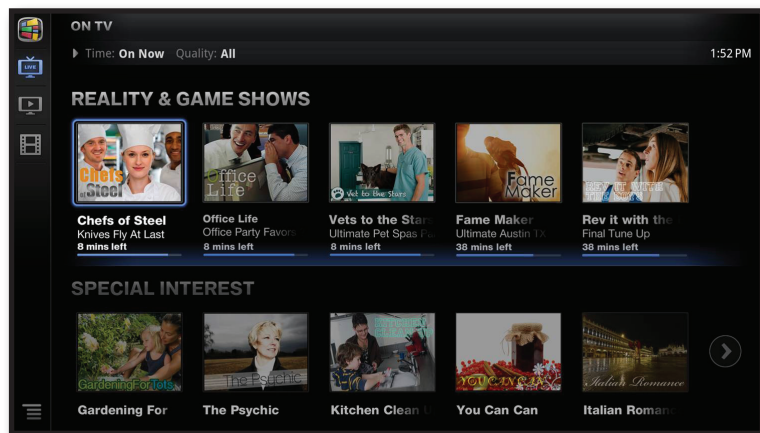

TV & Movies

 
Formerly "What's On", the "TV & Movies" app provides a single location to browse for all live and on-demand content including TV shows, your DISH DVR, Netflix, the Web, Amazon, and YouTube.

To get there, press the **Home** key, navigate to the right and then select **TV & Movies**.



Search

The Google TV search experience has been improved. Spend less time searching and more time watching! Press the **Search** key on your Logitech keyboard to quickly browse for content across your DISH DVR, Apps, Bookmarks, TV, and the Web.

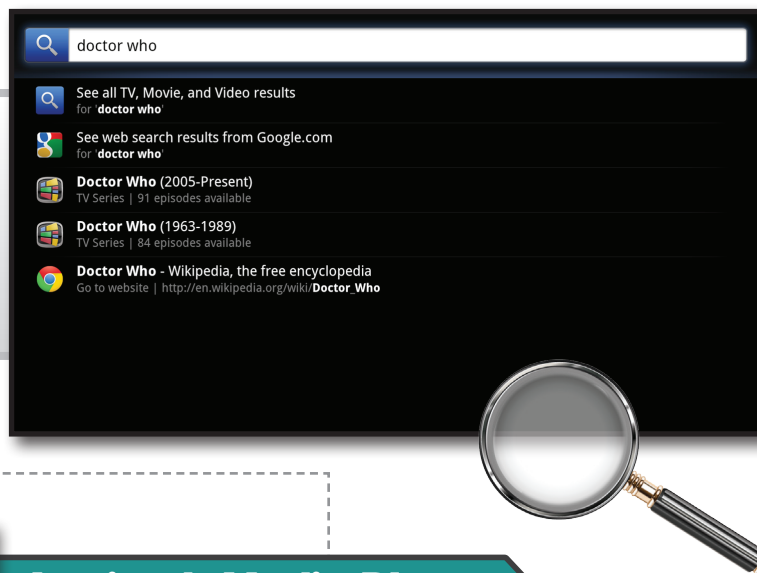

Logitech Media Player

Unlock your music, video and photo library to allow Revue to search for them over your home network then watch them all in high definition on your HDTV. And now the Revue supports even more file formats.

To get to the Media Player, press the **Home** key, select **All Apps** and then select the **Logitech Media Player**.



How do I get the Google TV with Android 3.1 update? To receive the update, make sure your Logitech Revue box is connected to the Internet and turn it on. Click **Accept** to begin downloading the update. After it has finished downloading, select **Restart and Install**. Once the install has completed, you will be taken through a tutorial that explains the new features of Google TV with Android 3.1. To manually check for the update, go to Settings > About > System Update.

For more information about how to use the Logitech Revue keyboard controller, please refer to the *Logitech Revue with Google TV Keyboard Controller* document on DISH Portal: <http://dishportal.dishnetwork.com/docs/DOC-2439>.

