

# Sling® Extender

## QUICK START GUIDE



### What's in the Box



SLING EXTENDER



ETHERNET CABLE

HDMI CABLE

SLINGLINK® 400P POWER SUPPLY

REMOTE CONTROL

AAA BATTERIES (4)

MOUNTING BRACKET WITH SCREWS

REMOTE CONTROL ANTENNA

### What You Need

- Internet service with a wired or wireless router.
- A DISH Network® receiver that is SlingLoaded™ or Sling-capable. Please visit [dish.com/slingextender](http://dish.com/slingextender) for a list of supported equipment.
- A DISH Network online ID. If you do not already have your online ID, visit [dish.com](http://dish.com) and click "Register."
- If no HDMI ports are available on your TV, then component or composite video and audio cables will be required.

### 1 Prepare to Connect Your Sling Extender

- 1 Check that your DISH Network receiver is properly connected to Internet by accessing the Broadband Setup menu found on your receiver. For more information, visit [dish.com/getconnected](http://dish.com/getconnected) for help.
- 2 Insert the batteries into the remote control.
- 3 Attach the remote control antenna to the connector labeled REMOTE ANTENNA on the back of the Sling Extender.
- 4 Place the Sling Extender near your TV, or attach it to the back of your TV with the mounting bracket provided. For assistance with the mounting bracket installation, follow the steps under "Mounting Bracket Setup."

### 2 Connect the Sling Extender to Your TV

Check the available inputs on your TV. You can connect the Sling Extender to your TV using HDMI, component, or composite video connections. HDMI or component connections offer the best high-definition video experience, while a composite connection offers standard-definition video quality only.


If you have an HDMI connection on your TV, connect the Sling Extender with the included HDMI cable.



OR

If your TV does not have an available HDMI connection, use a component video cable (not included):

- 1 Connect the red, green, and blue connectors to the corresponding jacks on the back of the Sling Extender, and connect the other ends of the cable to the corresponding inputs on your TV.
- 2 Attach the red and white audio connectors of a stereo audio cable (not included) to the jacks on the back of the Sling Extender. Connect the other ends of the cable to the corresponding audio inputs on your TV.

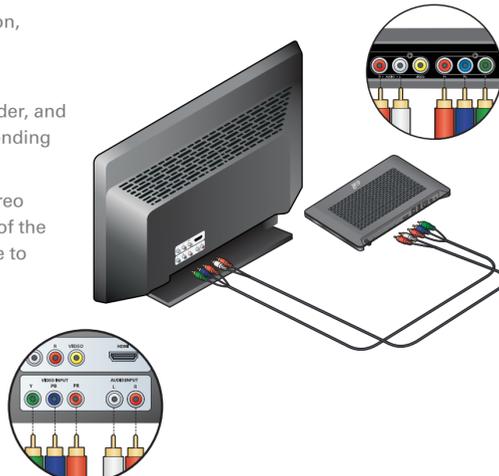

OR


For a standard-definition connection, you can use a composite cable (not included), connecting the red, white, and yellow connectors from the Sling Extender to the TV.

### 3 Connect the Sling Extender to Your Home Network

You can connect the Sling Extender to your home network with a wired or wireless (WiFi) connection. If your home network router is not near your TV, you can use the included SlingLink® 400P, which is a combined powerline network adapter and power supply.

If your router is near your TV:


- 1 Plug one end of the included Ethernet cable into the jack labeled ETHERNET on the back of the Sling Extender.
- 2 Plug the other end of the Ethernet cable into your home network router.

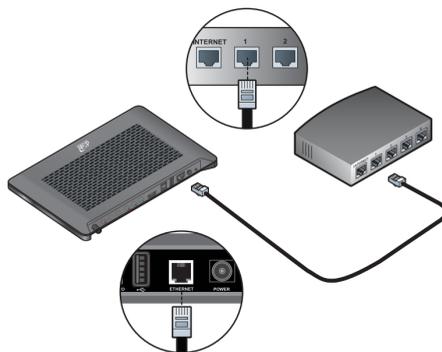

OR

If your router is far from your TV:

- 1 Plug one end of the included Ethernet cable into the jack labeled ETHERNET on the back of the Sling Extender.
- 2 Plug the other end into the Ethernet jack on the included SlingLink 400P power supply.
- 3 Connect a SlingLink Connector (not included) to your router. SlingLink Connector is a homeplug powerline network adapter provided by DISH Network. For more information on purchasing the SlingLink Connector, please visit [dish.com/getconnected](http://dish.com/getconnected).

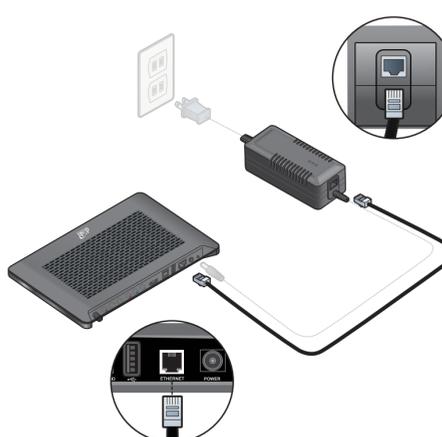


OR

If you want to connect wirelessly, connect the Sling Extender to your wireless router using the optional WiFi Broadband Connector, sold separately. Sling Extender works only with the WiFi Broadband Connector provided by DISH Network. For more information on purchasing the WiFi Broadband Connector, please visit [dish.com/getconnected](http://dish.com/getconnected).

### 4 Connect the Power Source

- 1 Insert the SlingLink 400P power supply into the jack labeled POWER on the back of the Sling Extender.
- 2 Plug the AC power cord of the SlingLink 400P into an electrical outlet.

**TIP**—Do not plug the SlingLink 400P into a power strip if you also use it to connect to your home router.

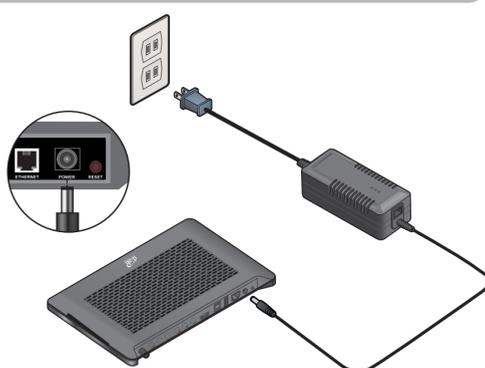

### 5 Configure the Sling Extender

- 1 Turn on the TV. Select the video input on your TV to which the Sling Extender is connected.
- 2 Follow the on-screen instruction to pair the remote control with your Sling Extender. Press and hold the SAT button until it beeps.
- 3 Continue following the on-screen instructions to complete the Sling Extender setup. If you are using a password-protected wireless network, you will need the password key during setup.
- 4 The final on-screen instruction directs you to login to your DISH Network account. Please note that the password is case-sensitive. If you do not already have your online ID, visit [dish.com](http://dish.com) and click "Register".

Congratulations! You are now ready to watch your DISH Network TV programming.

### Mounting Bracket Setup

- 1 Attach the mounting bracket by inserting the included mounting screws into the mount screw holes on the back of your TV.
- 2 Attach the Sling Extender and power supply as indicated below.

**Note:** The mounting bracket is only intended to be used with VESA-mount hardware. Use of the bracket in other configurations is not recommended. Please refer to your TV owner's manual if you are unsure if your TV supports VESA-mount hardware.



### About the Sling Extender Front Panel Indicators

#### POWER

**Amber:** The Sling Extender is plugged into AC power and in standby mode. You should see the DISH Network screensaver on your TV when in this mode.

**Blue:** The Sling Extender is powered up.

#### LINK

**Green:** The Sling Extender is successfully connected to your home network.



### Troubleshooting Information

Please contact DISH Network at [dish.com/chat](http://dish.com/chat), or call 1-800-894-9131 for troubleshooting information.

### Frequently Asked Questions

#### Is an Internet connection required for the Sling Extender to work?

Yes, an Internet connection is required to authenticate your receiver with the Sling Extender and your DISH Network account. Video content is delivered over your home network and will not impact your Internet connection.

#### I have multiple Sling-capable receivers on my DISH Network account. How do I know which one to connect the Sling Extender to?

Your receivers are identified through a receiver ID. Access the Sling Extender on-screen menu to choose the receiver you wish to connect to (Menu > Settings > Receivers). To help you identify each receiver, customize the name by visiting [dish.com](http://dish.com).

#### Where do I go to find out more about my Sling Extender and other related products provided by DISH Network?

Please visit [dish.com/tveverywhere](http://dish.com/tveverywhere).