

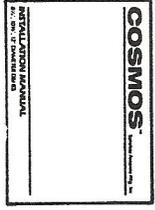



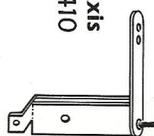

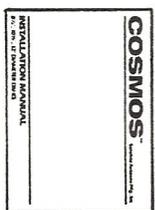


# PARTS LIST








## 8.5' COSMOS DISH

	
Crossbar No. 1850	Tripod Bracket No. 1715
	
Hub Plate No. 1810 (back)	Azimuth Bar No. 1520
	
Hub Plate No. 1910 (front)	Plastic Base Plate
	
Panel No. 1110	Feedhorn Cover No. 20100
	
Mount Axis No. 1410	Feedhorn Plate No. 1610
	
Actuator Mount No. 1450	Pedestal No. 1210
	
Bolt Kit No. 1310	Tripod Legs No. 1710
	
Mount Axis Adjustment No. 1510	COSMOS Manual No. 10200

## 10.5' COSMOS DISH

	
Crossbar No. 1860	Tripod Bracket No. 1815
	
Hub Plate No. 2810 (back)	Azimuth Bar No. 1620
	
Hub Plate No. 2910 (front)	Plastic Base Plate
	
Panel No. 2110	Feedhorn Cover No. 20100
	
Mount Axis No. 2410	Feedhorn Plate No. 2610
	
Actuator Mount No. 2450	Pedestal No. 2210
	
Bolt Kit No. 2310	Tripod Legs No. 2710
	
Mount Axis Adjustment No. 2510	COSMOS Manual No. 10200

## 12' COSMOS DISH

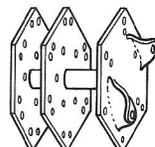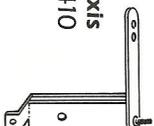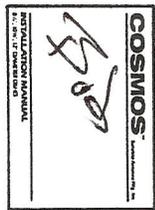	
Crossbar No. 1870	Tripod Bracket No. 1915
	
Complete Hub No. 3810	Azimuth Bar No. 1720
	
Panel No. 3110	Plastic Base Plate
	
Mount Axis No. 3410	Feedhorn Cover No. 20100
	
Actuator Mount No. 3450	Feedhorn Plate No. 3610
	
Pedestal No. 3210	Bolt Kit No. 3310
	
Mount Axis Adjustment No. 3510	Tripod Legs No. 3710
	
COSMOS Manual No. 10200	