

YOUR DTVPAL DIGITAL-TO-ANALOG TV CONVERTER

TV GUIDE ON SCREEN OR GUIDE PLUS SETUP

You only need to perform the following steps if you have a TV, DVD recorder, or VCR that includes TV Guide On Screen or Guide Plus. If you do not have a TV Guide On Screen or Guide Plus device, you will be able to use the DTVPal's built-in Program Guide.

TV GUIDE ON SCREEN OR GUIDE PLUS SETUP

If you are currently using TV Guide On Screen or Guide Plus in your analog TV, DVD recorder, or VCR for over-the-air TV reception (not cable or satellite service), you will need to change your TV Guide On Screen/Guide Plus setup option to continue receiving your TV Guide On Screen/Guide Plus listings.


The steps provided walk you through the changes you need to make to continue receiving show listings when your DTVPal is connected to your Guide-enabled product.

For more detailed instructions or updated support information, refer to www.tvgos.com/support.

Getting Started

To set up the TV Guide On Screen to communicate with your DTVPal, you'll need:

- **G-LINK Cable**—this cable is required to continue receiving TV Guide On Screen/Guide Plus listings in your Guide-enabled product.
The G-LINK cable was shipped with your original TV Guide On Screen/Guide Plus-enabled TV, DVD recorder, or VCR. If you no longer have the G-LINK cable, visit www.tvgos.com/support.
- **Substitute ZIP Code**—you will need the five-digit code associated with your broadcast area. During setup, you will enter the Substitute ZIP Code in place of your actual ZIP code. These codes are provided on page 28 of this User's Guide.

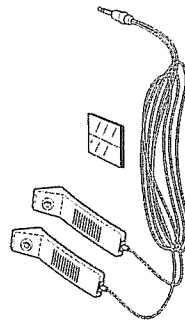

Setting Up Your DTVPal

- 1 Connect your DTVPal using the instructions on page 2. You should have connected the **TV SET OUT** or **Audio/VIDEO** output to the corresponding input on your Guide-enabled TV, DVD recorder, or VCR.

THANKS

FOR


Being

Satellite Guys!

YOUR DTVPAL DIGITAL-TO-ANALOG TV CONVERTER

TV GUIDE ON SCREEN OR GUIDE PLUS SETUP



- Using your DTVPal remote control, press **MENU**, select **Setup**, then **System Setup**, **TV Guide Setup**, then **TV Guide & Guide +**.

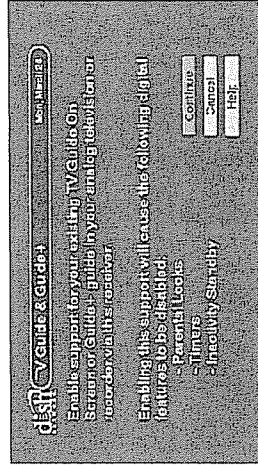

TV Guide Setup


Connecting the G-LINK Cable

- Connect the G-LINK cable to the G-LINK jack on the back of your TV Guide-enabled TV, DVR recorder, or VCR.

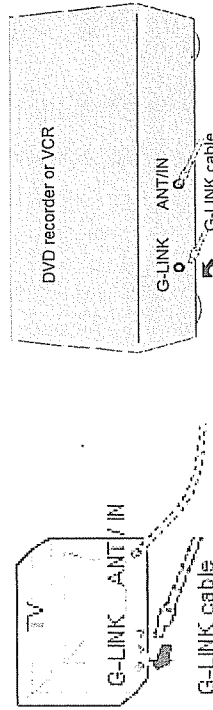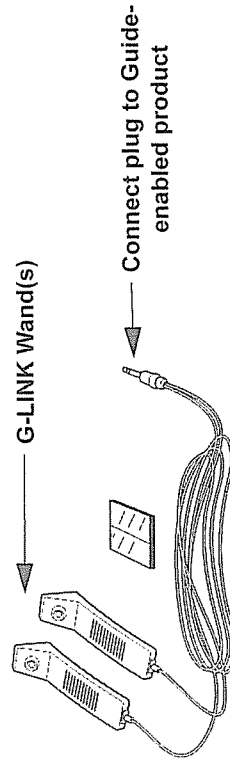

- Place the G-LINK wand approximately one inch in front of the remote control sensor on your DTVPal. Use tape to secure the G-LINK wand to the DTVPal's front panel.

Note: The remote control sensor is located on the middle of your DTVPal's front panel.

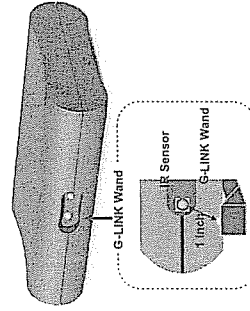

YOUR DTVPAL DIGITAL-TO-ANALOG TV CONVERTER

TV GUIDE ON SCREEN OR GUIDE PLUS SETUP

Updating TV Guide On Screen and Guide Plus Setup

After connecting your DTVPal to your TV Guide On Screen or Guide Plus-enabled device, use these steps to complete the setup.

Note: The menu options on your Guide-enabled device may differ from the ones described here.

- Using the remote control for your Guide-enabled TV, DVD recorder, or VCR, press **GUIDE** to open your Guide Listings screen.
- On the Service Bar, select **Setup**, then **Change System Settings**.
- If available, select **No**, **repeat setup**. Otherwise, follow the on-screen prompts.

Entering Your Location

The Guide uses setup information to provide TV show listings and channel lineups for your area.

- Select **USA** as the country.
- Use the remote control **NUMBER PAD** or the **UP** and **DOWN ARROWS** to enter the Substitute ZIP Code for your area. See page 28 for the ZIP code listing.

Set Up Your DTVPal

For your Guide to communicate with your DTVPal, the Guide must be set up as though the DTVPal is a cable box, even though you do not have cable service. Use these steps to finish setting up your DTVPal.

- Select **Cable** with a **Cable Box** or **Yes I have cable**.
- If asked, select the type of audio/video input you used to connect your DTVPal to your Guide-enabled device, then follow the on-screen prompts.
- If a connection diagram displays, verify the G-LINK cable is connected as shown.
- For brand of cable box, select **Scientific Atlanta**.
- Follow the on-screen instructions and verify that your DTVPal changed channels.
- When asked if the device has tuned to Channel 9, select **Yes**.
- On the confirmation screen, select **Yes**, **continue/finish setup process**. If you are asked about setting up a VCR, select the appropriate answer for your installation.

YOUR DTVPAL DIGITAL-TO-ANALOG TV CONVERTER

TV GUIDE ON SCREEN OR GUIDE PLUS SETUP

Completing Setup

- After setup is complete, exit the Guide setup screen. To begin receiving listings, be sure to turn off the Guide-enabled device when not in use.
 - Within 24 hours, you will begin receiving TV show listings. It may take up to six days to receive the full eight days of initial show listings.
 - Show listings are updated several times per day. Be sure to leave your DTVPal powered on to have the most updated listings information. It is normal for your DTVPal to change channels while the Guide-enabled device is powered off and is setting up or receiving new data.
- Note:** When you receive your new Guide listings, you will notice that your channel numbers have changed. Refer to *Tuning to Your New Channel Numbers*, below, or visit www.tvgos.com/support for more details.

Tuning to Your New Channel Numbers

After connecting your Guide-enabled TV or DVD recorder to your DTVPal or VCR, the channel numbers used in your Guide Listings will change.


Understanding Your New Channel Numbers

Your analog TV, DVD recorder, or VCR does not know how to tune to digital channels. The channel number assigned to your channel lineup allows your DTVPal to find the correct digital channels.

Finding Channel Numbers

In any Guide version, you can identify the channel number using the Channel Editor.

- 1 On the Service Bar, highlight **Listings**. Press MENU on the Guide-enabled device's remote control, then select **Edit Channel**.
- 2 The Channel Editor displays. Note the Guide channel number for each channel.

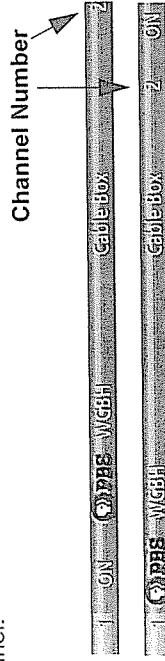

Note: You need this channel number to go to a specific channel in the Listings screen or if you are scheduling a manual reminder or recording. Visit www.tvgos.com/support for more information.

YOUR DTVPAL DIGITAL-TO-ANALOG TV CONVERTER

TV GUIDE ON SCREEN OR GUIDE PLUS SETUP

Displaying Channel Numbers in Listings

Your Guide version may or may not have the ability to display channel numbers in the Listings grid.

Channel Logo and Number



To determine if you can display the new channel numbers:

- 1 Highlight Listings (or any channel's logo), then press MENU on the Guide-enabled device's remote control.
- 2 The Listings Options (or Channel Options) menu appears. If there is a Channel ID field, you can press the LEFT or RIGHT ARROW to select a channel display option:
 - **Both**—displays both the channel logo and number.
 - **Logo**—displays only the channel logo.
 - **Number**—displays only the channel number.

