

USER MANUAL FOR
CLARKE-TECH EDITOR v3.07

WRITTEN BY

'SAGA LOUT'

CLARKE-TECH EDITOR HAS
BEEN DEVELOPED AND
COPYRIGHT HELD
BY

CECELIFE

AND PUBLISHED BY
'DIGITAL-SAT.IT'
IN ITALY.


Chapter 1.

Downloading and Uploading the Database
from / to the receiver.


Including
changing the Editor Language to English

ordering and saving the Database,
removing redundant Transponders.

This is the base screen of the Clarke-Tech Editor v3.07.

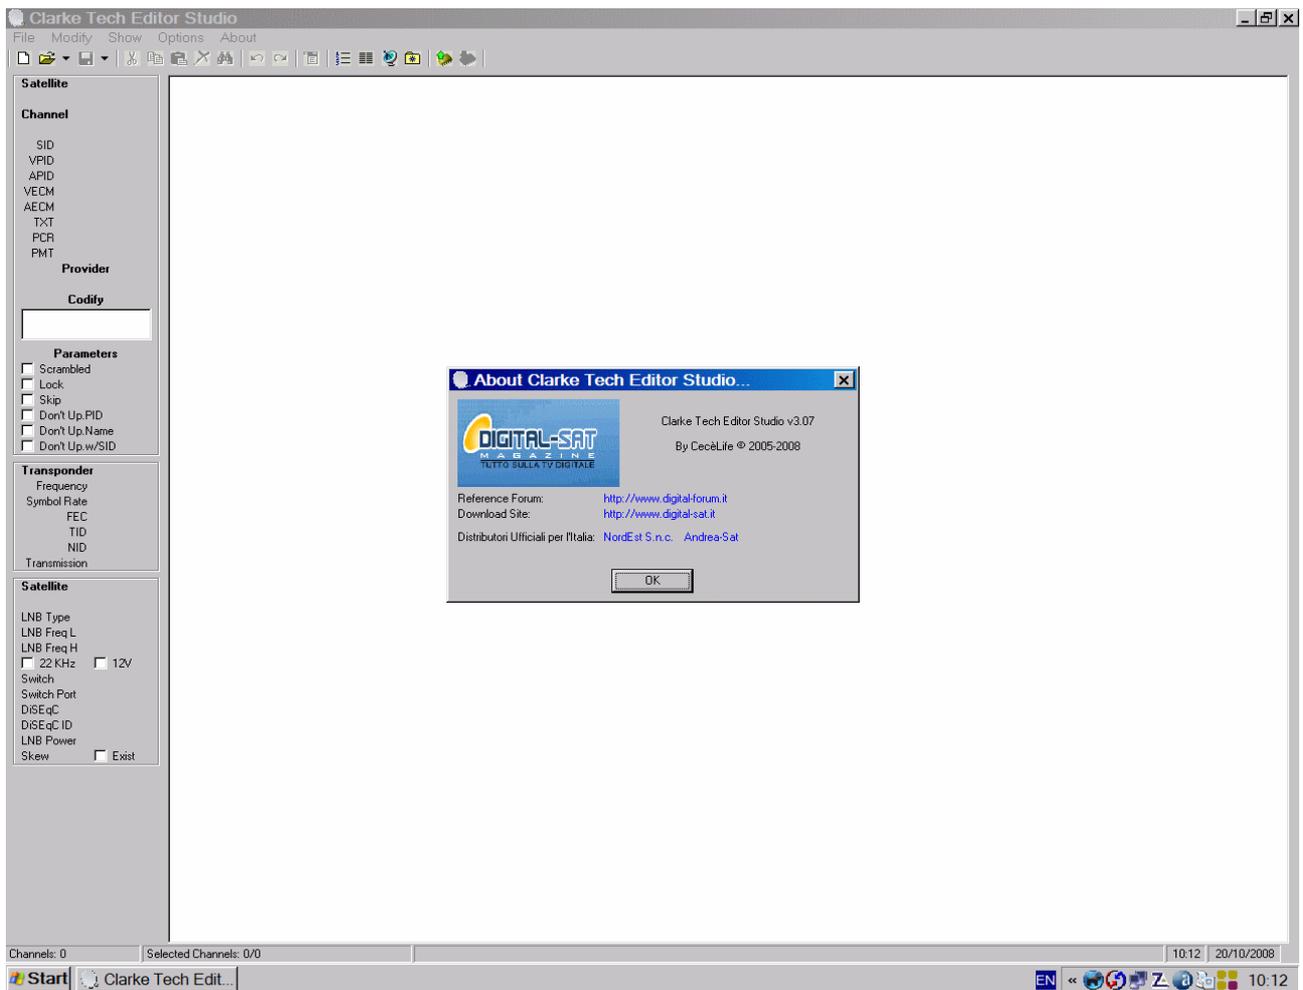

Screen 1.

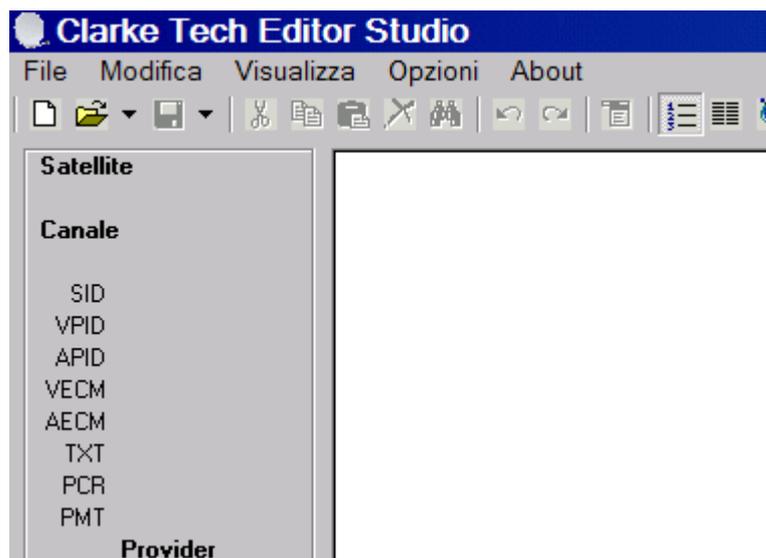

Screen 2.

On loading the software you might find this screen. To change to English Language Select


' Opzioni – Linguaggio – English' and Enter.

To download your Channel List from the receiver (Clarke-Tech, Technomate, Coolsat etc.)
Select

File – Download List From Decoder (F6) – Start


then

File – Save List As (F12) – 'Workinpro' – Enter.

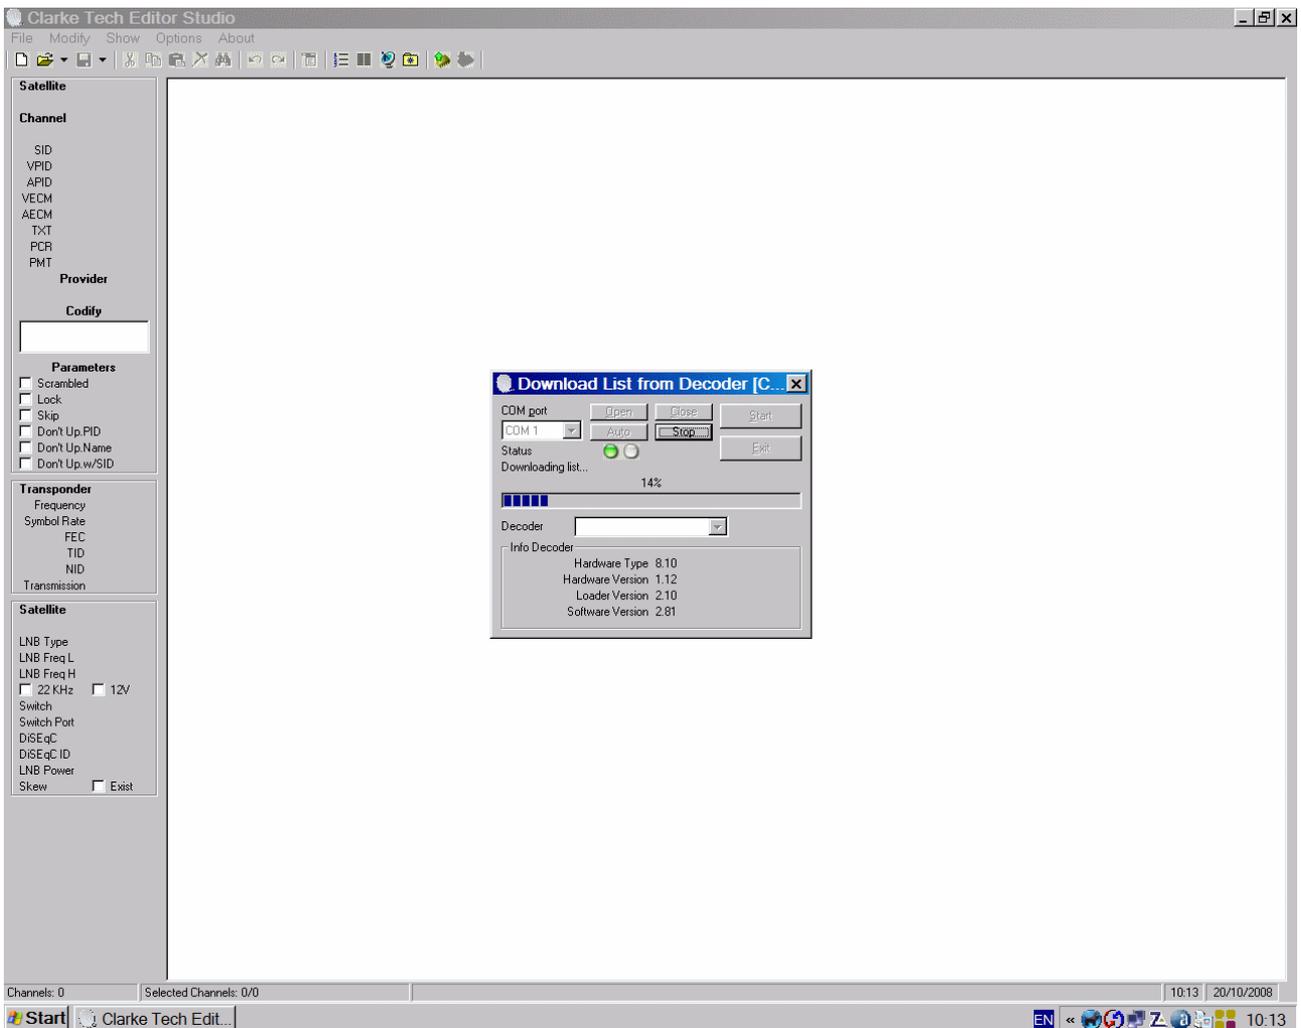


Screen 3.

You will then end up with screen 4. showing a list of Channels. The green/red numbers relate to the Satellite. Green means the channel is FTA and red means it's scrambled.

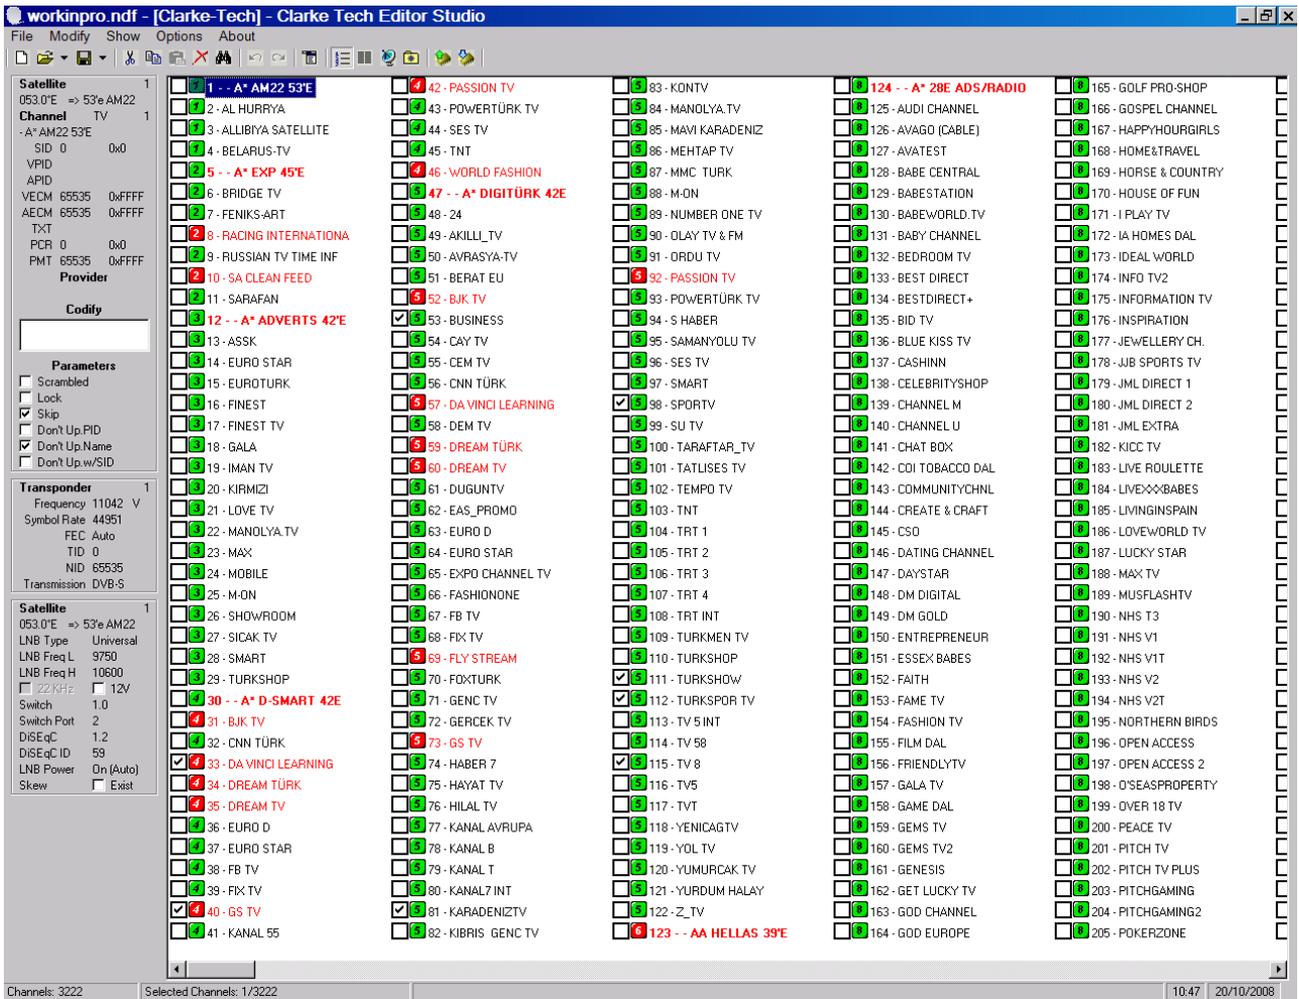

Screen 4.

Before we order the channels, the Satellite order should be set. This is done by using **Show – Satellites – Enter** as shown in Screen 5.

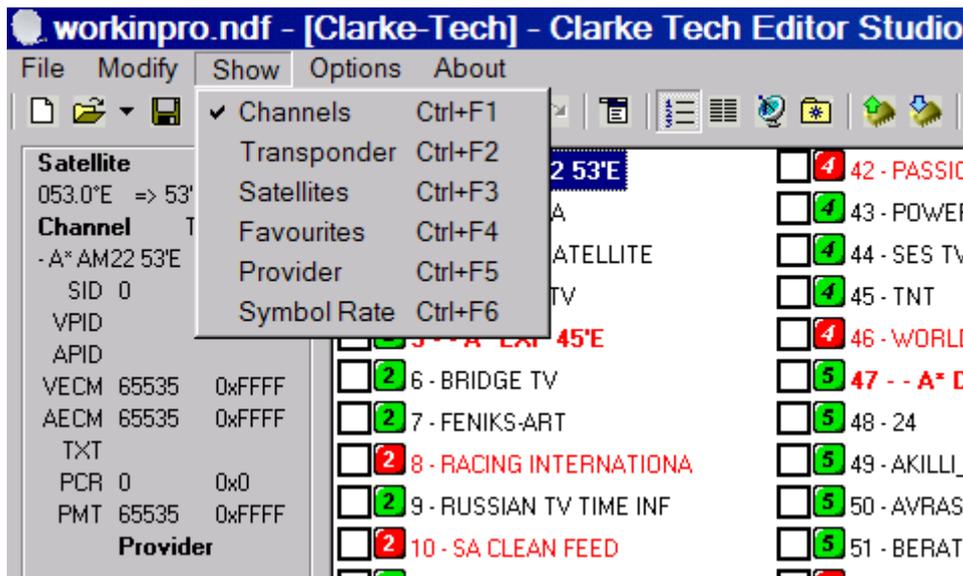

Screen 5.

This brings up the following Screen 6,

workinpro.ndf - [Clarke-Tech] - Clarke Tech Editor Studio

File Modify Show Options About

Satellite 1

053.0°E => 53e AM22

LNB Type Universal

LNB Freq L 9750

LNB Freq H 10600

12V

Switch 1.0

Switch Port 2

DiSEqC 1.2

DiSEqC ID 59

LNB Power On (Auto)

Skew Exist


N.	Name	Pos.	LNB	Freq. Low	Freq. High	Power	Switch	Port	DiSEqC	ID	Skew
1	=> 53e AM22	053.0°E	Univ.	9750	10600	On (Auto)	1.0	2	1.2	59	
2	=> 45e Exp	045.0°E	Univ.	9750	10600	On (Auto)	1.0	2	1.2	55	
3	=> 42E ADVERTS	042.0°E	Univ.	9750	10600	On (Auto)	1.0	2	1.2	0	
4	=> 42e D-Smart	042.0°E	Univ.	9750	10600	On (Auto)	1.0	2	1.2	61	
5	=> 42E Türksat	042.0°E	Univ.	9750	10600	On (Auto)	1.0	2	1.2	22	
6	=> 39e HELLAS	039.0°E	Univ.	9750	10600	On (Auto)	1.0	2	1.2	56	
7	=> 31.5e ASTRA	031.5°E	Univ.	9750	10600	On (Auto)	1.0	2	1.2	21	
8	=> 28e ADS/RAD	028.0°E	Univ.	9750	10600	On (Auto)	1.0	1	1.2	19	
9	=> 28e ASTRA 2	028.0°E	Univ.	9750	10600	On (Auto)	1.0	1	1.2	42	
10	=> 23.5e ASTRA	023.5°E	Univ.	9750	10600	On (Auto)	1.0	2	1.2	16	
11	=> 19e ADS/RA	019.0°E	Univ.	9750	10600	On (Auto)	1.0	2	1.2	50	
12	=> 19e C- FRAN	019.0°E	Univ.	9750	10600	On (Auto)	1.0	2	1.2	44	
13	=> 19e CANAL D	019.0°E	Univ.	9750	10600	On (Auto)	1.0	2	1.2	45	
14	=> 19e DIGITAL	019.0°E	Univ.	9750	10600	On (Auto)	1.0	2	1.2	41	
15	=> 19e EROS	019.0°E	Univ.	9750	10600	On (Auto)	1.0	2	1.2	33	
16	=> 19e EUROPE	019.0°E	Univ.	9750	10600	On (Auto)	1.0	2	1.2	2	
17	=> 19e INTERES	019.0°E	Univ.	9750	10600	On (Auto)	1.0	2	1.2	57	
18	=> 19e MUSIC	019.0°E	Univ.	9750	10600	On (Auto)	1.0	2	1.2	43	
19	=> 19e PREMIER	019.0°E	Univ.	9750	10600	On (Auto)	1.0	2	1.2	48	
20	=> 19e UPC/DRF	019.0°E	Univ.	9750	10600	On (Auto)	1.0	2	1.2	46	
21	=> 19e WDRDL	019.0°E	Univ.	9750	10600	On (Auto)	1.0	2	1.2	51	
22	=> 18e Eut W2	018.0°E	Univ.	9750	10600	On (Auto)	1.0	2	1.2	3	
23	=> 13e ABSAT	013.0°E	Univ.	9750	10600	On (Auto)	1.0	2	1.2	54	
24	=> 13e Advert	013.0°E	Univ.	9750	10600	On (Auto)	1.0	2	1.2	0	
25	=> 13e Bis	013.0°E	Univ.	9750	10600	On (Auto)	1.0	2	1.2	27	
26	=> 13e CVFRA+	013.0°E	Univ.	9750	10600	On (Auto)	1.0	2	1.2	39	
27	=> 13e EROS	013.0°E	Univ.	9750	10600	On (Auto)	1.0	2	1.2	32	
28	=> 13e EUROPE	013.0°E	Univ.	9750	10600	On (Auto)	1.0	2	1.2	29	
29	=> 13e HOT BIR	013.0°E	Univ.	9750	10600	On (Auto)	1.0	2	1.2	1	
30	=> 13e INTERES	013.0°E	Univ.	9750	10600	On (Auto)	1.0	2	1.2	0	
31	=> 13e ITALY	013.0°E	Univ.	9750	10600	On (Auto)	1.0	2	1.2	34	
32	=> 13e MUSIC	013.0°E	Univ.	9750	10600	On (Auto)	1.0	2	1.2	30	
33	=> 13e N	013.0°E	Univ.	9750	10600	On (Auto)	1.0	2	1.2	40	
34	=> 13e Nova	013.0°E	Univ.	9750	10600	On (Auto)	1.0	2	1.2	58	
35	=> 13e POLSAT	013.0°E	Univ.	9750	10600	On (Auto)	1.0	2	1.2	38	
36	=> 13e SKY ci	013.0°E	Univ.	9750	10600	On (Auto)	1.0	2	1.2	36	
37	=> 13e SKY mi	013.0°E	Univ.	9750	10600	On (Auto)	1.0	2	1.2	35	
38	=> 13e SKY sp	013.0°E	Univ.	9750	10600	On (Auto)	1.0	2	1.2	37	
39	=> 13e SRG	013.0°E	Univ.	9750	10600	On (Auto)	1.0	2	1.2	53	
40	=> 13e TPS	013.0°E	Univ.	9750	10600	On (Auto)	1.0	2	1.2	47	
41	=> 13e WORLD	013.0°E	Univ.	9750	10600	On (Auto)	1.0	2	1.2	31	
42	=> 10/9e Eut W	010.0°E	Univ.	9750	10600	On (Auto)	1.0	2	1.2	4	
43	=> 9e EURO BIRD	009.0°E	Univ.	9750	10600	On (Auto)	1.0	2	1.2	60	
44	=> 7e Eut W3A	007.0°E	Univ.	9750	10600	On (Auto)	1.0	2	1.2	5	
45	=> 9e SIRIUS	005.0°E	Univ.	9750	10600	On (Auto)	1.0	2	1.2	6	
46	=> 1w THOR	001.0°W	Univ.	9750	10600	On (Auto)	1.0	2	1.2	26	
47	=> 8w Atl Bir	005.0°W	Univ.	9750	10600	On (Auto)	1.0	2	1.2	9	
48	=> 8w ATL BIRD	008.0°W	Univ.	9750	10600	On (Auto)	1.0	2	1.2	10	
49	=> 12.5w AB	012.5°W	Univ.	9750	10600	On (Auto)	1.0	2	1.2	28	
50	=> 30w CABO	030.0°W	Univ.	9750	10600	On (Auto)	1.0	3	1.2	14	
51	=> 30w DIGI +	030.0°W	Univ.	9750	10600	On (Auto)	1.0	3	1.2	0	
52	=> 30w Hispas	030.0°W	Univ.	9750	10600	On (Auto)	1.0	3	1.2	7	

Satellites: 64/64 Selected Satellites: 1/64 10:48 20/10/2008

Screen 6.

The Satellites can then be ordered by selecting

Modify – Modify – Order – Choose – Enter.

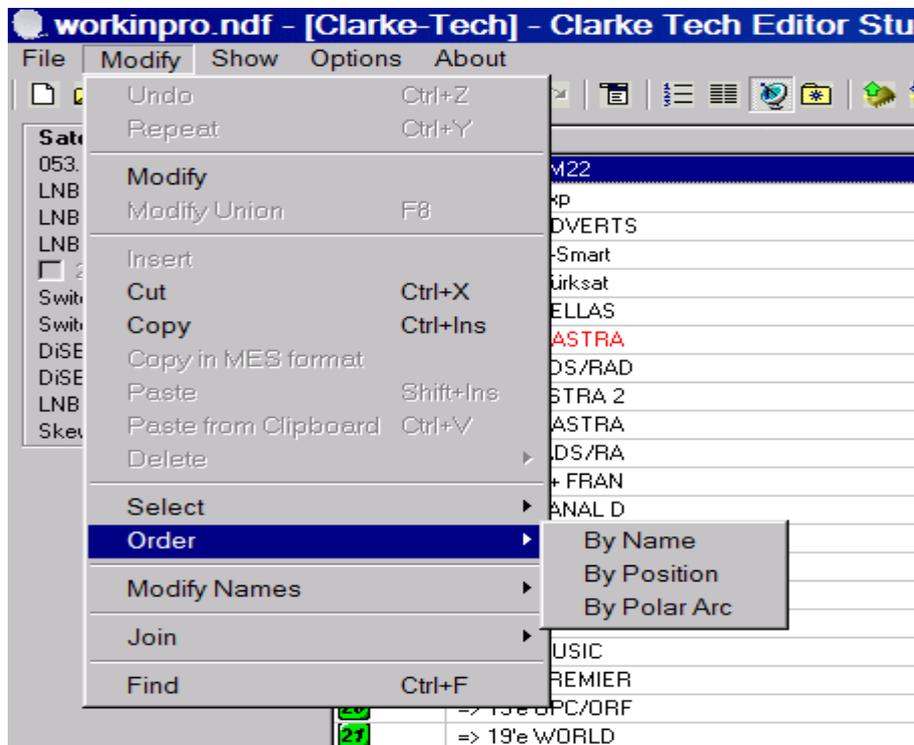


Screen 7.

Now select


Show – Transponder – Enter.

This will give you a list of the transponders and the Satellite number. To tidy up the database before ordering you should choose

Modify – Select – Select Transponder without channels – Enter. (Screen 8.)

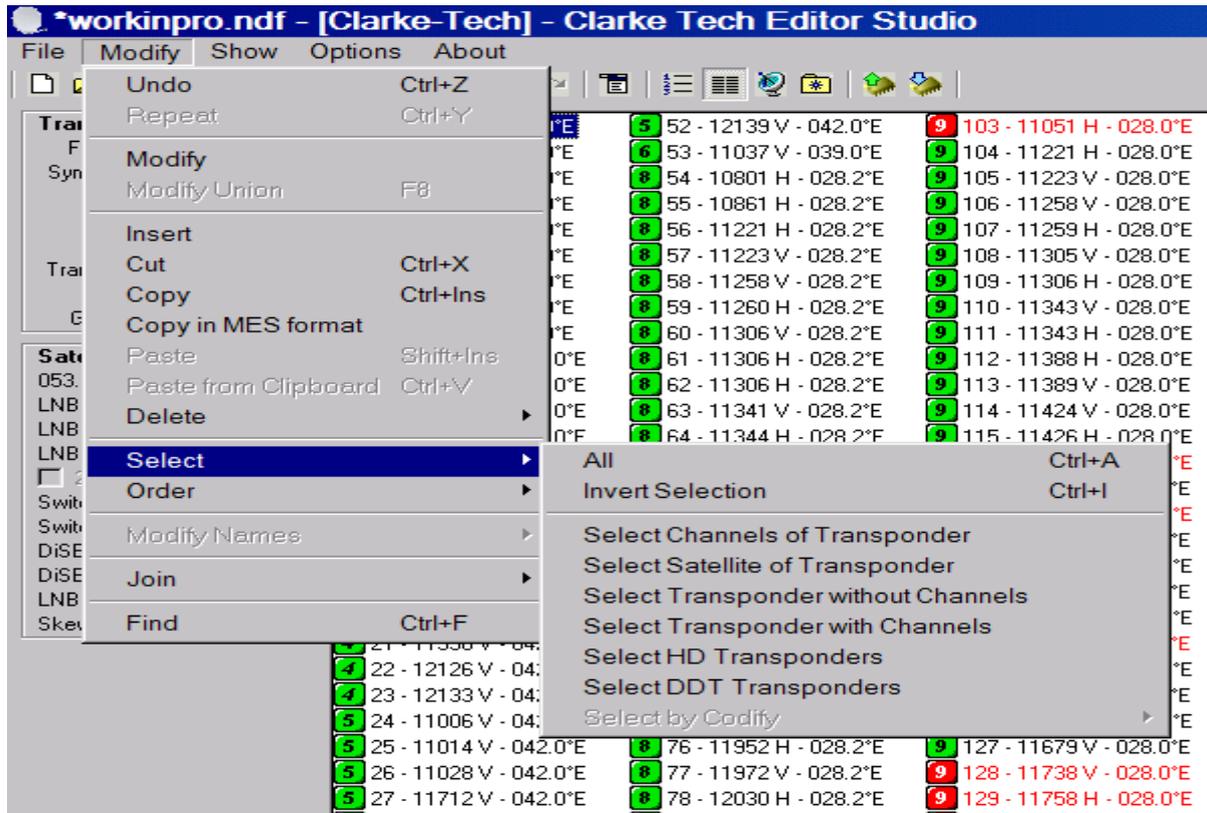

Screen 8.

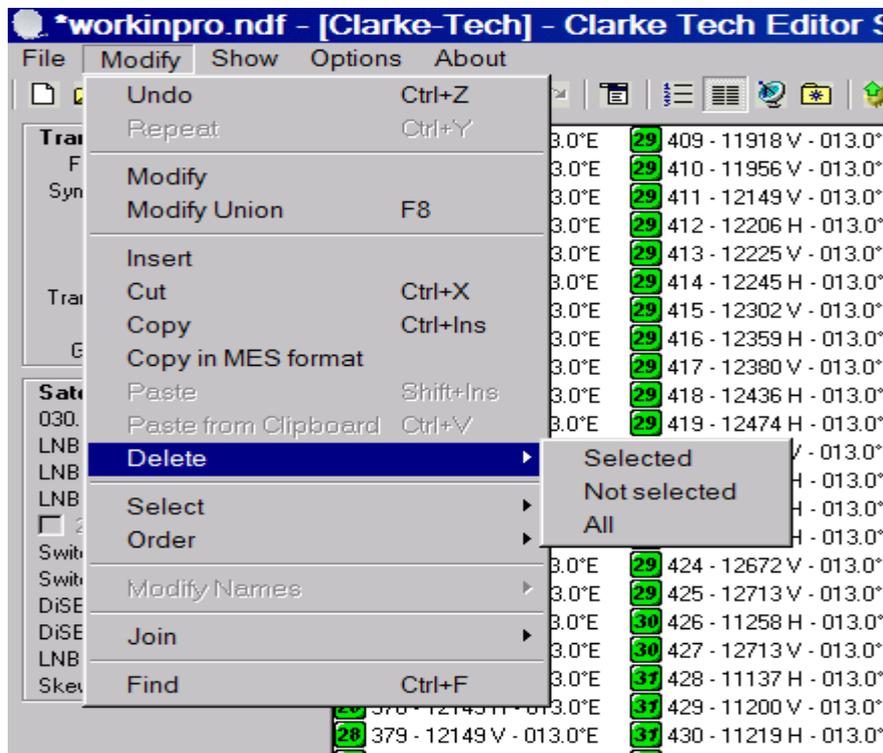

Screen 9.


Then choose

Modify – Delete – Selected – Enter

to remove the unwanted Transponders. (Screen 9.)

The Transponders can then be ordered by choosing

Modify – Order – You select – Enter. (Screen 10.)

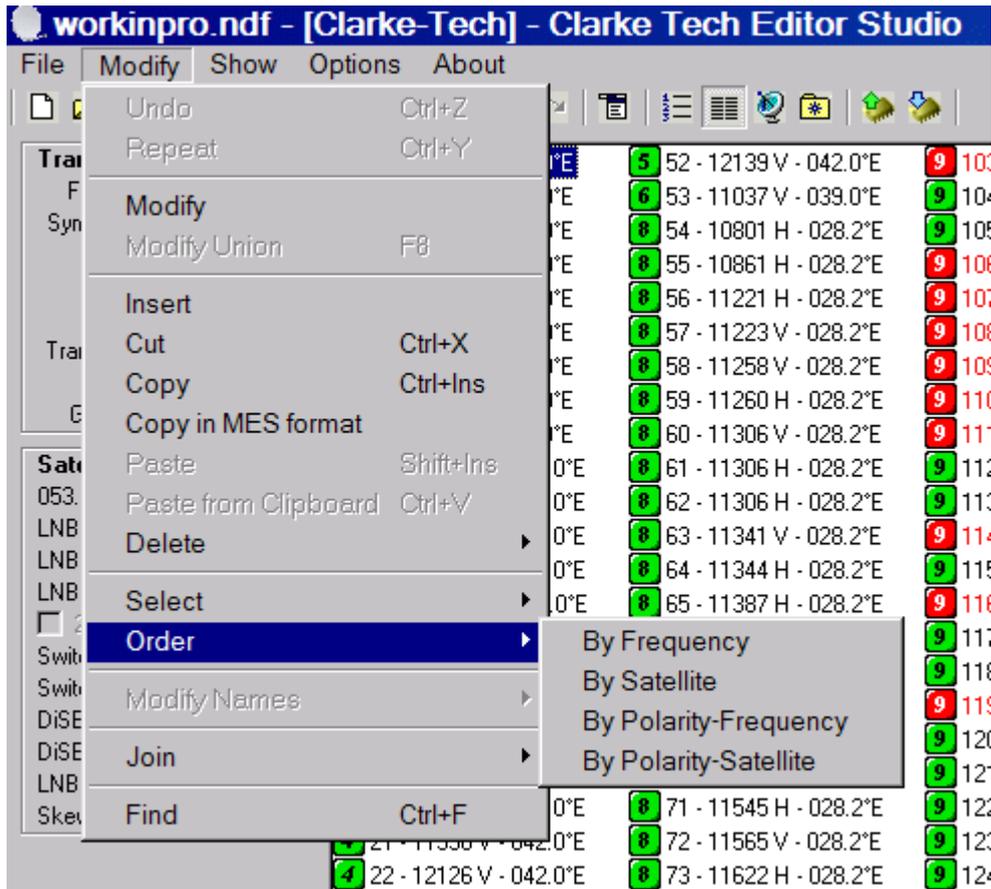


Screen 10.

Now return to the Channel list shown in Screen 4.

(Show – Channels – Enter).

The Channels can now be placed in your chosen order.

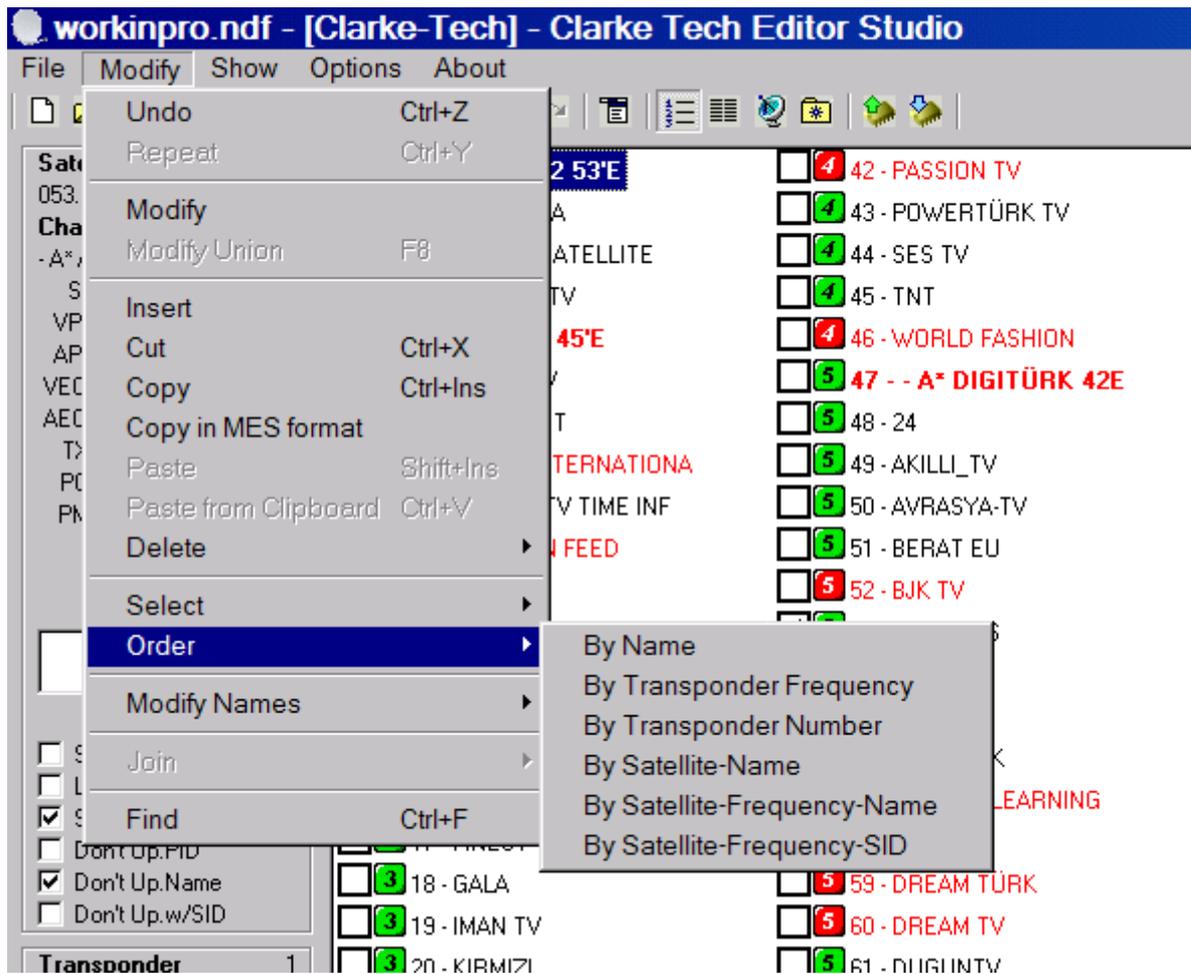

Screen 11.

To order the Channels select **Modify – Order – Choose – Enter**. (Screen 11).

The Database should then be saved, NOT as workinpro.(c)ndf but as default.(c)ndf. This will allow you to carry on working on the 'work in progress file' but still have an unmodified file as backup.


This is shown in Screen 12.
Select

File – Save List As... - default.(c)ndf – Enter.

The modified list default.(c)ndf can then be uploaded to the receiver by selecting

File – Upload List to Decoder (F7) – Enter.

This is also shown in Screen 12.

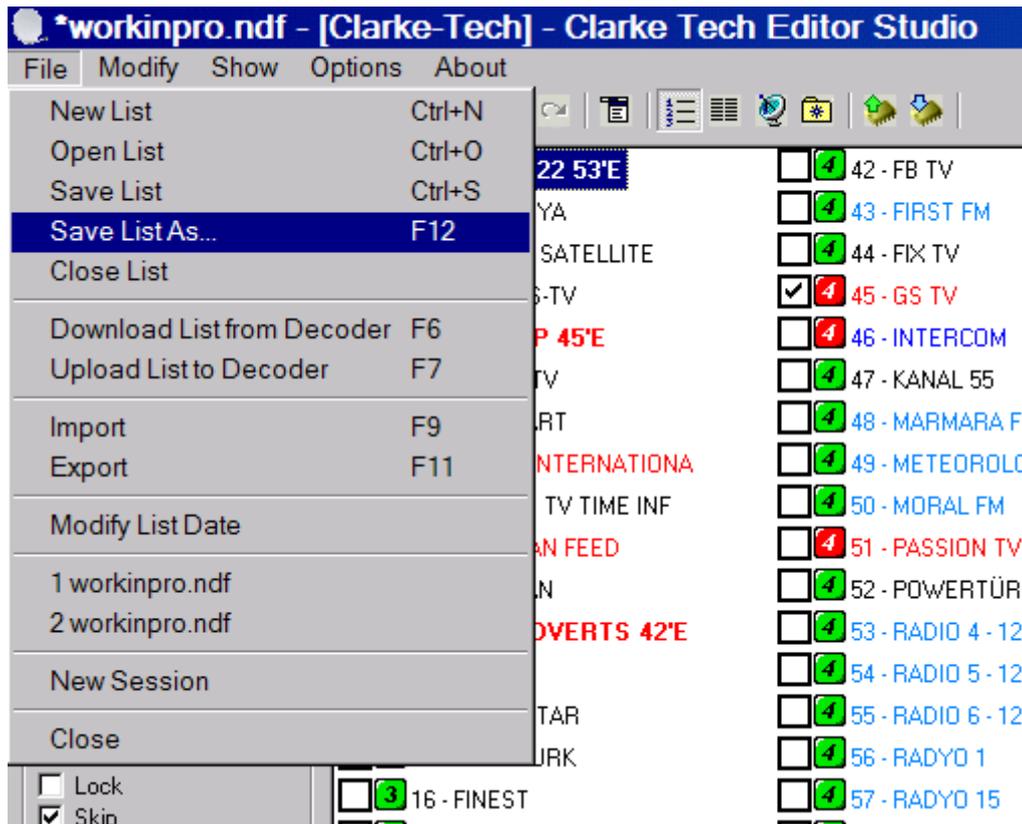

Screen 12.

Note:

For Technomate users I would suggest using Darkman's Loader 1.87 for downloading and uploading files. I have found it more reliable.

You may find that the Receiver doesn't initially load the database and that it goes back to the factory list. This happens sometimes and if you transfer the file again it should be OK.

Chapter 2.

Editing Channels,
Transponders
and Satellites

Changing Settings

Editing Channel Names


Deleting Duplicates

Modifying Satellites.


To Modify (Add, Delete, Change) a Satellite, list the Satellites using Screen 5.
Then Highlight the Satellite to be edited and Select

Modify – Modify – Enter

as shown in Screen 13.

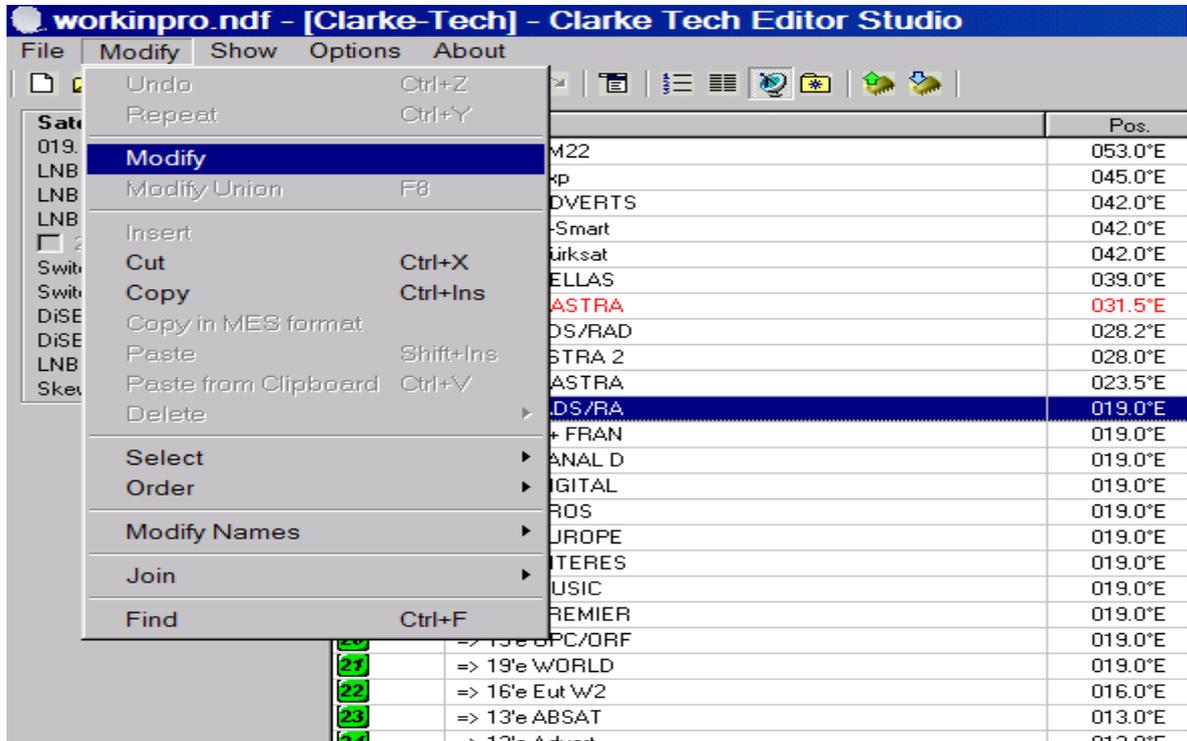

Screen 13.

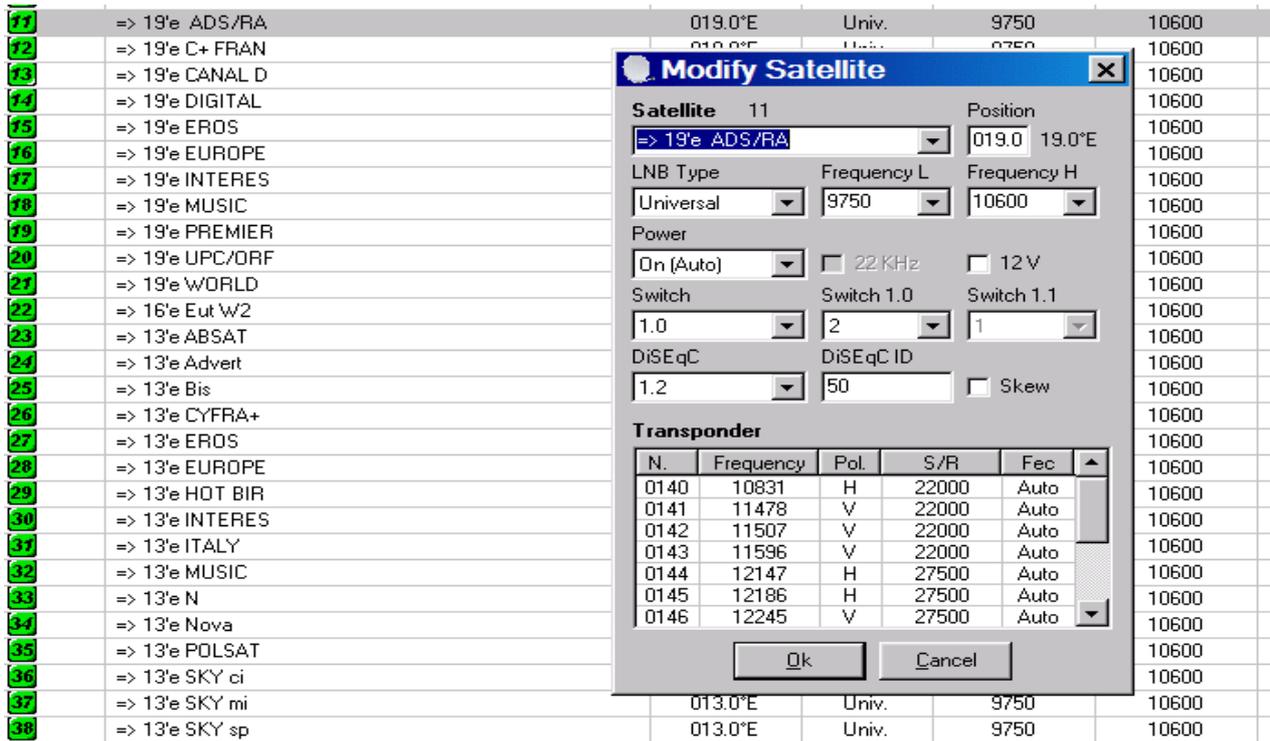

Screen 14.

Modifying Transponders.

The Satellite details can then be edited as shown in Screen14.

Note: Satellites can not be deleted if it has Transponders allocated to it.

The screenshot displays a list of transponders on the left and right sides of the screen. In the center, a 'Modify Transponder' dialog box is open for transponder 122. The dialog box contains the following fields and options:

- Transponder:** 122
- Frequency:** 12206
- Polarity:** V
- Symbol Rate:** 27500
- Transmission:** DVB-S
- Fec:** Auto
- TID:** 0
- NID:** 65535
- Bandwidth:** 8 MHz
- Freq Drift:** 0
- GMT Error:** (empty)
- Pilot:**
- Satellite:** 09 - 028.0°E => 28'e ASTRA 2
- Channels:**

N.	Name	SID	VPid	APid
0514	SKY NEWS	4704	512	640
0515	SKY NEWS	4706	513	641
0516	SKY NEWS	4707	517	642[8]
0517	SKY NEWS EIRE (CA...	4711	513	641
0518	SKY NEWS UK (CAB...	4710	512	640

Buttons for 'Ok' and 'Cancel' are visible at the bottom of the dialog box.

Screen 15.

Transponders can be edited using the same method, shown in Screen 15, and again, cannot be deleted if there are Channels allocated to it.

Editing Channels.

Show your Channel List and Highlight the Channel to be edited.
Select

Modify – Modify – Enter

and screen 16 will appear.

Most items are self - explanatory but the Codify section indicates which encryption (If any) are involved

Modifying Channels.

Parameters allow you to show the Channel's scrambled, to lock the Channel (Password needed), to skip the Channel when paging and to choose whether to upload the Name, PID or SID.

The screenshot displays a 'Modify Channel' dialog box for Channel 322. The dialog box is titled 'Modify Channel' and has a close button (X) in the top right corner. The main content area is divided into several sections:

- Channel:** 322
- Name:** BBC 1 LONDON
- SID:** 6301, **PMT:** 261, **PCR:** 5000
- Video PID:** 5000, **Audio PID:** 5001
- Txt PID:** 5003, **Sub:**
- Video ECM:** 65535, **Audio ECM:** 65535
- Channel Type:** Tv, Radio
- Tuner:** 1, 2
- Provider:** (Dropdown menu)
- Transponder:** 0089 - 10772 H 22000 Auto
- Satellite:** 09 - 028.0°E => 28'e ASTR
- Codify:**
 - Via, Seca, Irdeto, Nagra, Nagra 2
 - Alpha, Beta, Conax, Crypto, NDS
 - PwrVU, Sky, Fire, XCrypt, Unkn.
- Parameters:**
 - Scrambled, Lock, Skip
 - Don't Up.PID, Don't Up.Name, Don't Up.w/SID
- Favourites:**
 - 1 FAV Chann..., 3 English Chs, 5 Kids
 - 2 Movies, 4 News, 6 Music

At the bottom of the dialog box are 'Ok' and 'Cancel' buttons. The background shows a list of channels with checkboxes and channel names, including: 334 - BBC 1 Yorks, 335 - BBC 1 Yrks&M in, 336 - BBC 2, 337 - BBC 2, 338 - BBC 2, 339 - BBC 2, 340 - BBC A, 341 - BBC F, 342 - BBC H, 343 - BBC N, 344 - BBC P, 345 - BBC T, 346 - BBC T, 347 - BEN, 348 - BET, 349 - BEVER, 350 - BLISS, 351 - BLOO, 352 - BODY, 353 - BRIT A, 354 - BRIT S, 355 - BUBBI, 356 - BUBBI, 357 - BUSIN, 358 - C4L TI, 359 - Casinc, 360 - CCTV-, 361 - CHAN, 362 - CHANNEL 4, 363 - CHANNEL 4, 364 - CHANNEL 4, 365 - CHANNEL 4, 366 - Channel 4 +1, 367 - Channel 4 +1, 368 - Channel 4 +1, 369 - CHANNEL 4, 370 - CHANNEL 4, 375 - CHANNEL U, 376 - CHART SHOW TV, 377 - CHANNEL 4, 378 - CHANNEL 4, 379 - CHANNEL 4, 380 - CHANNEL 4, 381 - CHANNEL 4, 382 - CHANNEL 4, 383 - CHANNEL 4, 384 - CHANNEL 4, 385 - CHANNEL 4, 386 - CHANNEL 4, 387 - CHANNEL 4, 388 - CHANNEL 4, 389 - CHANNEL 4, 390 - CHANNEL 4, 391 - CHANNEL 4, 392 - CHANNEL 4, 393 - CHANNEL 4, 394 - CHANNEL 4, 395 - CHANNEL 4, 396 - CHANNEL 4, 397 - CHANNEL 4, 398 - CHANNEL 4, 399 - CHANNEL 4, 400 - CHANNEL 4, 401 - CHANNEL 4, 402 - CHANNEL 4, 403 - CHANNEL 4, 404 - FREESATCOMMONC, 405 - FREESATHOME, 406 - FREESATOAD, 407 - FREESATSSU, 408 - G49, 409 - G53, 410 - G53, 411 - G53, 412 - G53, 413 - G53, 414 - G53, 415 - G53, 416 - High Street TV, 417 - HOLLYWOODTV, 418 - HORSE & COUNTRY, 419 - Ideal World 3, 420 - INSPIRATION, 421 - ISLAM CHANNEL, 422 - ITV Channel Is, 423 - ITV1 Anglia E, 424 - ITV1 ANGLIA S, 425 - ITV1 BORDER, 426 - ITV1 BORDERSCO, 427 - ITV1 CENTRAL E, 428 - ITV1 CENTRAL S, 429 - ITV1 Central W, 430 - ITV1 Granada, 431 - ITV1 London, 432 - ITV1 MERIDIAN E, 433 - ITV1 MERIDIAN S, 434 - ITV1 TT N, 435 - ITV1 W COUNTRY, 436 - ITV1 WALES, 437 - ITV1 WEST, 438 - ITV1 YORKS W, 439 - ITV2, 440 - ITV2+1, 441 - ITV3, 442 - ITV3+1, 443 - ITV4, 444 - ITVI STREAM 2, 445 - JAZEERACHILDREN, 446 - Jewellery Ch., 447 - JJB GOLF, 448 - KBC, 449 - KBC2, 450 - KICC TV.

Screen 16.

The Favourites section allow you to add the Channel to the specified Favourite group.

Inserting Transponders.

Before adding a Channel the Transponder must be present.

Select

Show -Transponders

Select

Modify – Insert – Enter.

Screen 17 will appear.

306 H - 028.2°E	113 - 11583 H - 028.0°E	122 164 - 12129 V - 019.0°E	16 215 - 11837 H - 019.0°E	78 266 - 1
341 V - 028.2°E	114 - 11621 H - 028.0°E	122 165 - 12168 V - 019.0°E	16 216 - 11954 H - 019.0°E	78 267 - 1
344 H - 028.2°E	115 - 11641 V - 028.0°E	122 166 - 12207 V - 019.0°E	16 217 - 11974 V - 019.0°E	79 268 - 1
387 H - 028.2°E				79 269 - 1
390 V - 028.2°E				79 270 - 1
425 V - 028.2°E				79 271 - 1
426 H - 028.2°E				79 272 - 1
488 V - 028.2°E				79 273 - 1
526 V - 028.2°E				79 274 - 1
545 H - 028.2°E				79 275 - 1
565 V - 028.2°E				79 276 - 1
622 H - 028.2°E				79 277 - 1
661 H - 028.2°E				79 278 - 1
679 V - 028.2°E				79 279 - 1
952 H - 028.2°E				79 280 - 1
972 V - 028.2°E				20 281 - 1
030 H - 028.2°E				20 282 - 1
128 V - 028.2°E				20 283 - 1
225 H - 028.2°E				20 284 - 1
245 V - 028.2°E				20 285 - 1
522 V - 028.2°E				20 286 - 1
522 H - 028.2°E				20 287 - 1
559 V - 028.2°E				20 288 - 1
643 H - 028.2°E				27 289 - 1
713 H - 028.0°E				27 290 - 1
728 V - 028.0°E				27 291 - 1
757 V - 028.0°E				22 292 - 1
772 H - 028.0°E	140 - 10831 H - 019.0°E	141 191 - 10876 V - 019.0°E	17 242 - 12110 H - 019.0°E	22 293 - 1
786 V - 028.0°E	141 - 11478 V - 019.0°E	142 192 - 10978 V - 019.0°E	17 243 - 12188 H - 019.0°E	22 294 - 1
801 H - 028.0°E	142 - 11507 V - 019.0°E	143 193 - 11038 V - 019.0°E	17 244 - 12227 H - 019.0°E	22 295 - 1
816 V - 028.0°E	143 - 11596 V - 019.0°E	144 194 - 11097 V - 019.0°E	17 245 - 12246 V - 019.0°E	22 296 - 1

Screen 17.

Once done Show Channels and

Modify – Insert – Enter

Screen 18. will appear.

Inserting New Channels.

46 - INT EHLUM

47 - KANAL 55

48 - MARMARA FM

49 - METED

50 - MORAL

51 - PASSIC

52 - POWERF

53 - RADIO

54 - RADIO

55 - RADIO

56 - RADYO

57 - RADYO

58 - RADYO

59 - RADYO

60 - RADYO

61 - RADYO

62 - SES TV

63 - TGRT F

64 - TNT

65 - TSR TL

66 - TURIZM

67 - VOT EA

68 - VOT W

69 - VOT W

70 - WORLD

71 - - A* D

72 - 24

73 - AKILLI

74 - AVRAS

75 - BERAT

76 - BJK TV

77 - BUSINESS

78 - CAY TV

79 - CEM TV

87 - EURLU

88 - EURO STAR

89 - EXPN CHANNEL TV

128 - TRT 1

129 - TRT 2

130 - TRT 3

131 - TRT 4

132 - TRT INT

133 - TURKMEN TV

134 - TURKSHOP

135 - TURKSHOW

136 - TURKSPOR TV

137 - TV 5 INT

138 - TV 58

139 - TV 8

140 - TV5

141 - TVT

142 - YENICAGTV

143 - YOL TV

144 - YUMURCAK TV

145 - YURDUM HALAY

146 - Z_TV

147 - - AA HELLAS 3:

148 - - A* 28E ADS/F

149 - AUDI CHANNEL

150 - AVAGO (CABLE)

151 - AVATEST

152 - BABE CENTRAL

153 - BABESTATION

154 - BABEWORLD.TV

155 - BABY CHANNEL

156 - BBC 5LSPORT

157 - BBC 6 MUSIC

158 - BBC 7

159 - BBC R1

160 - BBC R2

161 - BBC R3

Insert Channel
✕

Channel 26

Name

SID PMT PCR

Video PID	Audio PID	Pid	Lang	Cod.
<input type="text"/>	<input type="text"/>			

Txt PID Sub

Video ECM

Audio ECM + ... -

Channel Type

Tv Radio

Tuner

1 2

Provider

Transponder ▼

Satellite ▼

Codify

<input type="checkbox"/> Via	<input type="checkbox"/> Seca	<input type="checkbox"/> Irdeto	<input type="checkbox"/> Nagra	<input type="checkbox"/> Nagra 2
<input type="checkbox"/> Alpha	<input type="checkbox"/> Beta	<input type="checkbox"/> Conax	<input type="checkbox"/> Crypto	<input type="checkbox"/> NDS
<input type="checkbox"/> PwrVU	<input type="checkbox"/> Sky	<input type="checkbox"/> Fire	<input type="checkbox"/> XCrypt	<input type="checkbox"/> Unkn.

Parameters

<input type="checkbox"/> Scrambled	<input type="checkbox"/> Lock	<input type="checkbox"/> Skip
<input type="checkbox"/> Don't Up.PID	<input type="checkbox"/> Don't Up.Name	<input type="checkbox"/> Don't Up.w/SID

Favourites

<input type="checkbox"/> 1 FAV Chann...	<input type="checkbox"/> 3 English Chs	<input type="checkbox"/> 5 Kids
<input type="checkbox"/> 2 Movies	<input type="checkbox"/> 4 News	<input type="checkbox"/> 6 Music

◀ ▶


OK
Cancel

Creating and Modifying 'Favourite' Channels.

Favourite Channels can be selected by entering a tick in the relevant box in Screen 16 or 18.

Channels can be edited by selecting

Show – Favourites – Enter

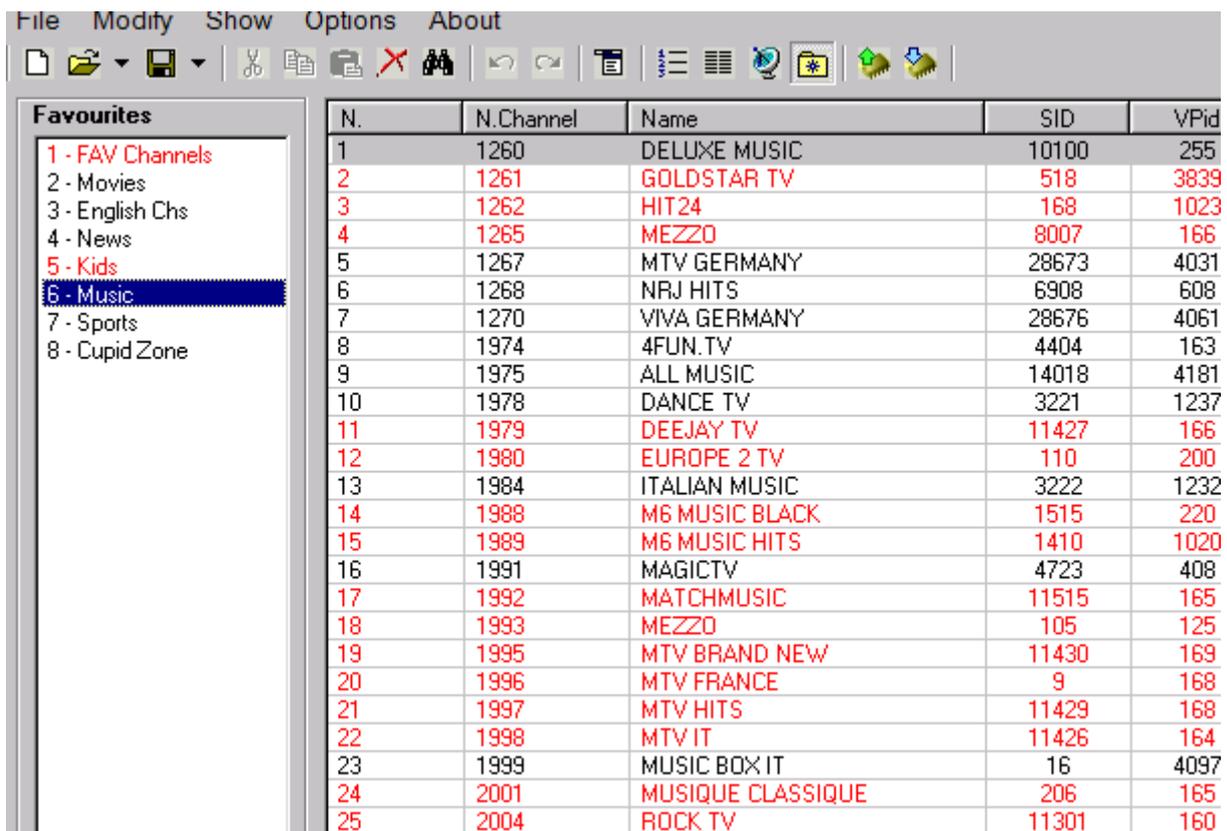

N.	N.Channel	Name	SID	VPid
1	1260	DELUXE MUSIC	10100	255
2	1261	GOLDSTAR TV	518	3839
3	1262	HIT24	168	1023
4	1265	MEZZO	8007	166
5	1267	MTV GERMANY	28673	4031
6	1268	NRJ HITS	6908	608
7	1270	VIVA GERMANY	28676	4061
8	1974	4FUN.TV	4404	163
9	1975	ALL MUSIC	14018	4181
10	1978	DANCE TV	3221	1237
11	1979	DEEJAY TV	11427	166
12	1980	EUROPE 2 TV	110	200
13	1984	ITALIAN MUSIC	3222	1232
14	1988	M6 MUSIC BLACK	1515	220
15	1989	M6 MUSIC HITS	1410	1020
16	1991	MAGICTV	4723	408
17	1992	MATCHMUSIC	11515	165
18	1993	MEZZO	105	125
19	1995	MTV BRAND NEW	11430	169
20	1996	MTV FRANCE	9	168
21	1997	MTV HITS	11429	168
22	1998	MTV IT	11426	164
23	1999	MUSIC BOX IT	16	4097
24	2001	MUSIQUE CLASSIQUE	206	165
25	2004	ROCK TV	11301	160

Screen 19.

Editing and Deleting these Channels can be done on this screen.

Altering Settings.

Select

Tools – Settings – Enter

and you will get Screen 20.

There is no reason for the default settings to be changed.

Settings

Default saving to file format
Clarke-Tech (.ndf)

Register files: .ndf .cndf .ndp .cndp

Insert Satellite Position: After

Export only an Audio PID in SDX format
 Maintain Layout in GoldBox format
 Select Decoder by list Type

d2d2d2 King Of Sat Table Color

Internet

Use system Registry
 Direct Connection
 Use Proxy (Eg. 10.10.1.250:8080)

Proxy: _____

Use Proxy authentication

User Name: _____

Password: _____

Update Data in Imports

Channels Transponder Satellites

Colours

Channels	Transponder	Satellites
<input type="checkbox"/> FTA	<input type="checkbox"/> Normal	<input type="checkbox"/> Normal
<input type="checkbox"/> Scrambled	<input type="checkbox"/> Empty	<input type="checkbox"/> Empty
<input type="checkbox"/> Radio FTA	<input type="checkbox"/> HD Normal	
<input type="checkbox"/> Radio Scram.	<input type="checkbox"/> HD Empty	
<input type="checkbox"/> HD FTA		Favourites
<input type="checkbox"/> HD Scrambled		<input type="checkbox"/> Normal
<input type="checkbox"/> To skip		<input type="checkbox"/> Empty
<input type="checkbox"/> Data		

Default Ok Cancel

361 - CHANNEL 4
362 - CHANNEL 4
363 - CHANNEL 4
364 - CHANNEL 4
365 - BBC 1 YORKS
335 - BBC 1 Yrks&Lin
336 - BBC 2 ENGLAND
366 - CHANNEL 4
367 - CHANNEL 4
368 - CHANNEL 4
369 - CHANNEL 4
370 - FLAVA
371 - CHANNEL 4
372 - CHANNEL 4
373 - CHANNEL 4
374 - CHANNEL 4
375 - CHANNEL 4
376 - CHART SHOW TV
377 - CHAT BACK
378 - CHANNEL 4
379 - CHANNEL 4
380 - CHANNEL 4
381 - CHANNEL 4
382 - CHANNEL 4
383 - CHANNEL 4
384 - CHANNEL 4
385 - CHANNEL 4
386 - CHANNEL 4
387 - CHANNEL 4
388 - CHANNEL 4
389 - CHANNEL 4
390 - CHANNEL 4
391 - CHANNEL 4
392 - CHANNEL 4
393 - CHANNEL 4
394 - CHANNEL 4
395 - CHANNEL 4
396 - CHANNEL 4
397 - CHANNEL 4
398 - CHANNEL 4
399 - CHANNEL 4
400 - CHANNEL 4
401 - CHANNEL 4
402 - FRANCE 24
403 - FRANCE 24
404 - FREESATCOMMONC
405 - FREESATHOME
406 - CHANNEL 4
407 - CHANNEL 4
408 - CHANNEL 4
409 - CHANNEL 4
410 - High Street TV
411 - CHANNEL 4
412 - CHANNEL 4
413 - CHANNEL 4
414 - CHANNEL 4
415 - CHANNEL 4
416 - CHANNEL 4
417 - HOLLYWOODTV
418 - HORSE & COUNTRY
419 - CHANNEL 4
420 - CHANNEL 4
421 - CHANNEL 4
422 - CHANNEL 4
423 - CHANNEL 4
424 - CHANNEL 4
425 - CHANNEL 4
426 - CHANNEL 4
427 - CHANNEL 4
428 - CHANNEL 4
429 - CHANNEL 4
430 - CHANNEL 4
431 - CHANNEL 4
432 - CHANNEL 4
433 - CHANNEL 4
434 - CHANNEL 4
435 - CHANNEL 4
436 - CHANNEL 4
437 - CHANNEL 4
438 - CHANNEL 4
439 - CHANNEL 4
440 - CHANNEL 4
441 - CHANNEL 4
442 - CHANNEL 4
443 - ITV4
444 - ITVI STREAM 2
445 - JAZEERACHILDREN
446 - Jewellery Ch

Screen 20.

Deleting Duplicates.

Full details of the Channel, Transponder and Satellite are shown on the left hand side of the Channel list. This is useful when deleting duplicates. (Screen 22.)

Select the Channel list and order in Name order (Screen 11.)

Highlight the Channel and press the 'Delete' button on the computer if it's a duplicate!

BE CAREFUL!!!!

The screenshot displays a satellite receiver's channel management interface. On the left, there are three sections: 'Parameters', 'Transponder', and 'Satellite'. The 'Parameters' section includes checkboxes for Scrambled, Lock, Skip, Don't Up.PID, Don't Up.Name, and Don't Up.w/SID. The 'Transponder' section shows details for transponder 183, including Frequency (12344 H), Symbol Rate (27500), FEC (3/4), TID (0), NID (65535), and Transmission (DVB-S). The 'Satellite' section shows details for satellite 13, including position (019.0°E => 19°e CANAL), LNB Type (Universal), LNB Freq L (9750), LNB Freq H (10600), Switch (1.0), Switch Port (2), DiSEqC (1.2), DiSEqC ID (45), LNB Power (On (Auto)), and Skew (Exist).

The main part of the screen shows a list of channels. Each channel entry consists of a checkbox, a number in a colored box, and the channel name. The channels are listed in three columns. The channel '556 - CARTOON NETWORK' is highlighted with a blue background. The channels are:

Channel ID	Channel Name
40	548 - CANAL+ SPORT
14	549 - CANAL+...30
28	550 - CANCAO NOVA
8	551 - CAPITAL
14	552 - CARACOL TV
37	553 - CARTOMANZIA LOTTO
37	554 - CARTOON +1
12	555 - CARTOON NETWORK
33	556 - CARTOON NETWORK
14	557 - CARTOON NETWORK
20	558 - CARTOON NETWORK
37	559 - CARTOON NETWORK
34	560 - CARTOON NETWORK
35	561 - CARTOON NETWORK
37	562 - CARTOON NETWORK
45	563 - CARTOON NETWORK
45	564 - CARTOON NETWORK
17	565 - CARTOON NETWORK
17	566 - CASH TV
8	567 - CASHINN
9	568 - Casino TV
47	569 - CASPIONET
47	589 - CH31
22	590 - CH99 - IF
17	591 - CHAMBE
44	592 - CHANNE
9	593 - CHANNE
9	594 - CHANNE
9	595 - CHANNE
9	596 - CHANNE
9	597 - CHANNE
9	598 - Channel
9	599 - Channel
9	600 - Channel
9	601 - Channel
9	602 - Channel
9	603 - Channel
45	604 - CHANNE
8	605 - CHANNE
9	606 - CHANNE
47	607 - CHANNE
9	608 - CHANNE
9	609 - CHANNE
8	610 - CHANNE


Screen 22.

Modifying Names.

This is shown in Screen 23.

Firstly select using

Modify – Select – All – Enter

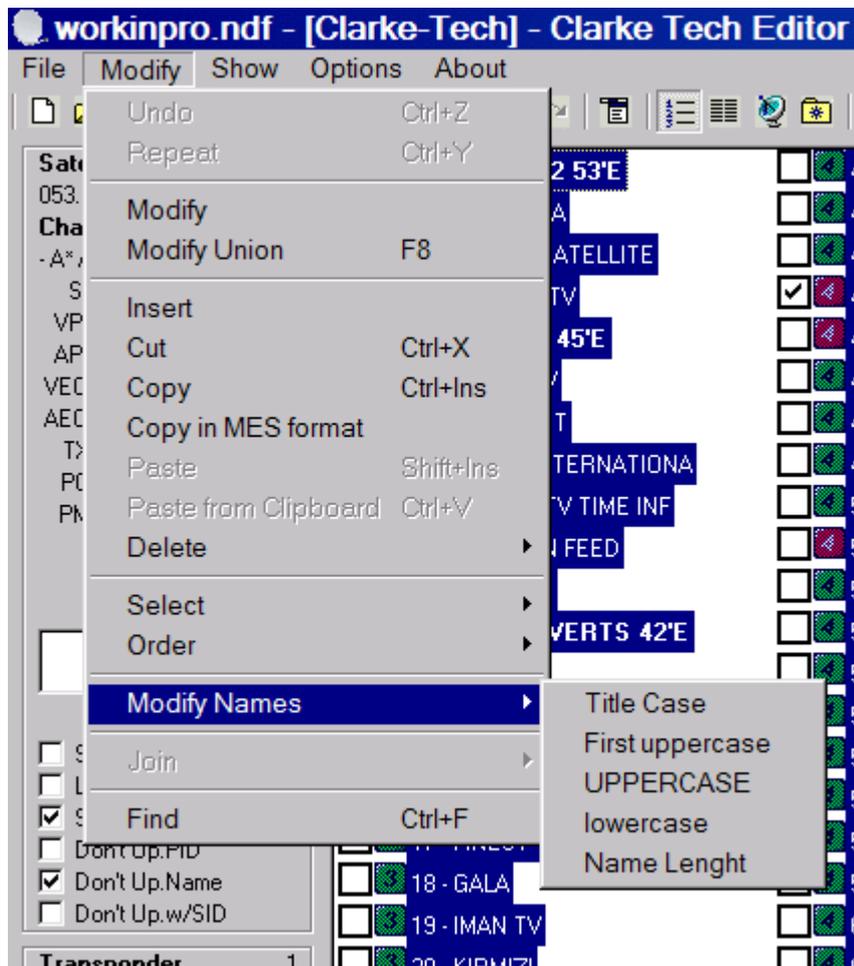

Screen 23.

This will highlight all the Channels. You can now modify all the Channel Names using Screen 23.

'Find' is a useful tool to search for text in the Database.

'Modify Union' allows you to Select more than one Channel/Transponder/Satellite and modify them all together.

'Copy in MES format' relates to transferring data between this Editor and the Mediasat Editor which is an Editor for the GoldBox receiver.

Chapter 3.


Importing and Exporting Channel Lists.

Importing non .(c)ndf files.

You can import non-standard files by selecting

File – Import – Enter

This brings up Screen 24.

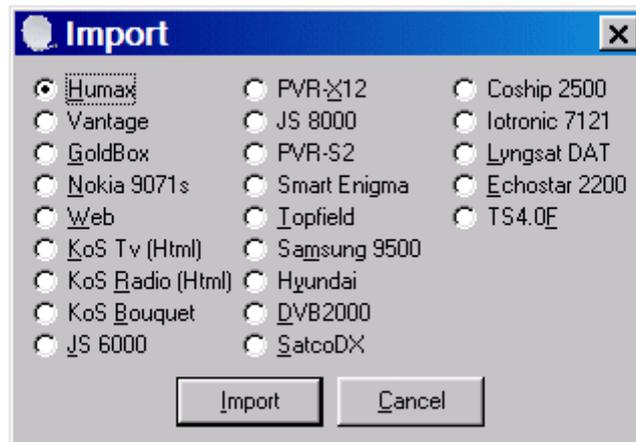


Screen 24.

This selects files to import from Receivers with a file suffix thus;

Humax	.hnf		
Vantage	.bin	.si	
Goldbox	.bin	.rcu	.dat
Nokia 9071s	.xch		
King Of Sat TV/Radio/Bouquet	.htm	.html	
Jepssen JS8000	.jpp		
Jepssen PVR – S2	.bin	.js2	
Smart Enigma **	.sdx		
Topfield 3000/4000	.std		
Samsung 9500	.sdb		
Hyundai	.txt		
DVB2000	.dvb		
SatcoDX	.sdx		
CoShip 2500	.ftc	.txt	
lotronic 7121	.txt		
Lyngsat Dat **	.dat		
EchoStar 2200	.bin		
Telesystem 4.0F	.bin		

Importing non .(c)ndf files.

Importing from the Web option brings up Screen 25.

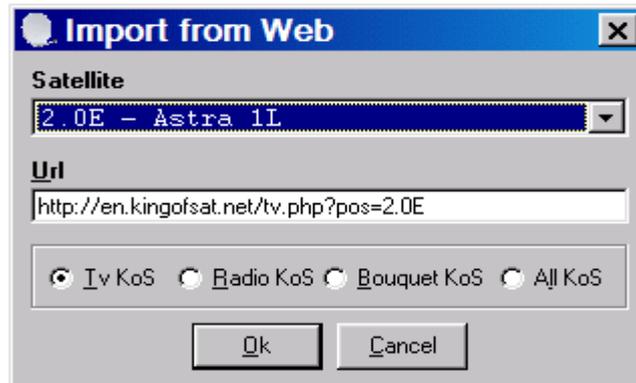

Screen 25.

Important Notes:

Smart Enigma .sdx files would appear to be in the same .sdx format as the Captive-Works and Technomate 3000 series receivers and are NOT .sdx SatcoDX format.

They are unreadable by any Editor tested at this moment of time!


LyngSat Dat files were discontinued back in 2002 due to lack of Sponsorship. At this time I don't think they have been reinstated.

Exporting non - .(c)ndf files.

After any modifications have been made to the imported file you can export the file using

File – Export

which brings up Screen 26.

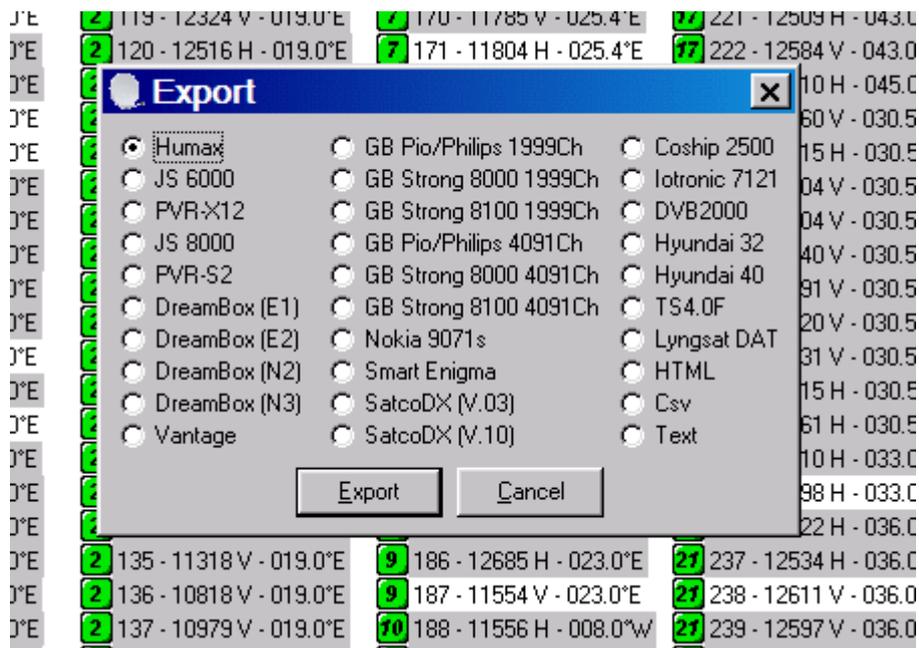

Screen 26.

More options are given on the Export screen such as Separated by Comma's (Csv), Text and Html.

I have tested the SatcoDX files that were kindly supplied to me by a Technomate 5000 series user and the Editor worked well.

As far as exporting in Dreambox or Strong formats, I will leave that for somebody else to test and demonstrate.

Summary.

Once again, may I please point out that all the hard work
put into this Editor is due to

Cecelife

All I can say is congratulations on an amazing piece of software.

Saga Lout.

20th October 2008.