


DiSEqC Positioner



- **DiSEqC 1.0 / 1.2 Receivers Compatible**
- **Work with any Receiver via Optional Remote Control**
- **Compatible with any Actuator or H-H Mount**
- **99 Programmable Memories**
- **Easy Operation and Quick Installation**
- **Fine-tune Function for Better Reception**
- **Anti-Noise Circuit to avoid miscounting**
- **Short Circuit and Overload Protection**
- **Software Limits Protection**
- **Auto Turn-off Function**
- **Re-synchronize Function**

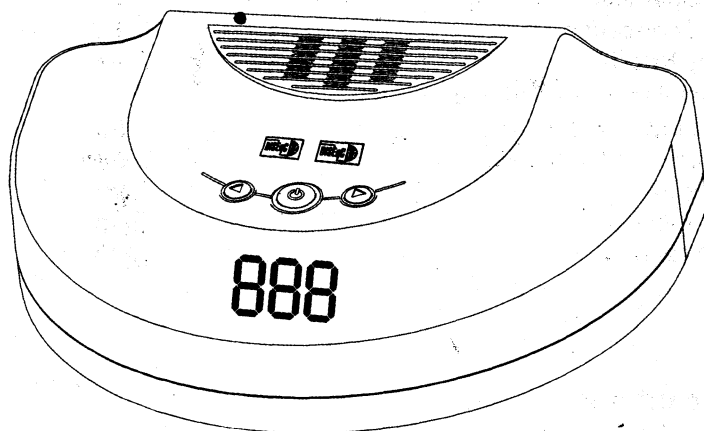

❖ Content

	Page
1 Optional Remote Control v.s. Receiver	P1
2 Basic Operation	P2
3 Cable Connection	P3
4 For any Receiver	P4
Optional Remote Control is necessary	
5 For DiSEqC 1.2 Receiver	P6
6 For DiSEqC 1.0 Receiver	P8
7 Trouble Shooting	P9
8 Quick Table	P10
9 Specification	P10

Safety Precautions

1. The ventilation should not be impeded by covering the ventilation openings with items, such as newspapers, table-cloths, curtains, etc.
2. No naked flame sources, such as lighted candles, should be placed on the apparatus.
3. The apparatus shall not be exposed to dripping or splashing and no objects filled with liquids, such as vases, shall be placed on the apparatus



The DiSEqCTM is a trademark of EUTELSAT.


❖ Optional Remote Control v.s. Receiver

Do you need the optional remote control? It is upon your receiver and how many positions you want. Please check with the following table.

Receiver Type	Remote Control	Positions	Note
DiSEqC 1.2,	No	99	Fully controlled by receiver.
	Yes / Optional	99	Controlled by receiver or optional remote control.
DiSEqC 1.0	No	4	Controlled by receiver.
	Yes / Optional	99	Controlled by receiver or optional remote control.
No DiSEqC	Yes / Necessary	99	Just like stand-alone positioner.


Remote Control

Optional for Receiver
without DiSEqC !!!

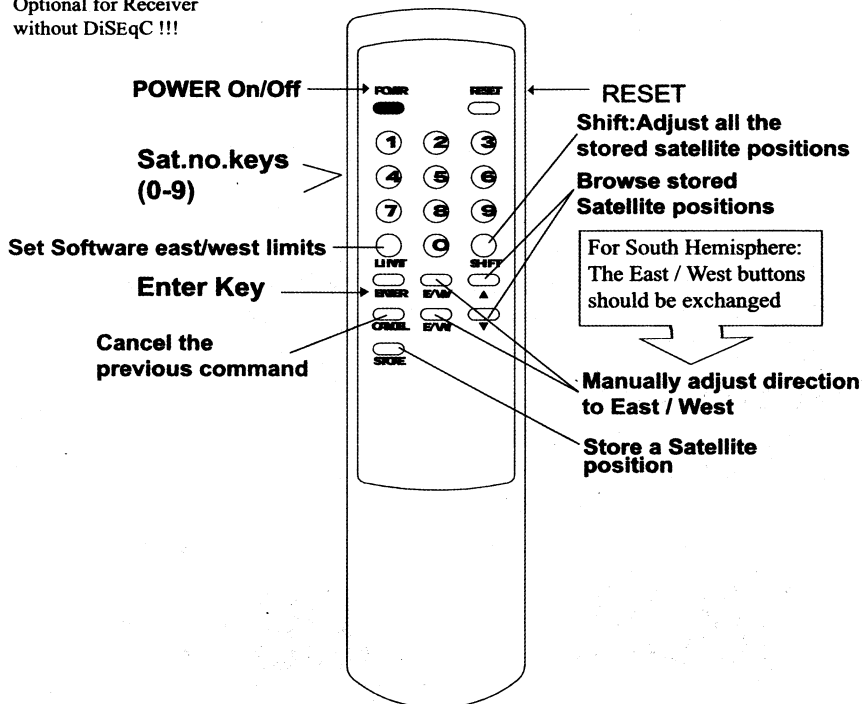


❖ Basic Operation

Front View

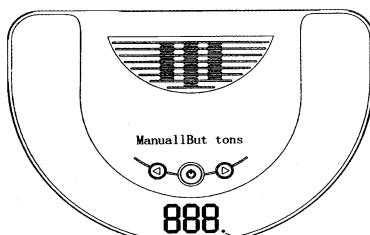


Back View

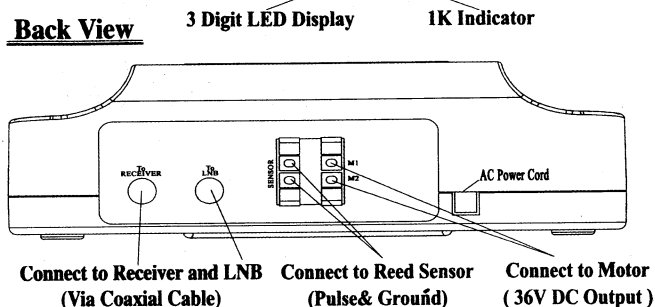

Manual Buttons

For South Hemisphere:
The East / West buttons
should be exchanged.



* 3 Digits LED Display

1. The total pulse count is 2,000.
2. For count 0-999, the lower right dot (1K Indicator) will not light on.
3. For count 1,000-1,999, the lower right dot (1K Indicator) will light on

Count 888



Count 1888




1 K Indicator
Lights on

❖ Cable Connection

1. Connect the Motor to the terminals printed **M1 & M2**, and connect the Reed Switch Sensor to the terminals printed **SENSOR** via Motor Cable.

p.s.: **The wrong connection between Motor & Sensor might damage the Reed Switch Sensor on the Actuator.**

2. Connect one coaxial cable (RG-6/U is recommended) from the receiver to the rear panel of the positioner printed Receiver. Connect another coaxial cable from the positioner to the LNB.
3. Plug the AC Power Cord into the AC outlet. 3 dots of the LED display will light on. Now is the stand-by mode. The power of the Positioner will be turned on / off automatically while the LNB power of receiver is turned on / off.

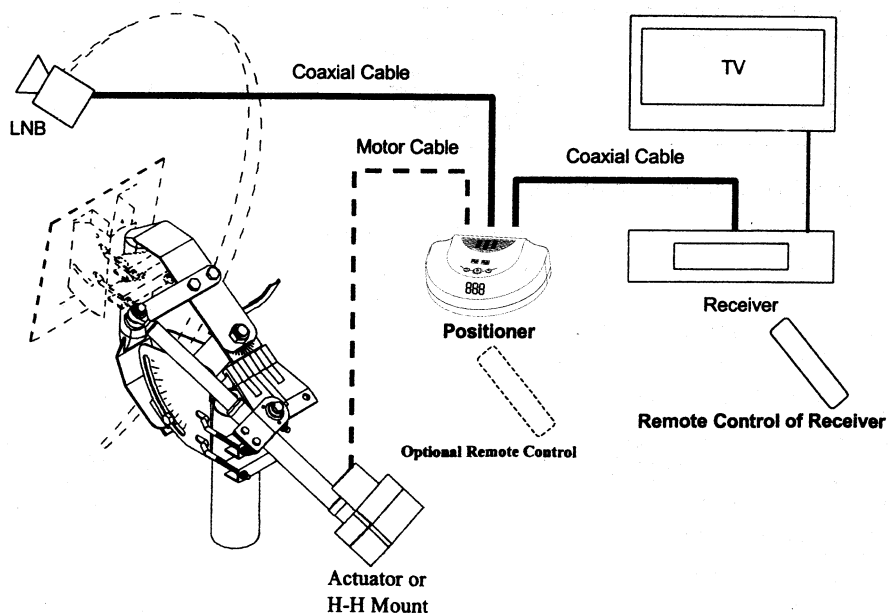


❖ Cable Connection

1. Connect the Motor to the terminals printed **M1 & M2**, and connect the Reed Switch Sensor to the terminals printed **SENSOR** via Motor Cable.

p.s.: **The wrong connection between Motor & Sensor might damage the Reed Switch Sensor on the Actuator.**

2. Connect one coaxial cable (RG-6/U is recommended) from the receiver to the rear panel of the positioner printed Receiver. Connect another coaxial cable from the positioner to the LNB.
3. Plug the AC Power Cord into the AC outlet. 3 dots of the LED display will light on. Now is the stand-by mode. The power of the Positioner will be turned on / off automatically while the LNB power of receiver is turned on / off.

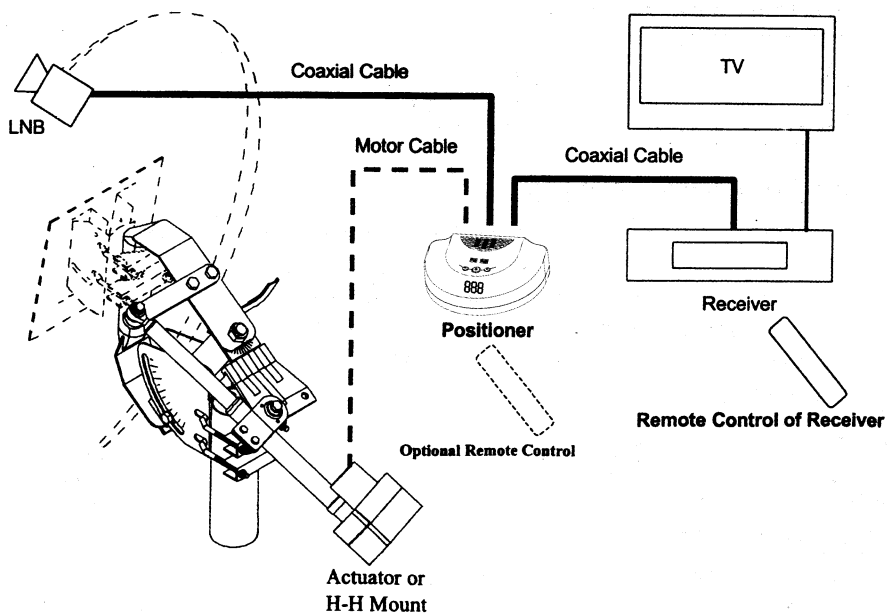


❖ For any Receiver

* Set the Software High / Low Limits:

Setting the software High / Low Limits are recommended for better protection even if there are Hardware Limit Switches on the actuator or H-H mount. However, the Positioner can be operated **without** setting the software High/Low Limits.


1. Drive the Actuator by pressing East / West button to the intended lowest / highest (or East / West) position.
2. Prod **Limit** button on the remote control. The Display will show L.L. or H.L.

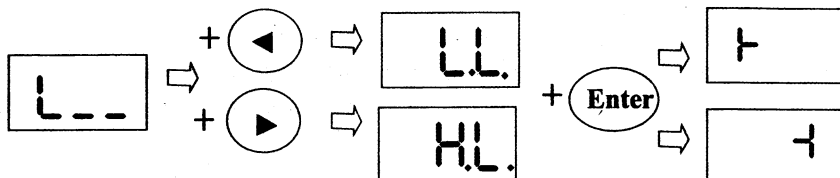

3. Press **East** or **West** button within 3 seconds. The Display will show L.L. or H.L.
Press **Enter** button within 3 seconds.


* Cancel the Software High / Low Limits:

Prod the **Limit** button on the remote control twice, the display will show "L _ _" first then flashy "LoF", press the **Enter** button within 4 seconds to cancel the limits.



* Store the Satellite Positions:

1. Drive the Actuator or H-H mount East / West until the picture on the TV screen is clear.
2. Press Store buttons on the remote control. The Display will show "C _ _".
3. Press no. buttons "1~99" the display will show "C01~C99"
4. Press **Enter** button, the display will show "P01~P99".
5. Repeat Step 1 to 4 to set up all the satellites you prefer.



* Recall a Satellite Position:

1. Simply press **Sat A** or **Sat V** button to browse
OR
2. Input specific position number 1~99 on the remote control and press **Enter** button within 3 seconds, the positioner will drive the actuator to the intended position.
p.s. If the position has not been stored yet, the positioner will ignore this command.


* Re-synchronize Satellite Positions: (Re-Calculate Function)

If **only one** satellite position is not correct, drive the dish to right position and re-store. If all the satellite positions are not correct, then use the re-synchronize function to correct this problem.

1. Recall one Satellite stored in the positioner. The Display will show "**PXX**" (for example "**P03**") for 1 second and then the motor will start moving.
2. After the motor moves, drive the actuator East /West until the picture on the TV for this Satellite is clear for "**P03**".
3. Prod the **Shift** button on the remote control, after the display shows "**ShF**" press **Enter** button within 4 seconds. After setting successfully, the Display will show "**PXX**" again (for example "**P03**").

Notice: If step 1. is skipped, the new position will be shift to **P01**. if P01 is not stored, the position will be shift to count 1,000.

The following is an example:

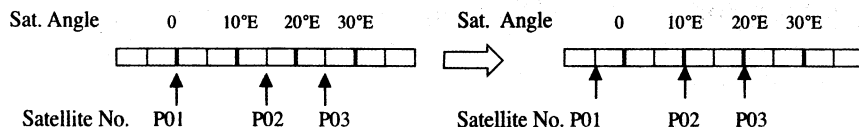


* Hardware Reset:

This function will reset all data in the Positioner, includes High/Low Limits, Satellite Positions, ... , etc.

1. Unplug form the AC outlet. Press the Power button on the top of the positioner and re-plug to the AC outlet. Keep pressing the Power button for 3 seconds. The Display will show 10,9...1, then resset the system. To stop the Reset process,unplug from the ACoutlet before counting to 1.

OR

2. Keep pressing the "Reset" button on the remote control until the positioner finishes counting down from 10 to 1. To stop the Reset process, simply stop pressing the Reset button before the positioner counts down to 1.
If reset has been successfully completed, it will show " ——— " on the LED
After 2 seconds, it shows 000. (count number 1000).




❖ For DiSEqC 1.2 Receiver


The denomination of some commands might be different, but similar. Please refer to the manual of the Receiver.

* Set the Software High / Low Limits:

After sending the commands from the DiSEqC 1.2 receiver, the Display of the positioner will show as below:



Low Limit




High Limit

	Low Limit	High Limit
North Hemisphere	East Limit	West Limit
South Hemisphere	West Limit	East Limit

* Cancel the Software High / Low Limits:

After sending the command from the DiSEqC 1.2 receiver, the Display of the positioner will show "LoF".



* Store the Satellite Positions:

1. Drive the Actuator East / West until the picture on the TV screen is clear.
2. Choose a sat. no. 1 - 99 and then send **Store** command from the receiver.
3. The Display will show "C01~C99" then show "P01~P99".

Repeat Step 1 to 3 to set up all the satellites you prefer

* Recall a Satellite Position:


Change the satellite no. from the receiver, the positioner will drive the actuator to the intended position. However, if the position has not been stored yet, the positioner will ignore the command.

Note: If the Channels and Satellites are well preset on the receiver, it will drive the actuator to the right position while user changes the Channels. After arriving the right position, the Display will show the Satellite no. as "P01" ~"P99".

* Re-synchronize Satellite Positions: (Re-Calculate Function)


1. Recall one Satellite stored in the positioner. The Display will show "PXX" (for example "P03") for 1 second and then the motor will start moving.
2. After the motor moves, drive the actuator East /West until the picture on the TV for this Satellite is clear for "P03".
3. Send **Shift** command (or rs-calculate) from the DiSEqC 1.2 receiver.
4. After setting successfully, the Display will show "PXX" again (for example "P03").
The position PXX is shift to a new position.

Notice: If step 1. is skipped, the new position will be shift to P01. If P01 is not stored, the position will be shift to count 1,000 (The middle point of the Positioner).

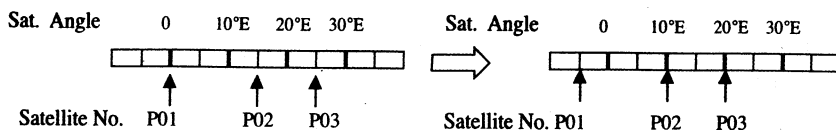

* Go to the mechanical Position 0 (Operate by Receiver only):

1. **Before using this function, please make sure the mechanical limit switches of the actuator or H-H mount are well adjusted in order to avoid any damage or injury.**
2. Send "reset" or "Goto 0" command from the receiver. The positioner will drive the motor toward East. If the motor goes to the wrong direction, just reverse the 2 wires connecting currently to **M1** & **M2** on the positioner. The counts on the LED display will be decreased until the motor stops due to the mechanical limit switch, then the Display will show "Er2" first then "000" which indicates the mechanical 0 position of the Actuator.

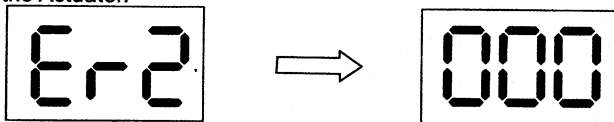

3. If the satellite positions are lost due to some reasons (for example: lost count or replace new sensor), this function can help to recover all the stored positions.

* Hardware Reset:

This function will reset all data in the Positioner, includes High/Low Limits, Satellite Positions, etc.

Unplug from the AC outlet. Press the Power button on the top of the positioner and re-plug to the AC outlet. Keep pressing the Power button for 3 seconds. The Display will show 10,9 ... 1, then reset the system. To stop the Reset process, unplug from the AC outlet before counting to 1.

❖ For DiSEqC 1.0 Receiver

1. For DiSEqC 1.0 Receivers, they can control up to 4 positions.

Position	1	2	3	4
Sat.	1	1	2	2
LNB	A	B	A	B

The table is for your reference only. The operation might be different for different receivers. For example, some receivers call position 1 ~ 4 as **LNB: DiSEqC A, B, C, D**. Please refer to the manual of your receivers.


2. In order to avoid confusion, the positioner will ignore the DiSEqC 1.0 commands after receive the DiSEqC 1.2 commands. It can recognize the DiSEqC 1.0 commands again after unplug from AC for more than 5 seconds.
3. The optional Remote Control is not necessary for DiSEqC 1.0 receivers. However, the optional Remote Control is strongly recommended for the following reasons: 1) Easier Operation. 2) More positions from 4 to 99.

The following is the operation without remote control. If you have the optional remote control, please refer to chapter ❖ **For any Receiver**

* **Store the Satellite Positions:** Operate via the 3 Manual buttons

1. Drive the Actuator East / West via the manual East / West until the picture on the TV screen is clear.
2. Press the Power / Store button for 5 seconds, the LED will show "C01".
3. Press Up / Down buttons to choose the sat. no. you want to store: C01 ~ C99.
4. Press Store button for confirmation within 3 seconds, the LED will show P01 ~ P99.

Manual Buttons



Repeat Step 1 to 3 to set up all the satellites you

prefer. However, for DiSEqC 1.0 receivers, only 4 positions can be used.

* **Recall a Satellite Position:**

Change the DiSEqC 1.0 setting of the channels. The positioner will drive the dish to the right Satellites while you change the channel. The Display will show "P01" ~ "P04"

* **Hardware Reset:**

This function will reset all data in the Positioner, includes High/Low Limits, Satellite Positions, ..., etc.

Unplug from the AC outlet. Press the Power button on the top of the positioner and re-plug to the AC outlet. Keep pressing the Power button for 3 seconds. The Display will show 10, 9 ... 1, then reset the system. To stop the Reset process, unplug from the AC outlet before counting to 1.

❖ Troubleshooting

Symptoms	Check points
Can't work with DiSEqC 1.0 Receiver	<ol style="list-style-type: none"> 1. Make sure position no.1 to 4 are stored. 2. After receive DiSEqC 1.2 commands, the DiSEqC 1.0 commands will be ignored. Please operate the positioner by DiSEqC 1.2 which is much better for motorization system.
Can't move to count less than 0 or more than 999	<p>The total count of this Positioner is 2000(0- 1999), which is enough for most of the application.</p> <p>Use"Goto Position 0" Function to solve.</p>
The Stored Positions are not correct.	<ol style="list-style-type: none"> 1. Try to use the "Re-synchronize function" to correct the position first. 2. If it happens again and again, please replace the Reed Sensor to check if the Sensor is stable.
The LED shows I- or -I, and can't move more.	<p>The symbols mean Electrical Limits, which have been set. If you want to cancel this setting, use the "Limit Off Function" from the receiver. And set the software limit again.</p>
Er1 Message (Over Current) Or System Shut-down	<ul style="list-style-type: none"> ● Make sure there is no short-circuit of the wire connection. ● Check if the Antenna is blocked by anything. ● Make sure the Motor works well. Some times a malfunction Motor can cause higher current. ● Maybe the Antenna is too heavy. Please try to use our high-power version.
Er2 Message(No Pulses)	<ul style="list-style-type: none"> ● Re-check the wire connection. ● Make sure the actuator is not stopped by Mechanical Limit. ● Check if the Reed Switch Sensor is broken. ● Check if the Motor is broken.
Er3 / Er4 Message (Internal Error)	<ul style="list-style-type: none"> ● Reset the positioner
Only the LED lights on and the Positioner doesn't work. (No response)	<ul style="list-style-type: none"> ● Unplug the AC Power Cord from the AC outlet. Wait for more than 10 seconds then re-plug. ● This problem might be caused by the unstable AC power. In order to protect the stored data, the Positioner will lock itself under this situation. A voltage regulator might help.
Turn-Off Automatically	<p>The Display will be turned-off while LNB power is off.</p>
Can't be Turned-off by optional Remote Control or manual Power button.	<p>If the LNB power of receiver is switched-on, the positioner can't be turned-off.</p>

❖ Quick Table for Optional Remote Control



Key on Remote Control



Button on Positioner

- Power ON/OFF:** or
- Manual East/West:** E or W OR or
- Set Software Limit:** E or W to intended lowest / highest position, + + E or W +
- Cancel Software Limit:** + +
- Store Satellite Positions:** E or W to the Position you want, press then Input Sat. No. ~ +
- Recall a stored position** (1) SAT or SAT (2) Press Sat.No. key ~ +
- Shift Function:** Recall a stored position 1~99 + E or W to better position + then LED shows "ShF", + then LED shows P01-P99
- Reset/Clear All Memories:** (1) keep pressing for 10 seconds. The motor will go to 0 position and the software limits will be canceled. (2) Unplug from the AC outlet. Press and re-plug to the AC outlet keep pressing the Power button for 3 seconds.
- Interruption:** Press to STOP the Motor.

❖ Specification

Input Voltage	: 180-240 VAC 50Hz 13 / 18 VDC (F Type via Coaxial Cable)
Output Voltage	: 13 / 18 VDC (F Type / According to the Input) 36VDC (via Motor Cable)
Maximum Current	: 2.2A / 3.5A for "High Power Version"
Power Consumption	: Standby: 5W Max.: 70W (Max.) / 100W for "HighPower Version"
Position Memories	: 99 / 8 / 4
Protocol	: DiSEqC 1.2/ 1.0
Remote Control	: IR (Optional)
Operating Temperature	: 5°C to 40°C (41° F to 104 ° F)
Storage Temperature	: -20 °C to 60 °C (-4° F to 140 ° F)
Dimensions(WxHxD)	: 80x70x230mm ³ (Net)/ 200x75x240 mm ³ (Gross)
Weight	: 1.1Kg(Net)/1.3Kg(Gross)

All Specification might be changed without prior notice.